
HAWORTH


Hop


Assembly Instructions


Screens

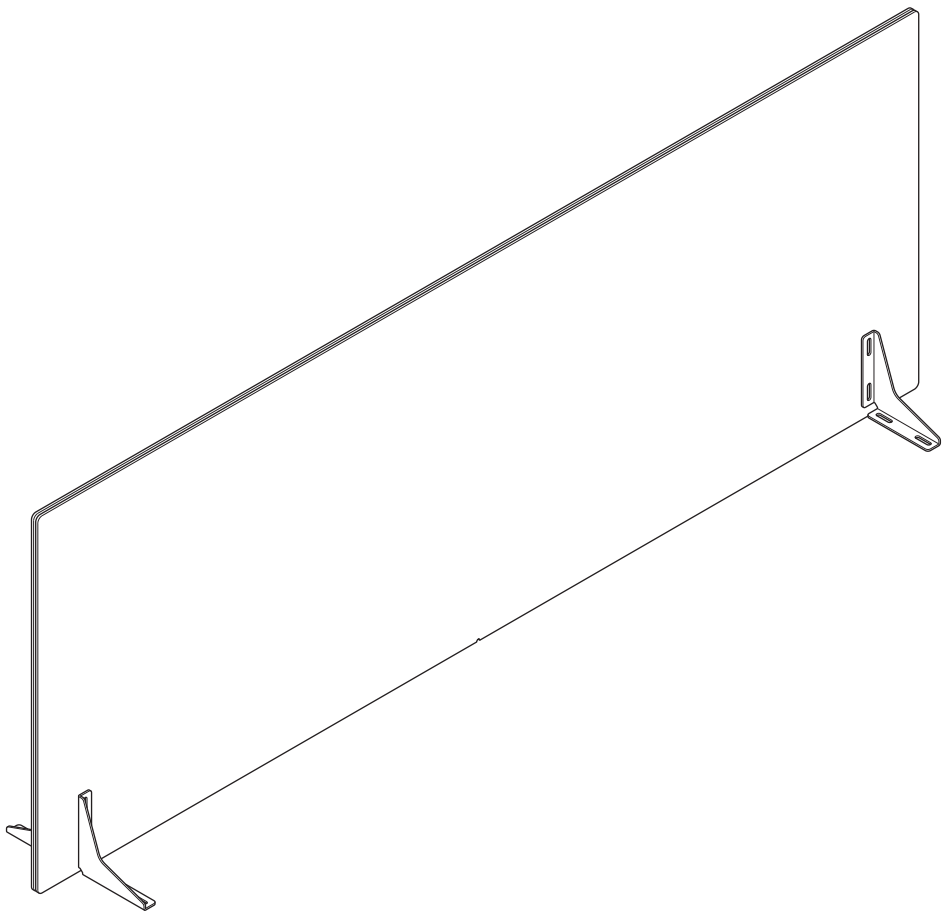

Tools Required

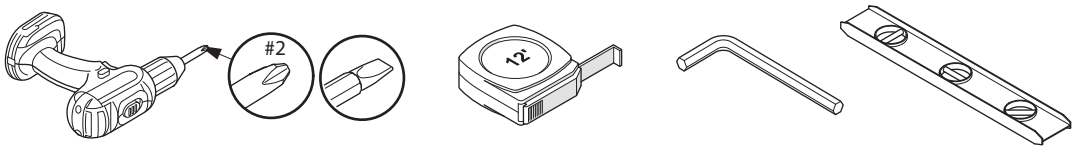

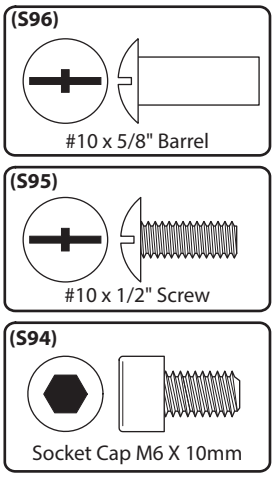


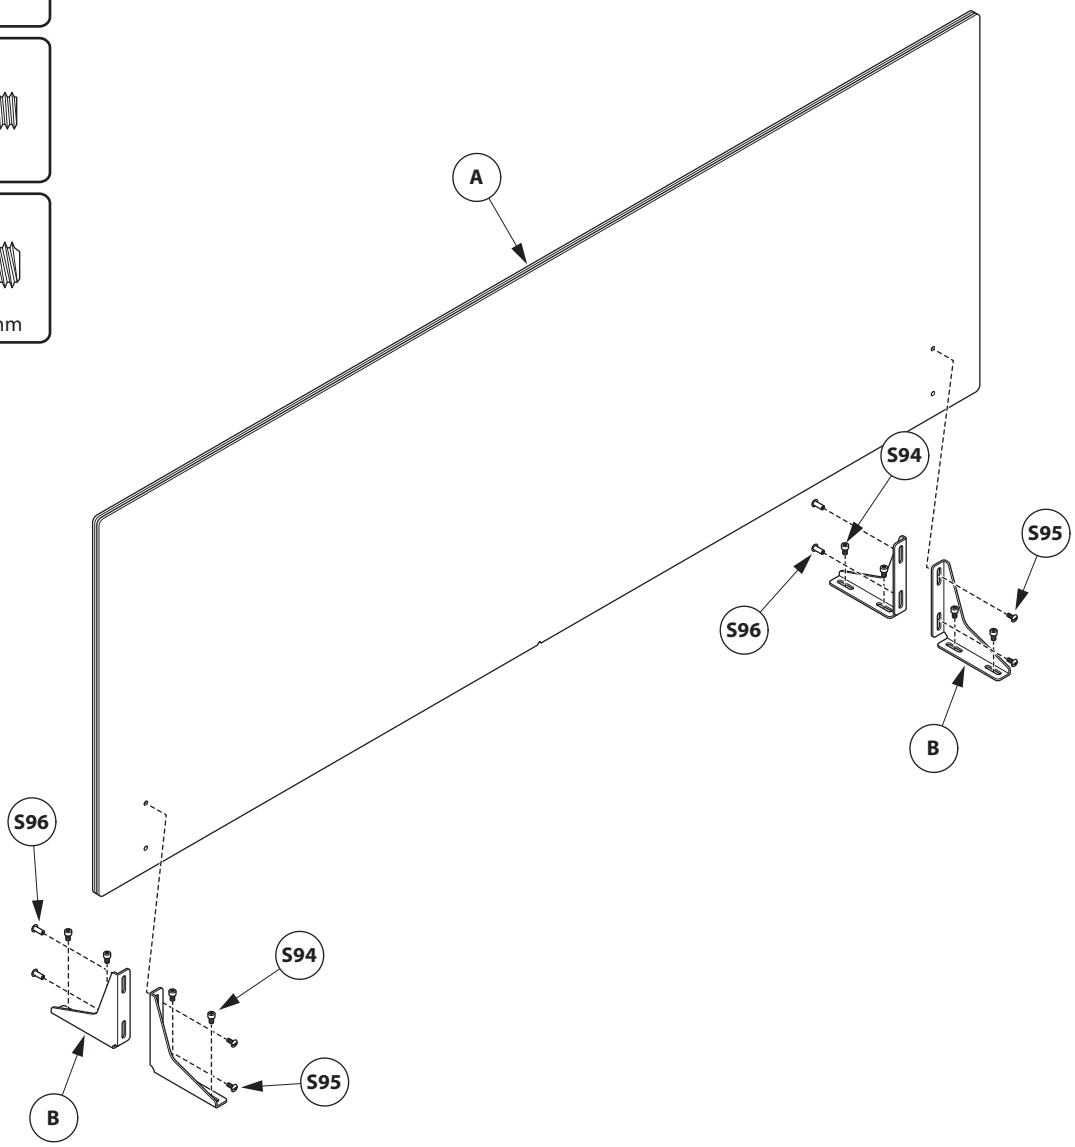

1

(S94)

Socket Cap M6 X 10mm

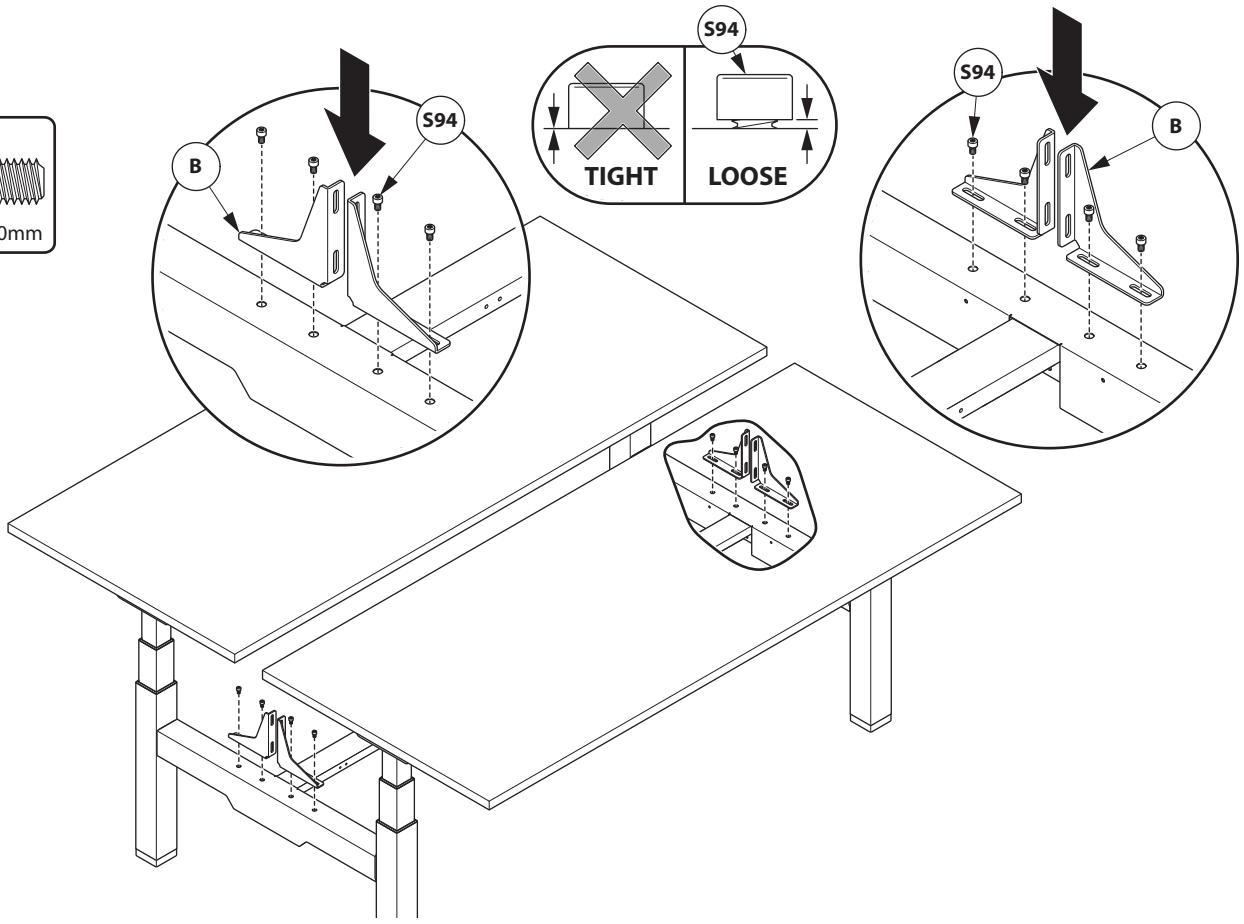

2

(S96)

#10 x 5/8" Barrel

(S95)

#10 x 1/2" Screw

