
HAWORTH

Planes Column Base


Assembly Instructions

Congratulations on your purchase of a new Planes Column Base


Laminate Column Base

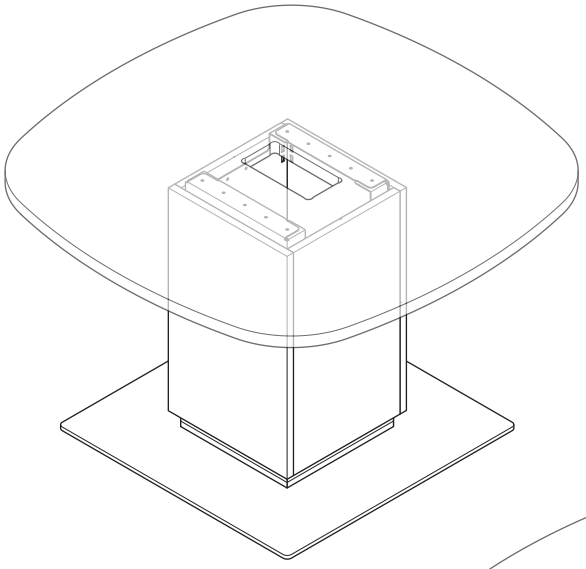


Round Column Base

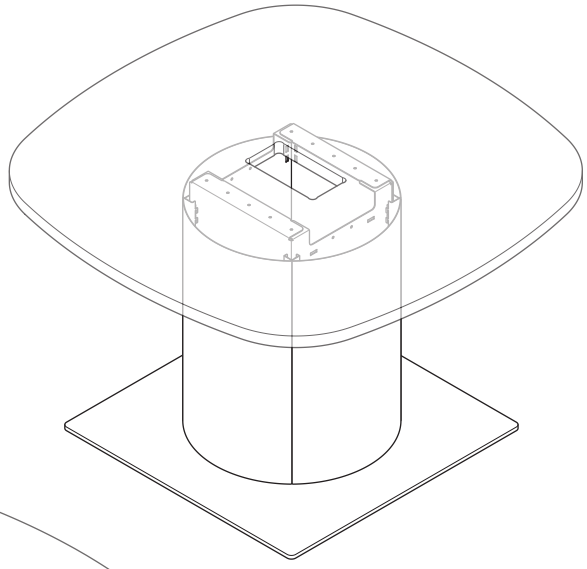


Flat Column Base

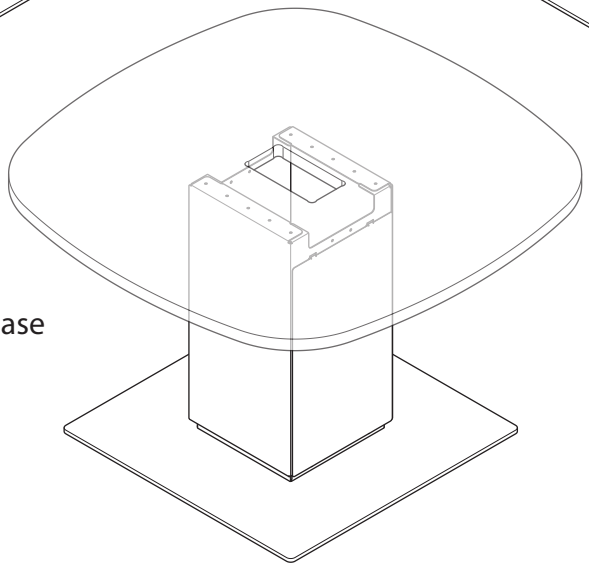


Tools Required

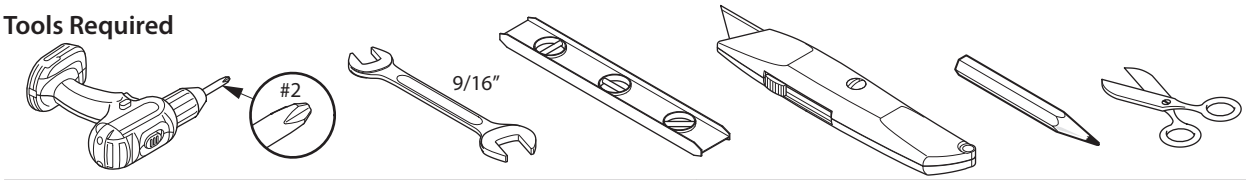


J-CHANNELS

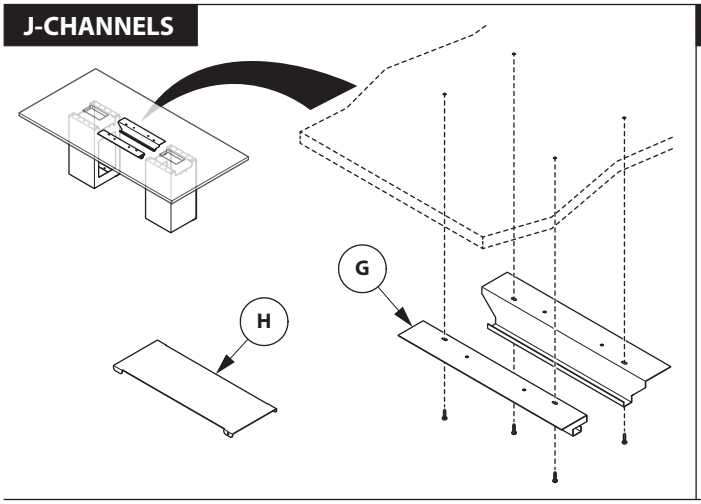


FLAT BRACKETS

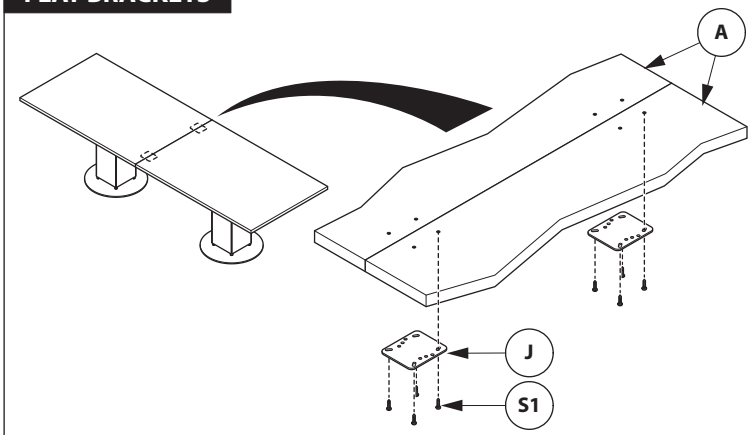


Assembly Overview

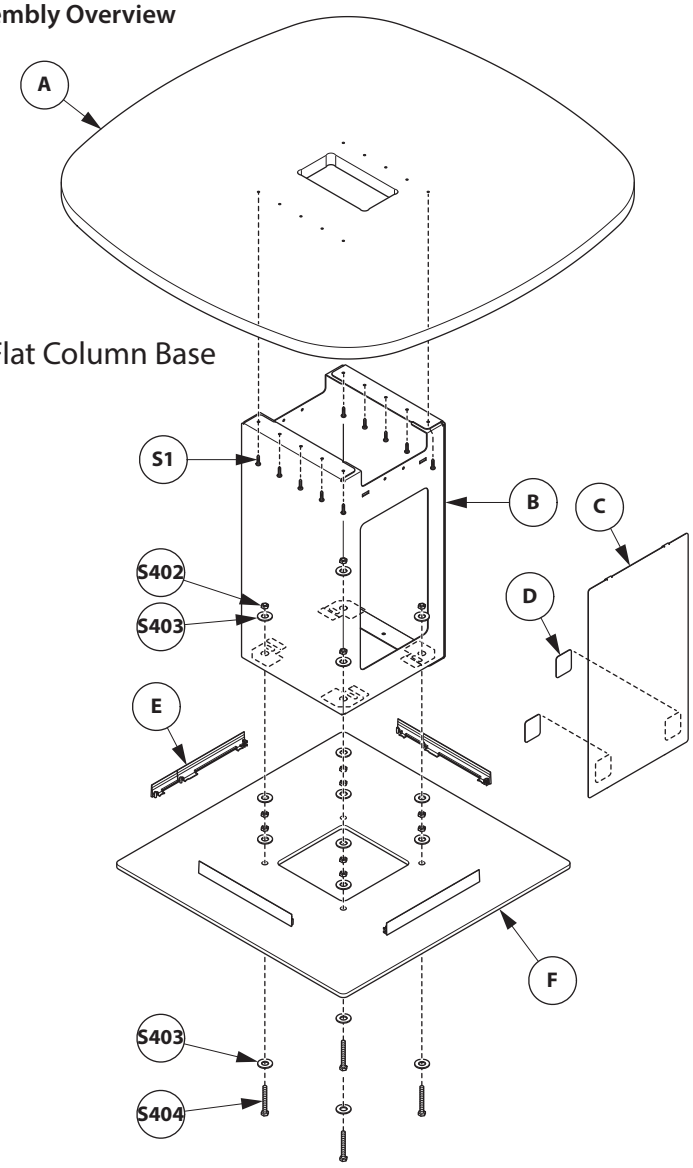


Laminate Column Base

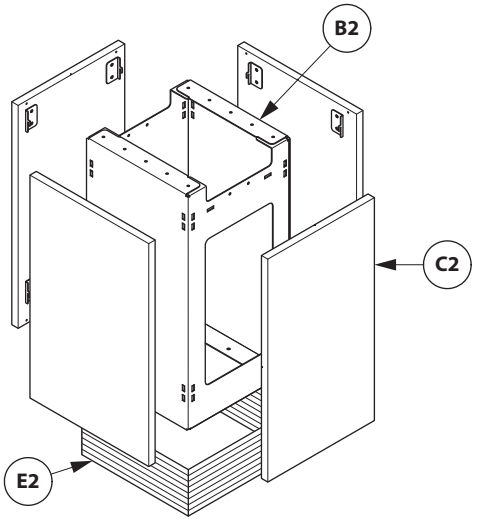


Round Column Base

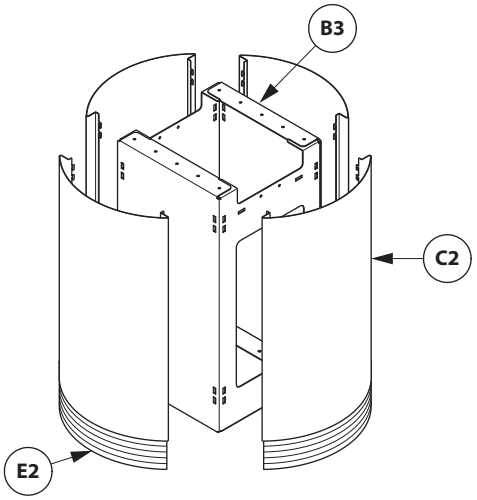


(A) Top - Qty. 1

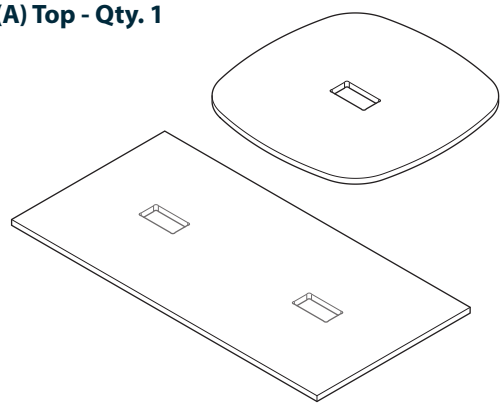


(F) Base - Qty. 1

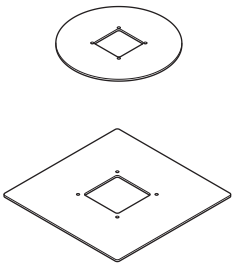

(E) OR (E2) Trim - Qty. 4

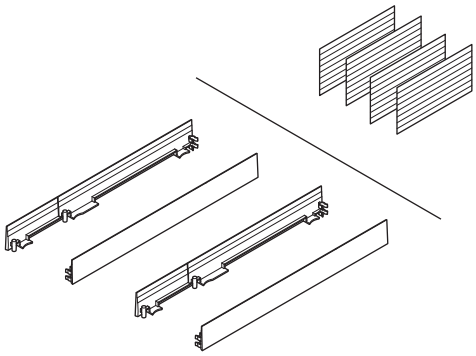


(B) Flat, Base - Qty. 1

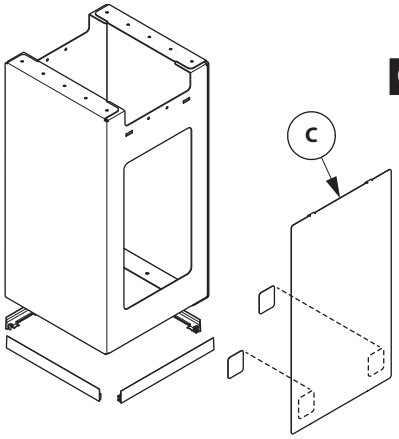


OR

(B2) Laminate, Base - Qty. 1

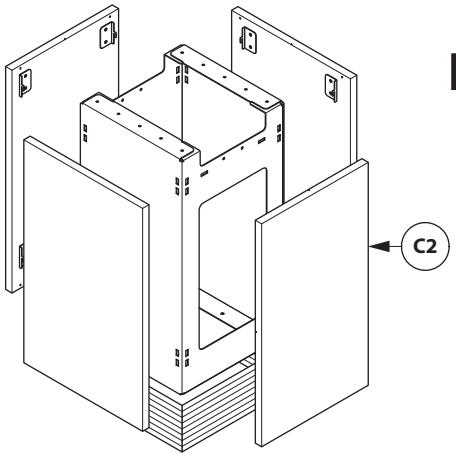


OR


(B3) Round, Base - Qty. 1

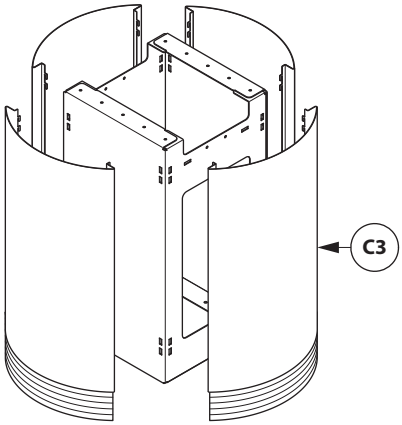


(G) Optional, J-Channel - Qty. 2

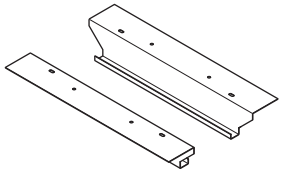


(H) Optional, J-Channel Cover - Qty. 1




(J) Optional, Tie Plate - Qty. 2

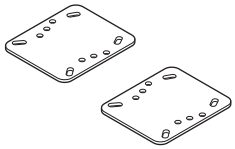


(K) Optional, Power - Qty. 1

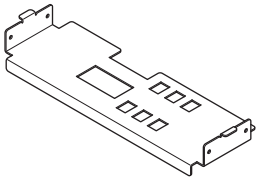


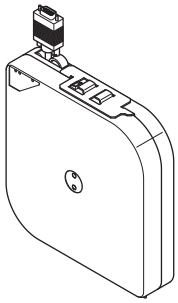


(S1) Pan Head Screws #10 x 1" - Qty. 10




(S403) 3/8" Flat Washer - Qty. 16

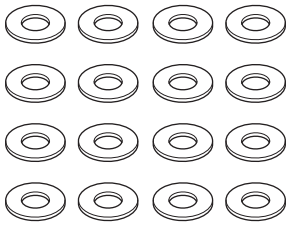

(S404) 3/8-16 x 3" Hex Head Bolt - Qty. 4

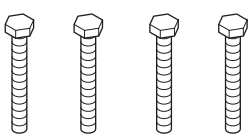



(S402) 3/8" Hex Nut - Qty. 12

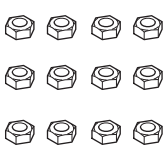


COLUMN BASE PLATE ASSEMBLY


1 Install base (F) as shown

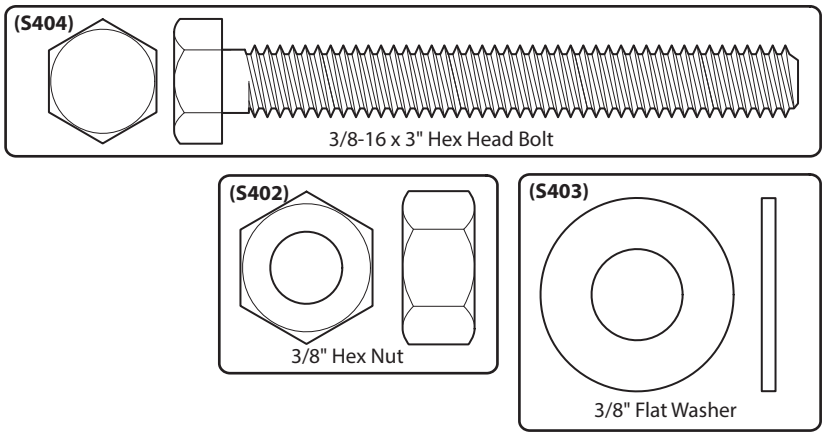


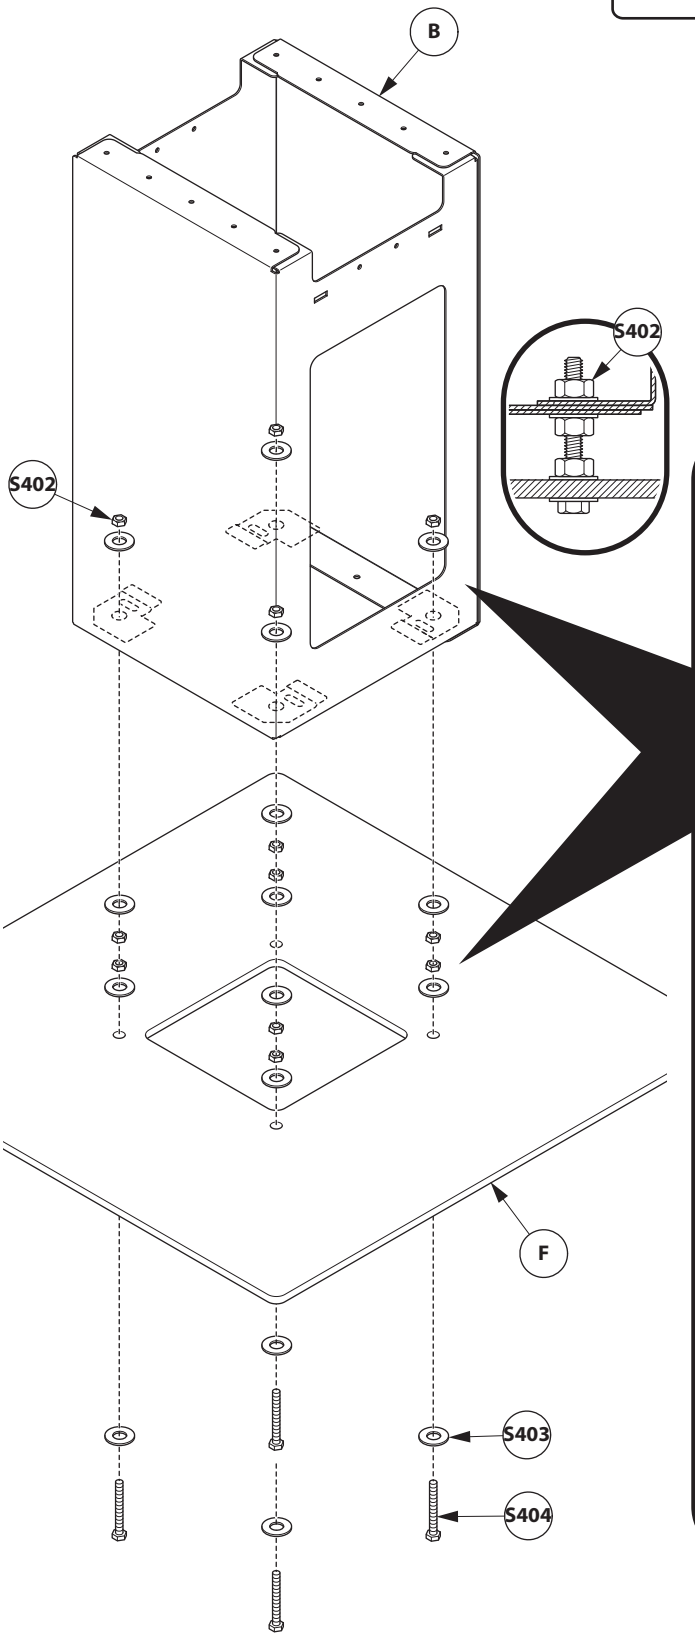


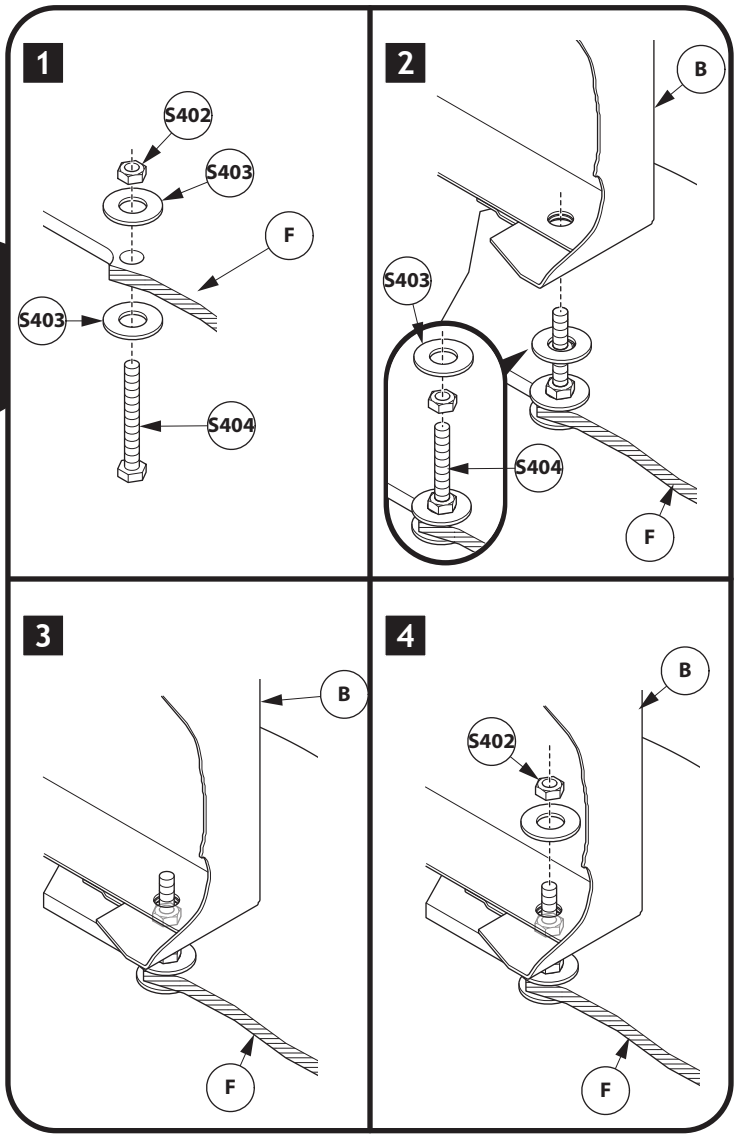


2 Install top (A) as shown

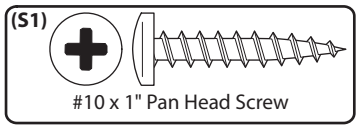

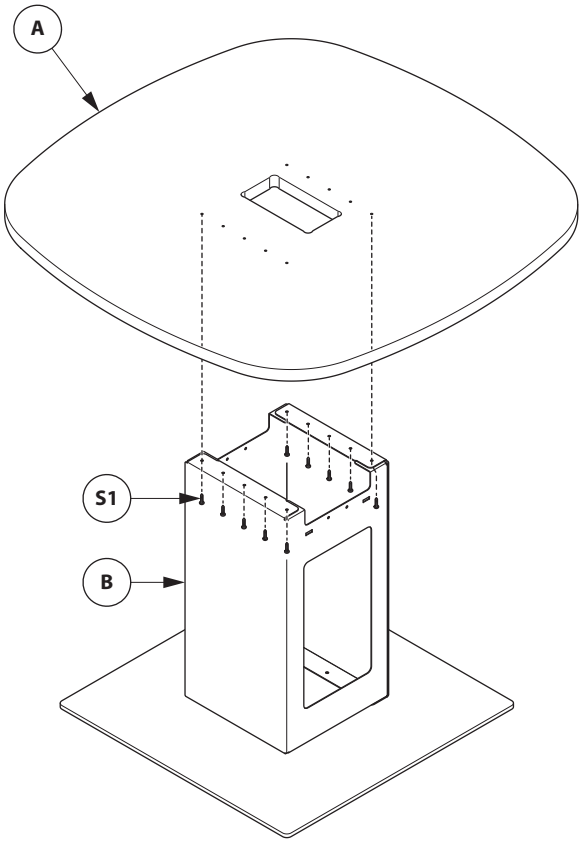

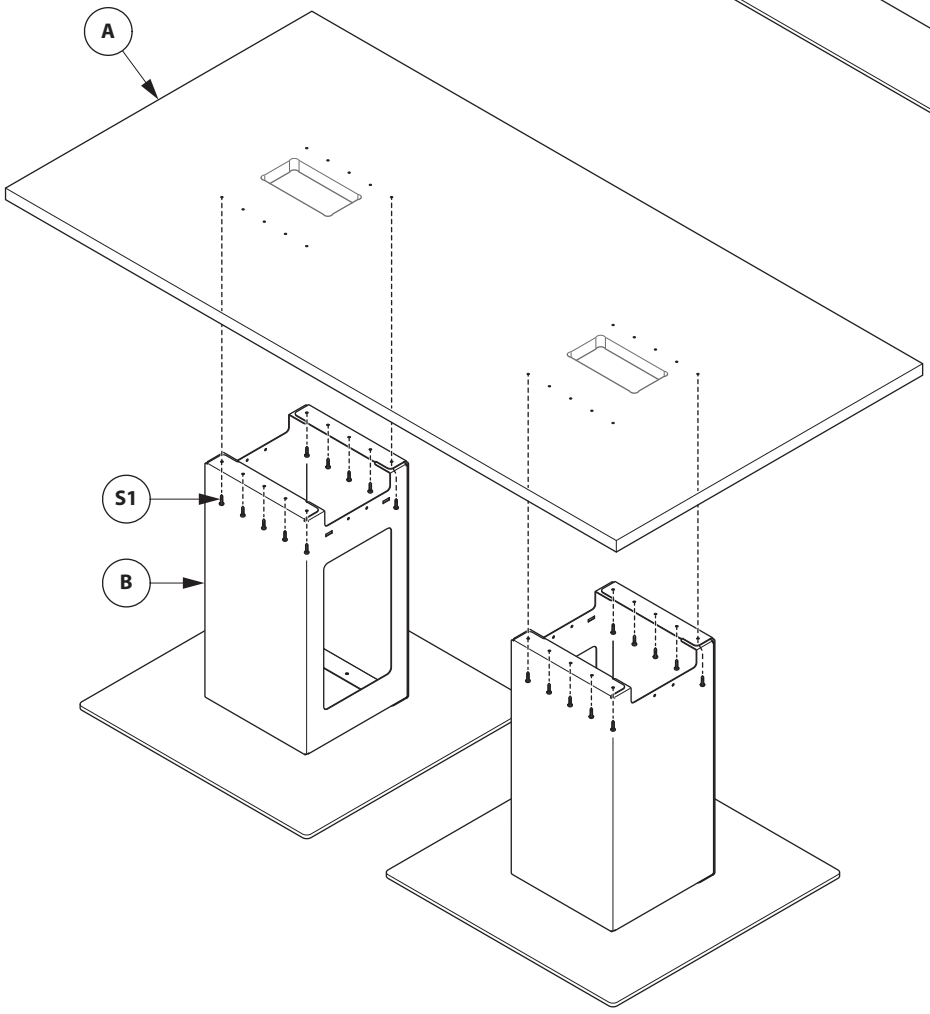


3 Level top (A) as shown

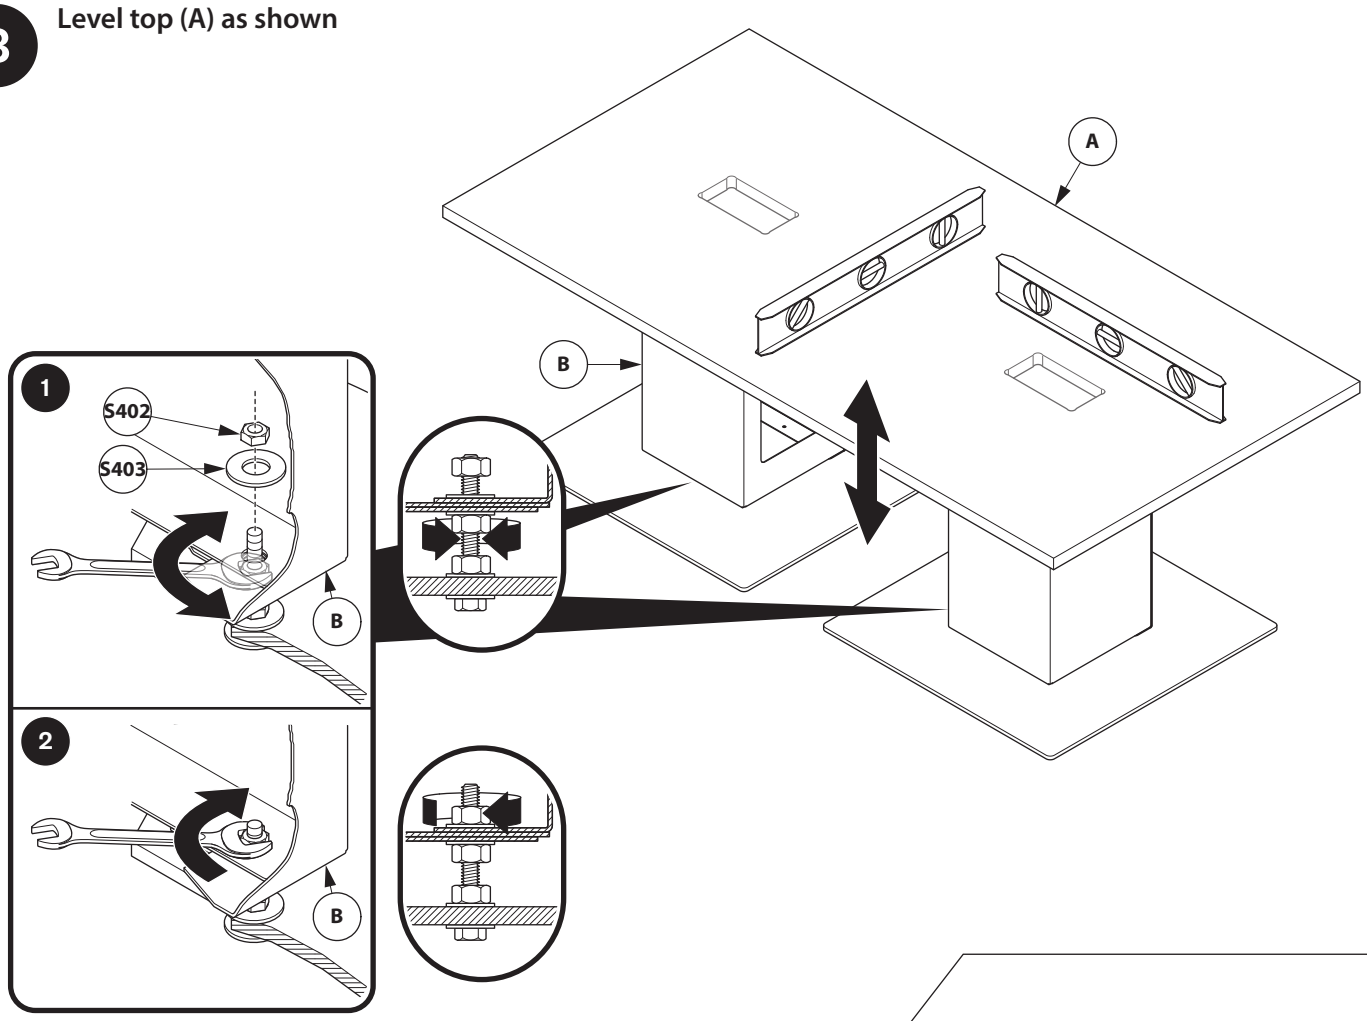


4A Modify trim (E) to size then install trim (E) as shown


NOTE: Cut trim to height if needed.


FOR 12" BASE

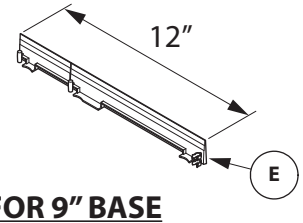


FOR 9" BASE

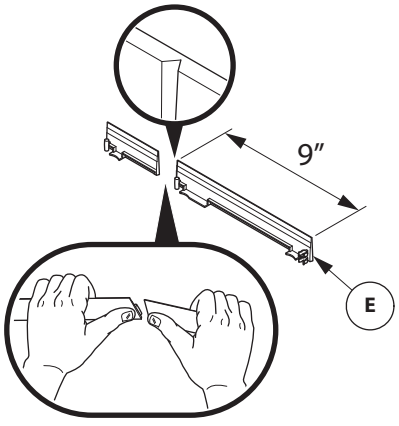


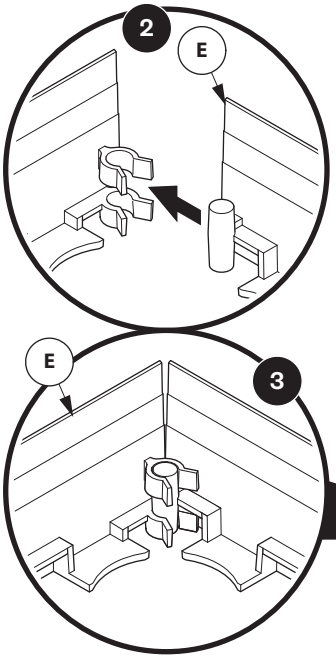

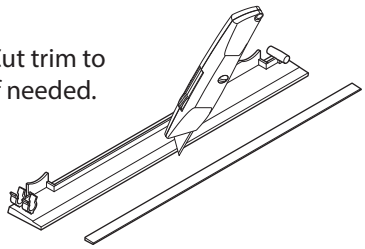


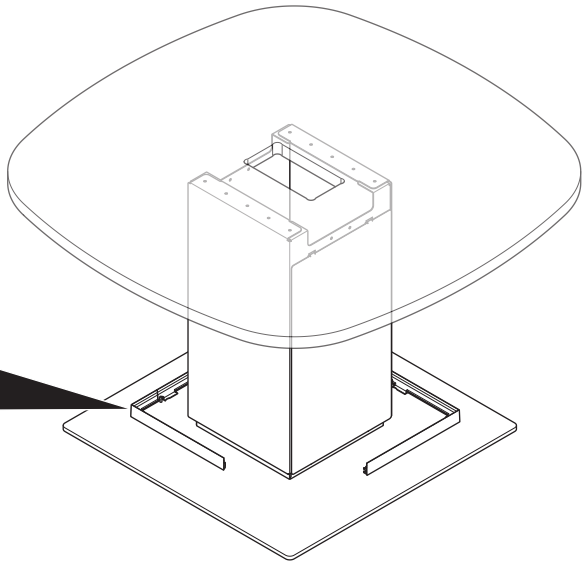

4B Install trim (E) as shown

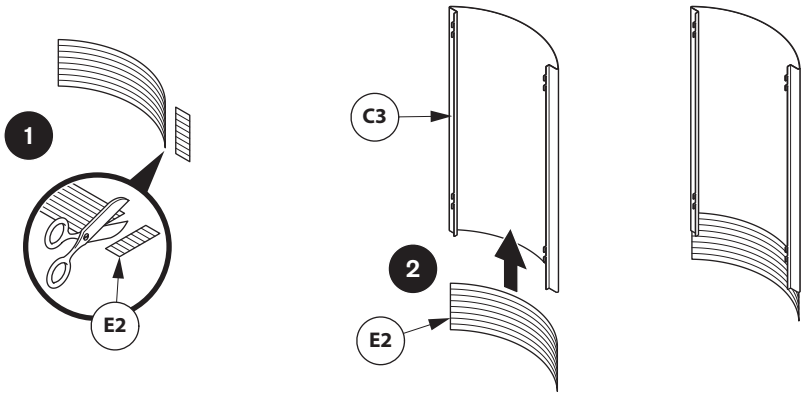



5 Install panels (C) as shown

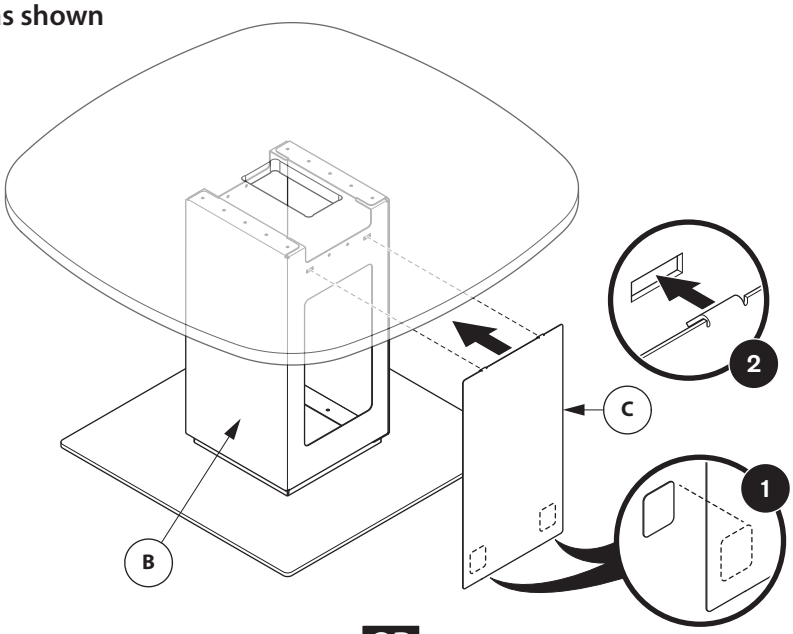

NOTE: Install magnets near the bottom as shown.


OR

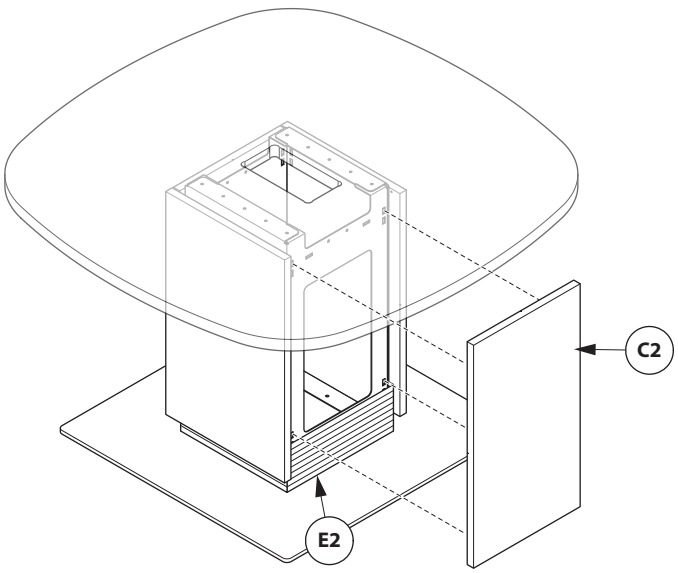


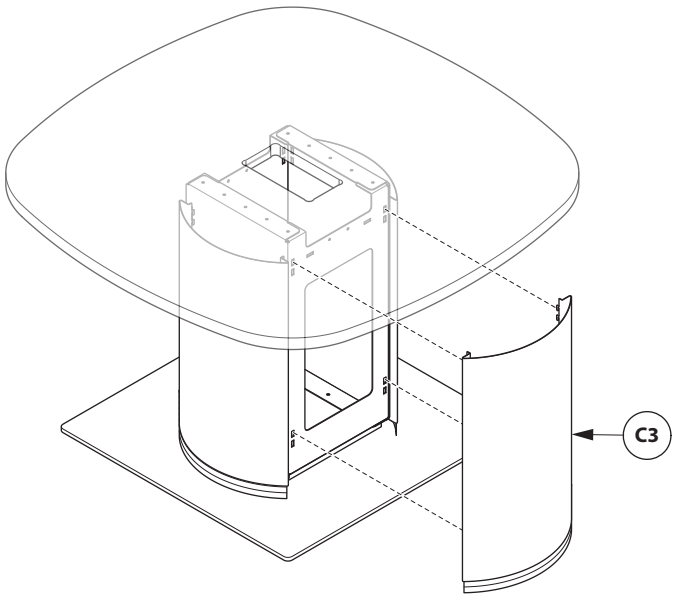

J-CHANNELS

6 Install J-channels (G) with cover (H) as shown

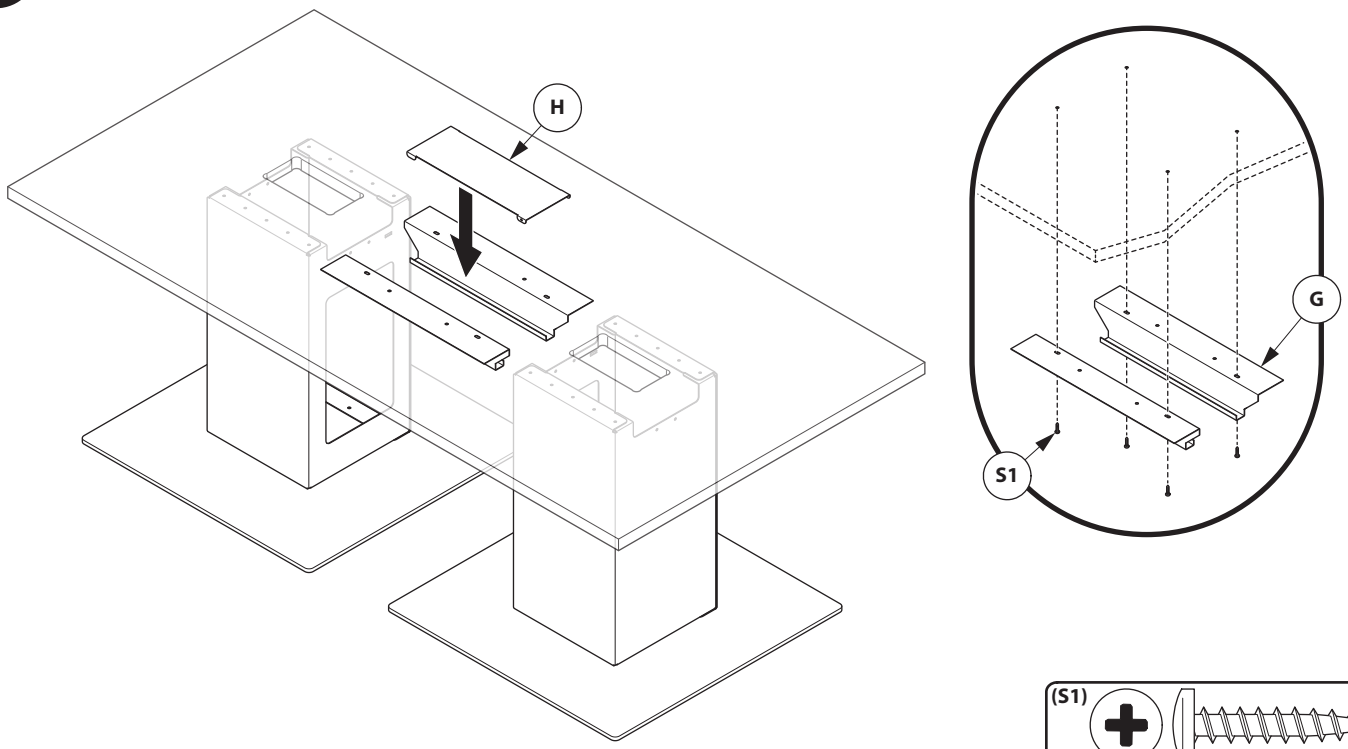

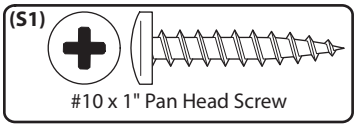

FLAT BRACKETS

7 Install flat brackets (J) as shown

