

HAWORTH

PopUp

Assembly Instructions


Tables

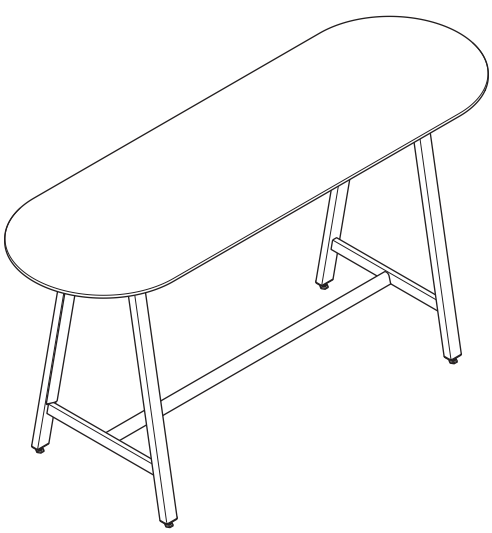


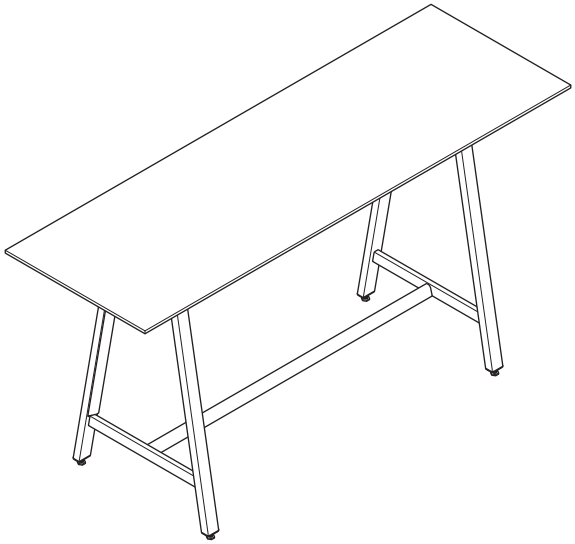





Tools Required

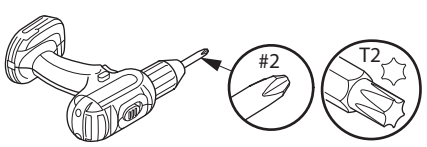


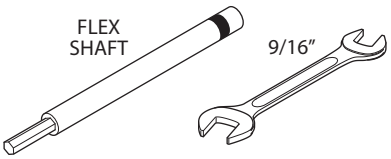








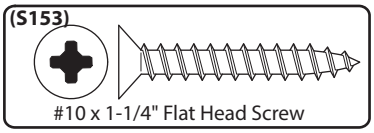


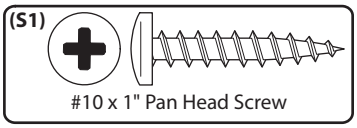


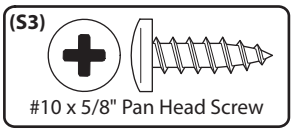


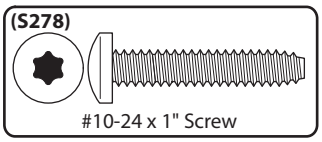

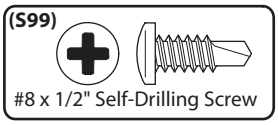

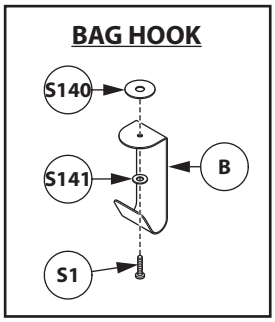

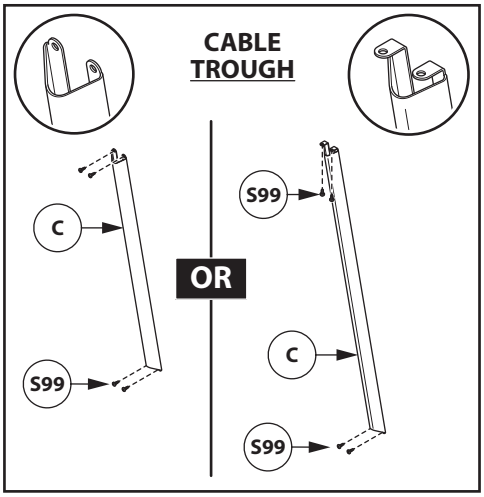

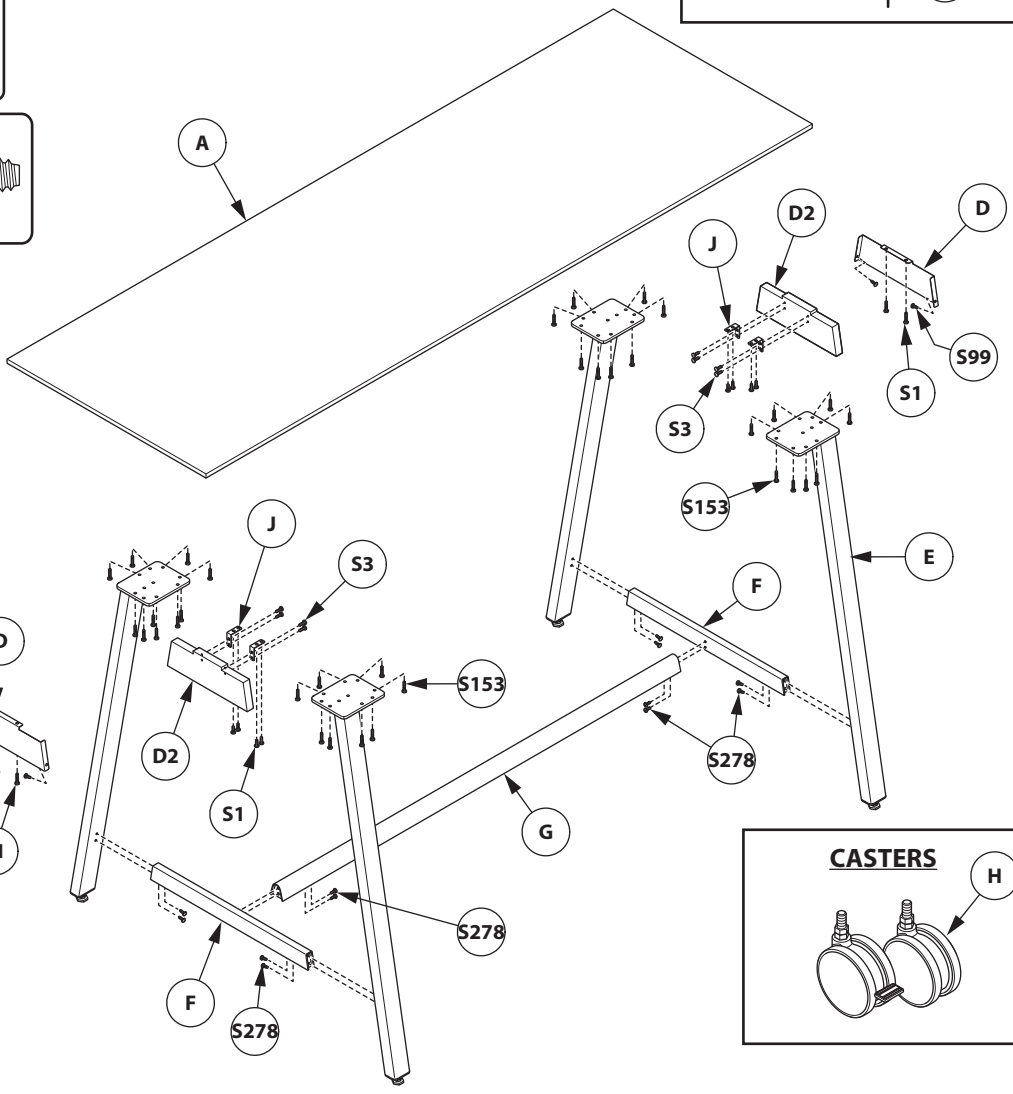


1a

(S232)

#10 x 1" Flat Head Screw

⚠IMPORTANT

TIGHTEN CASTER NUT TO BOTTOM OF LEG AS SHOWN!

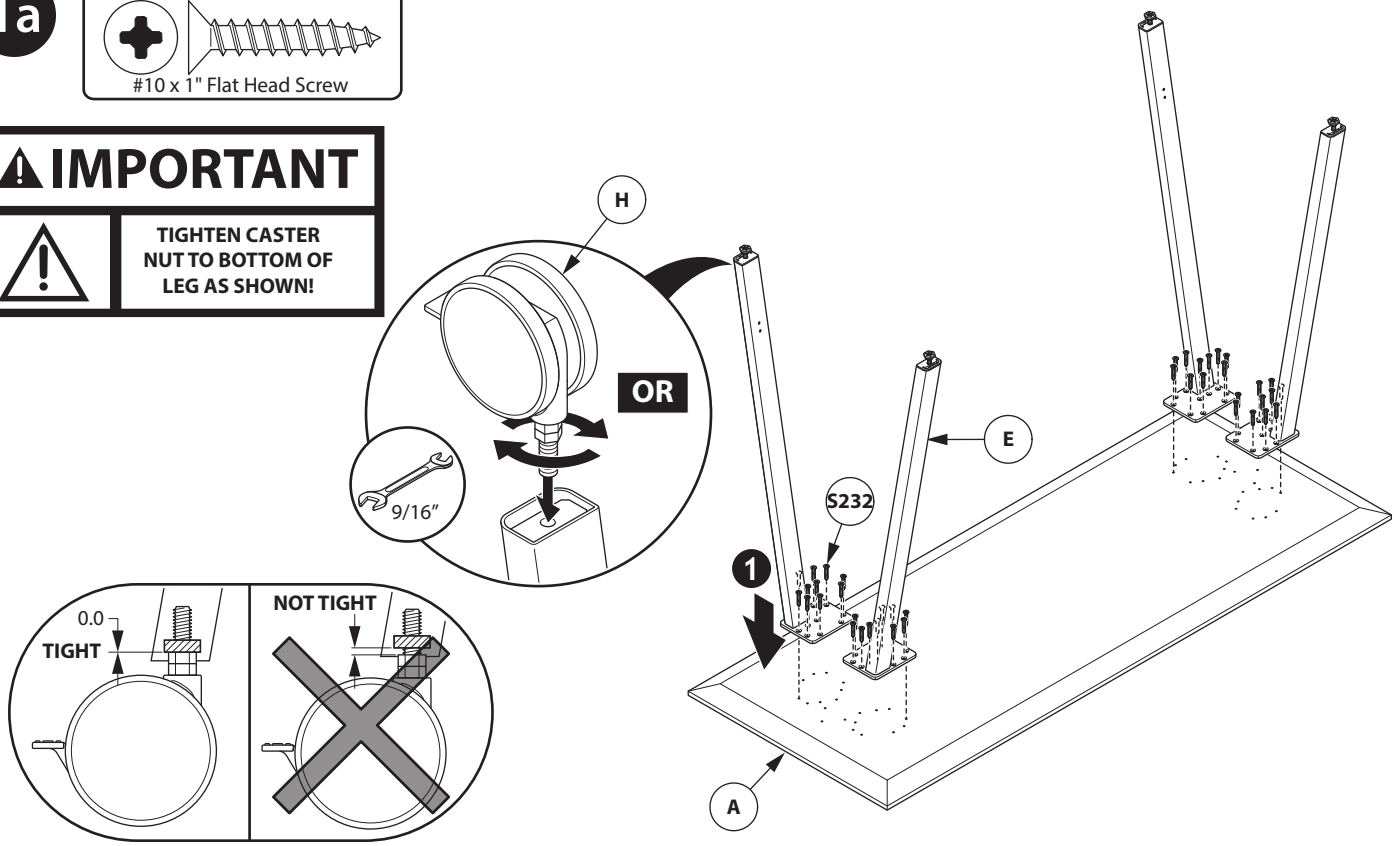


OR

1b

⚠IMPORTANT

TIGHTEN CASTER NUT TO BOTTOM OF LEG AS SHOWN!

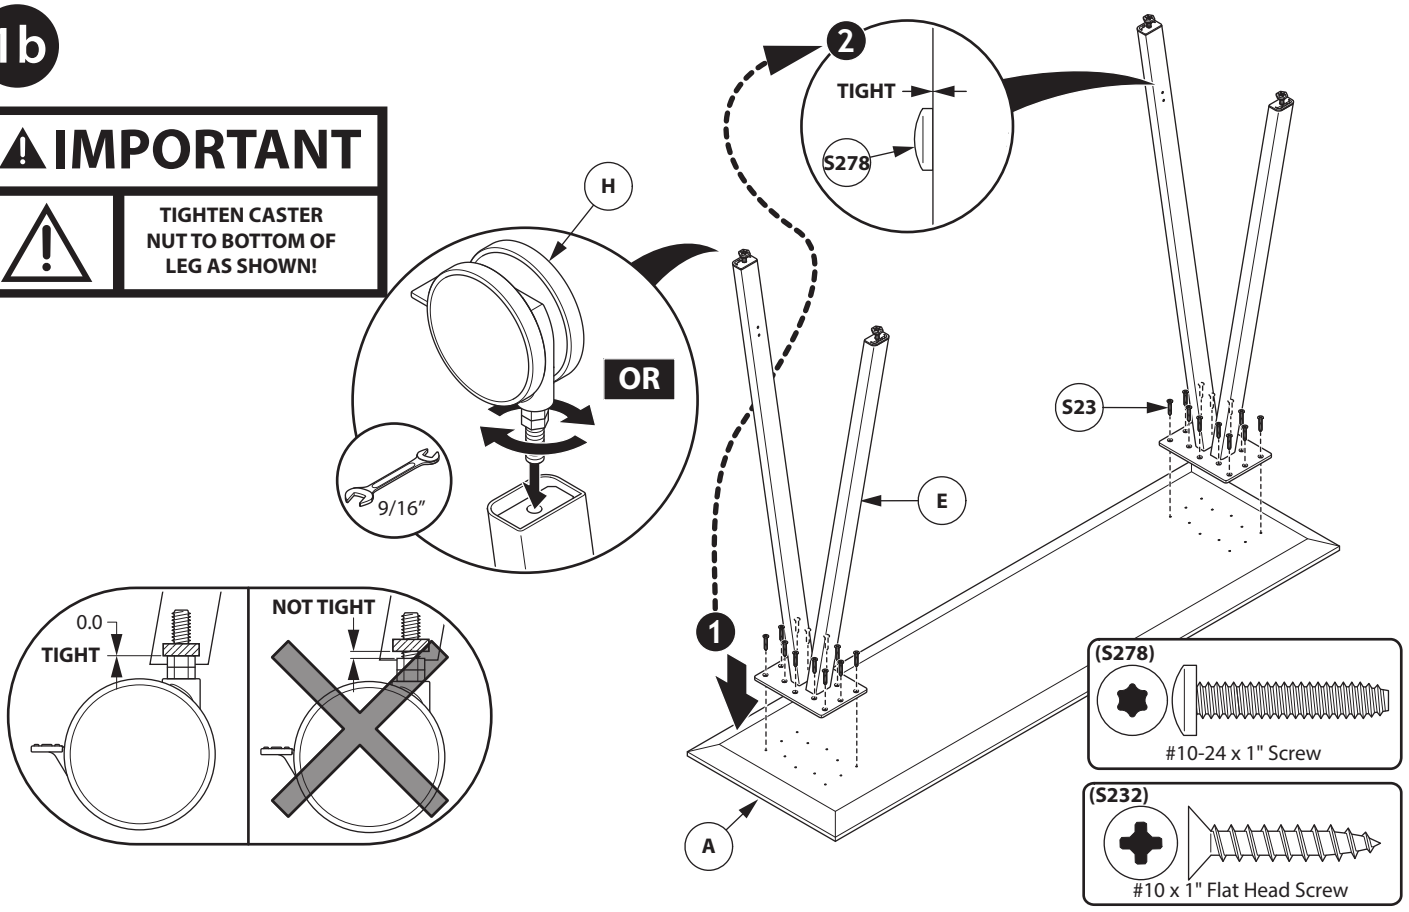


(S278)


#10-24 x 1" Screw

(S232)

#10 x 1" Flat Head Screw


2a

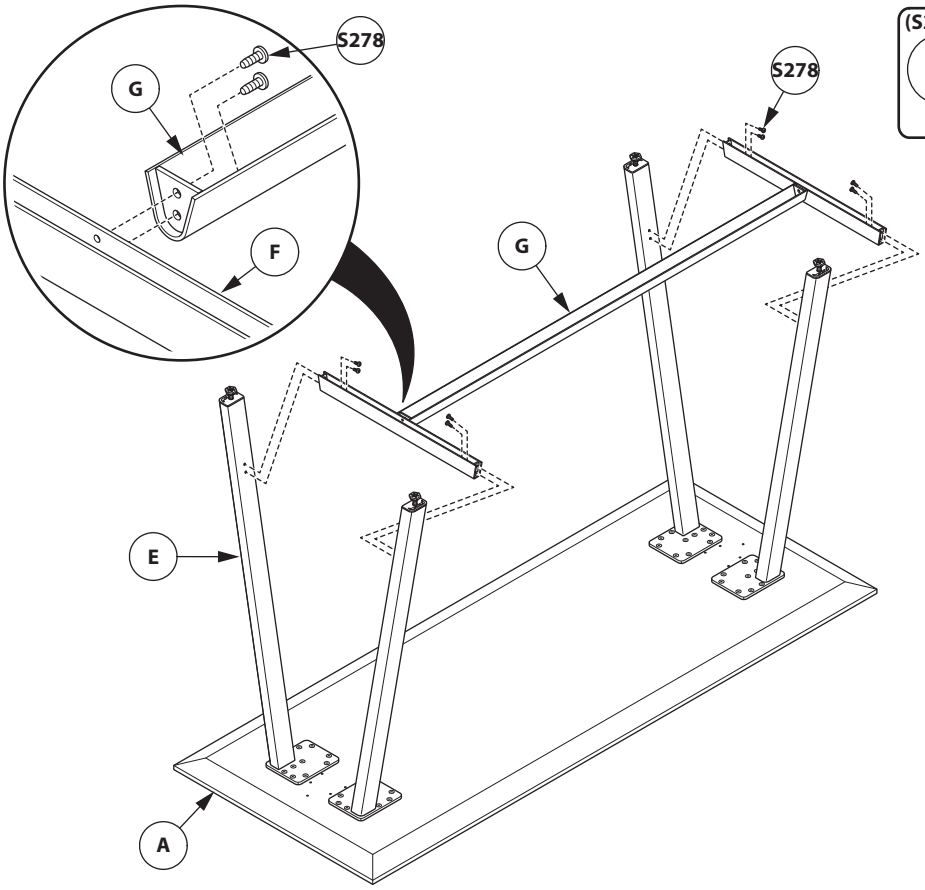

S278
G
F
S278
G
E
A

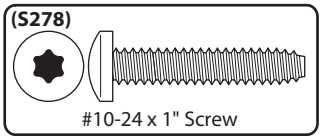
(S278)
#10-24 x 1" Screw

OR


2b

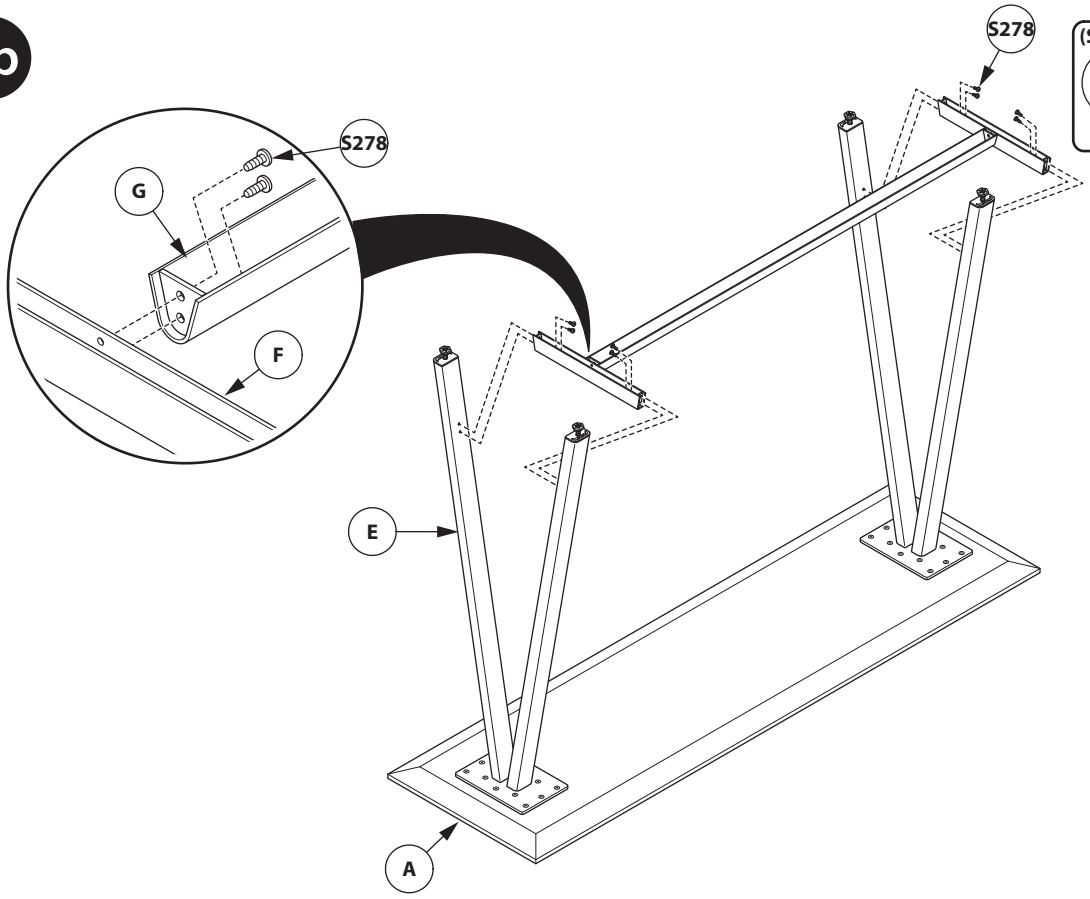

S278
G
F
S278
E
A

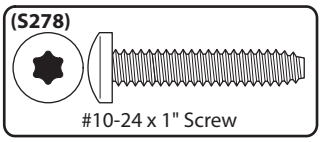
(S278)
#10-24 x 1" Screw


CABLE TROUGH

3

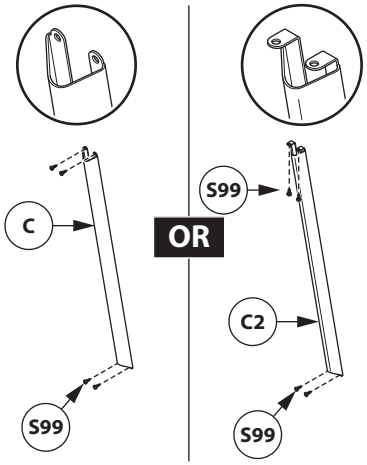

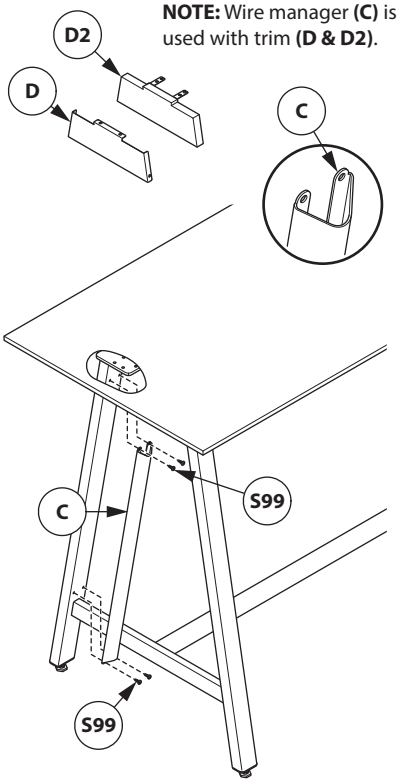


NOTE: Wire manager **(C)** is used with trim **(D & D2)**.

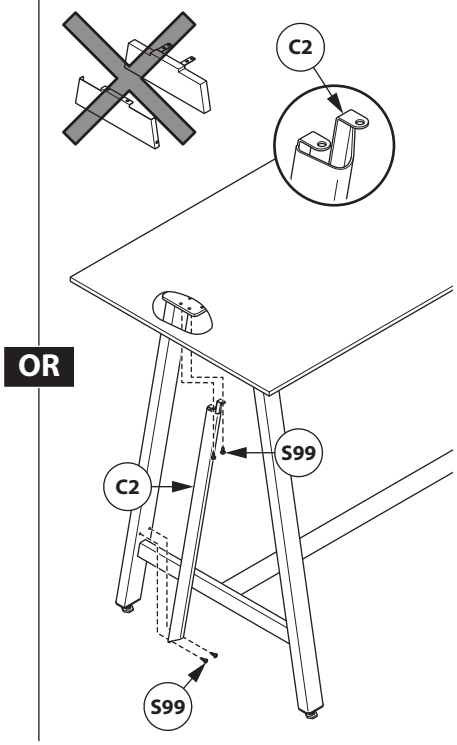

NOTE: Wire manager **(C2)** is used **without** trim **(D & D2)**.


(S99)




#8-18 x 1/2" Self-Drilling Screw

BAG HOOK

4

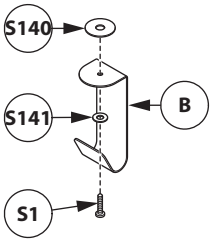


(S1)



#10 x 1" Pan Head Screw

(S140)

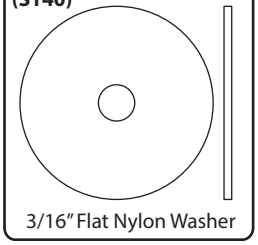

3/16" Flat Nylon Washer

(S141)




3/16" Flat Nylon Washer

TRIM (OPTIONAL)

5

(S3) #10 x 5/8" Pan Head Screw

(S99) #8-18 x 1/2" Self-Drilling Screw

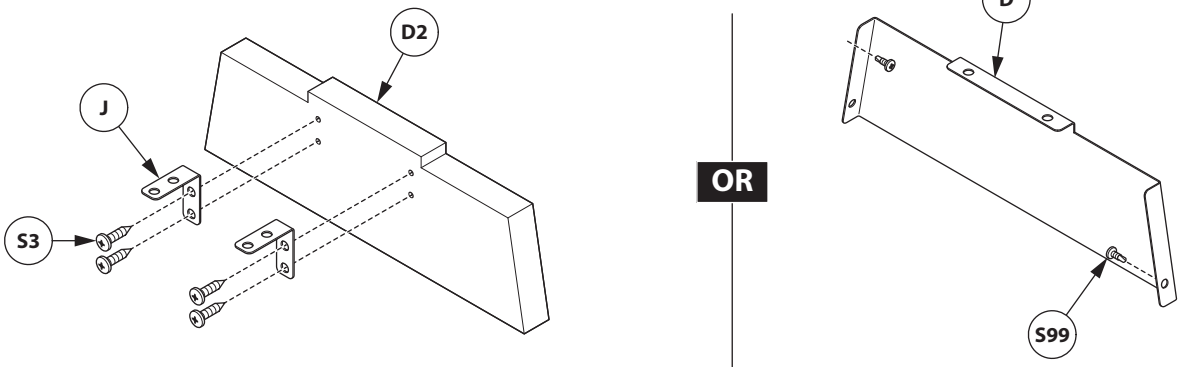

6

(S1) #10 x 1" Pan Head Screw

(S99) #8-18 x 1/2" Self-Drilling Screw

