TACTICS™ MODESTY PANEL
(LEVEL ONE/NON-POWERED)
4TMD-48N, 4TMD-60N, 4TM-72N, 4TMD84N, 4TMD-96N
Installation Instructions

Tools Required
1/4" Allen wrench
No. 2 Robertson driver
1/4" Allen wrench

FIG.1

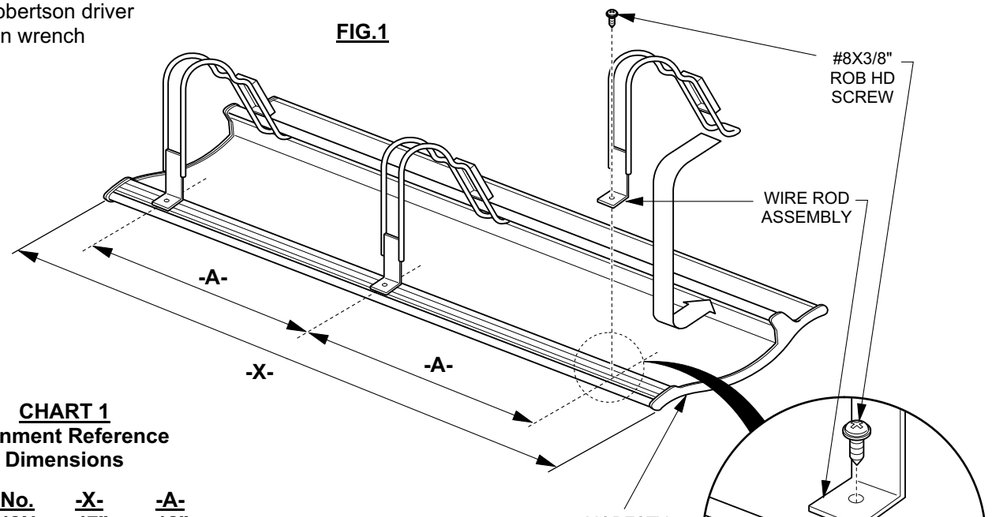


CHART 1
Alignment Reference Dimensions

Model No.	-X-	-A-
4TMD-48N	47"	18"
4TMD-60N	59"	24"
4TMD-72N	71"	30"
4TMD-84N	83"	24" **
4TMD-96N	95"	28" **

Note: the ** models contain 4 wire rod assemblies and must be spaced eevenly on center of the panel.

Parts List (Per Panel Assembly

48" thru 72" Modesty Panels
(1) Modesty Panel
(2) Wire Rod Assemblies (48" thru 72" Panels)
(3) #8 x 3/8" Robertson Head Screws
(3) 5/16" x 3/4" Hex Hd. Cap Screws
(3) 5/16" x 1/8" Flat Washers

84" thru 96" Modesty Panels
(1) Modesty Panel
(4) Wire Rod Assemblies (48" thru 72" Panels)
(4) #8 x 3/8" Robertson Head Screws
(4) 5/16" x 3/4" Hex Hd. Cap Screws
(4) 5/16" x 1/8" Flat Washers

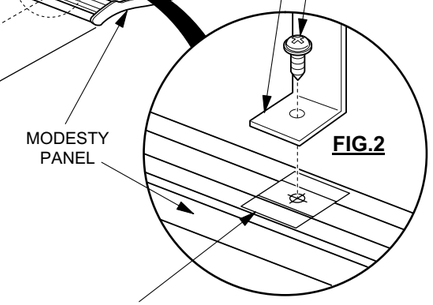


FIG.2



FIG.3

ENSURE CLEARANCE HOLE WITHIN PLATE OF WIRE ROD ASSEMBLY IS ALIGNED WITH THE ABOVE MENTIONED CENTER MARK.

Modesty Setup

1. Lay modesty panel face down on clean protected surface.
2. Install and align wire rod assemblies as shown (Fig. 1). Ensure that the square plate within the modesty panel is in line with the alignment sticker **(Fig. 2,3)** AND the wire rod assemblies conform to CHART 1.

Installation

IMPORTANT: Attach the modesty panel only after legs have been securely attached to the table and table is in a standing stationary position.

1. Attach screws and washers to underside of table. Do not fully tighten screws. Leave approximately 1/8" gap between screw head and underside surface of table **(Fig. 5)**.
2. Position modesty panel beneath table, aligning keyholes in wire rod assemblies with screw heads in table. Push modesty panel up against table top and back to engage neck of screws with narrow portion of keyhole slots. Tighten screws with 1/4" Allan wrench **(Fig. 5)**.

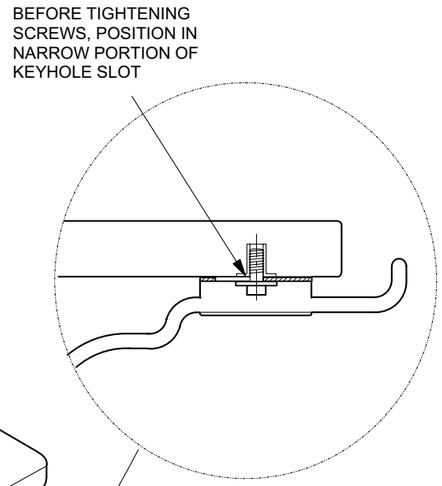
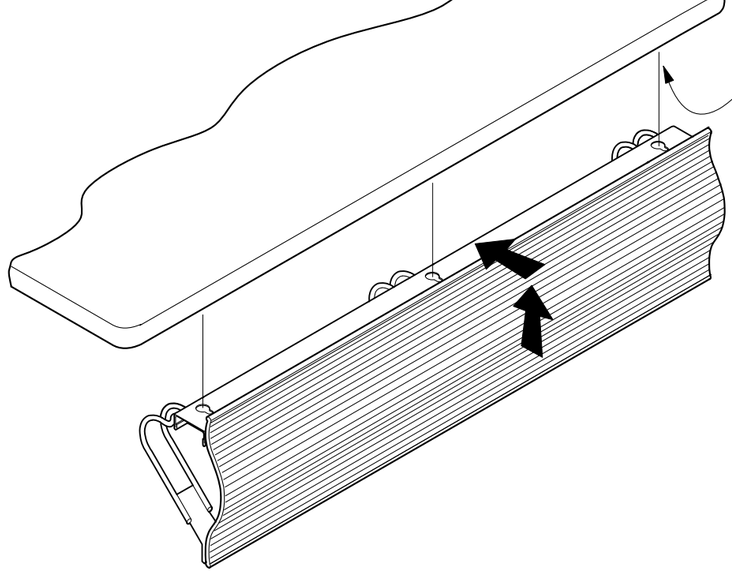


FIG.5



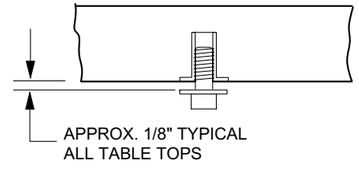


FIG.4

CUSTOMER SERVICE PHONE: 1-800-426-8562