
KINETICS® TACTICS®

AKP Mounting Plate

Installation Instructions

Tools Required

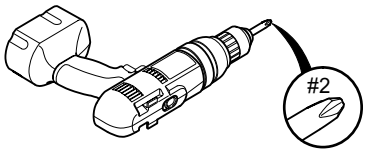



1 Install AKP mounting plate (A)

NOTE: Align the plate with the hat channels. Allow 1-1/4" spacing from the front of the plate to the front edge of the worktop. If necessary, realign the hat channel to suit. The mounting plate can also be laterally positioned to suit the customer's requirements. Check for clearances.


2 Install AKP (C)

NOTE: Use holes in mounting plate (A) to install AKP (C).

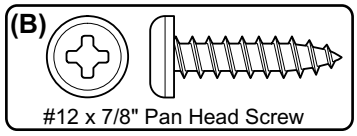

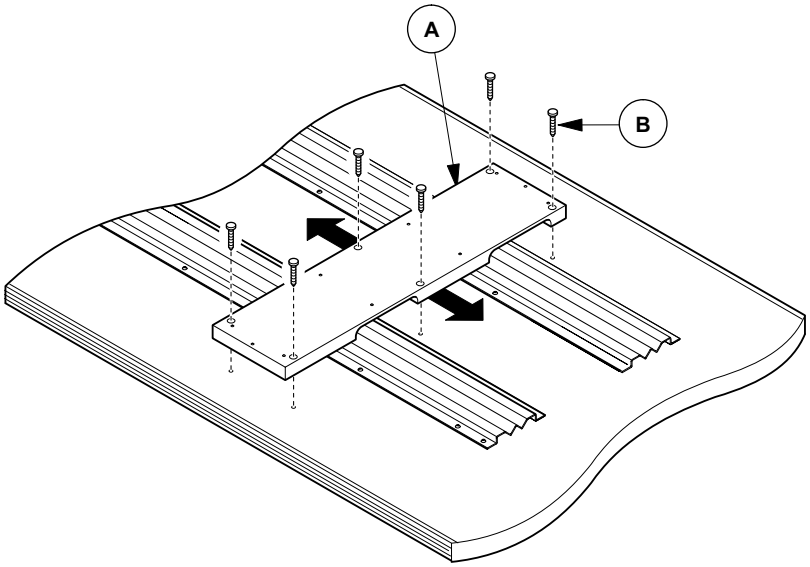

UNDERSIDE VIEW OF TOP

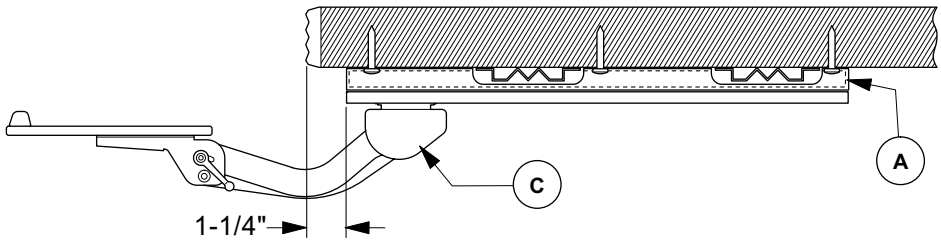

SIDE SECTION VIEW OF ASSEMBLY