
HAWORTH


Upside Bench

Assembly Instructions

Top Feed

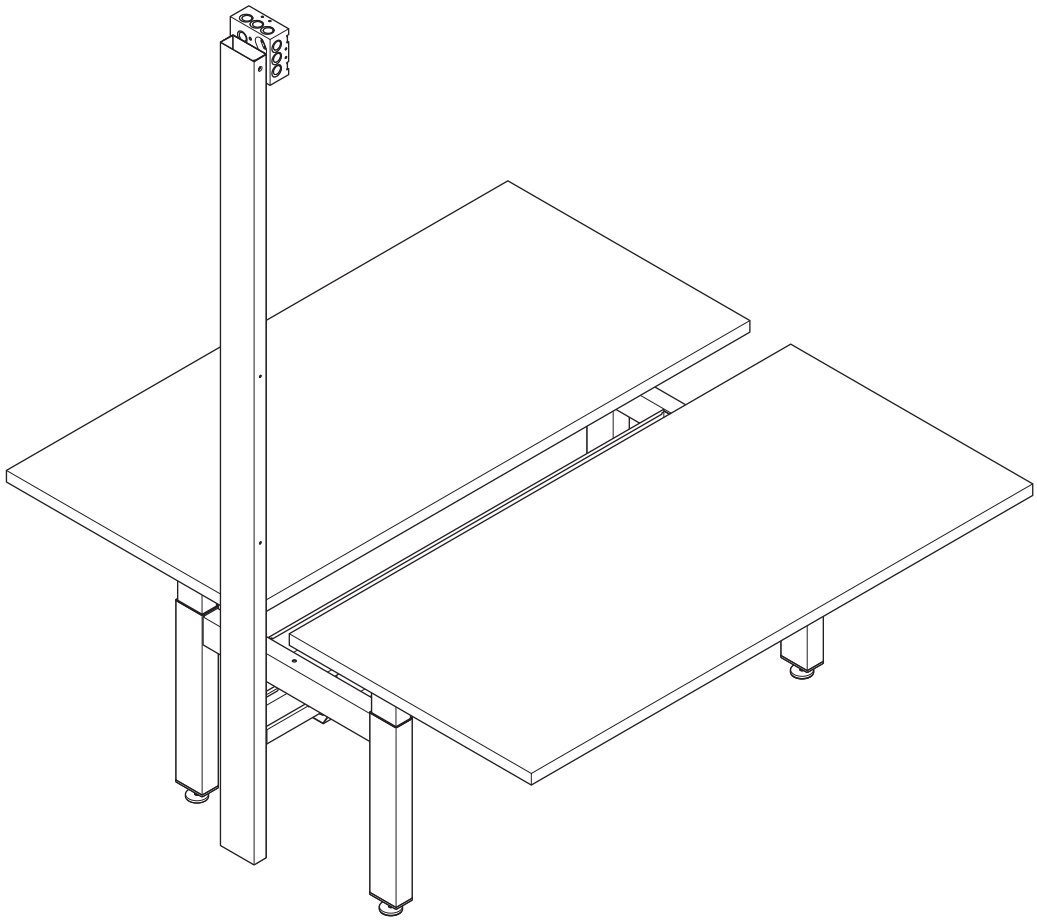


Tools Required

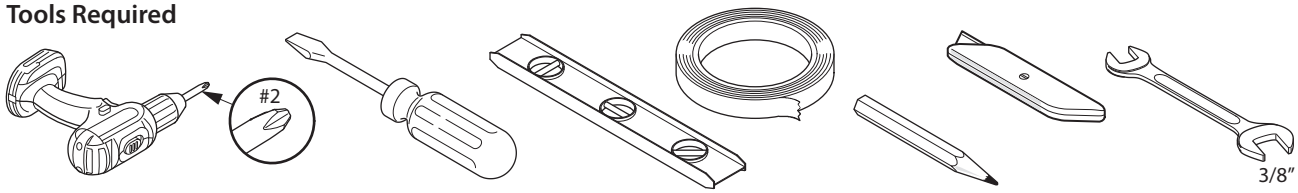


WARNING: Do not electrically interconnect modular power distribution systems powered from two different power feed units. This poses a SHOCK HAZARD to service personnel and will cause RISK OF FIRE due to excessive circulating currents.

WARNING: Power to all branch circuits MUST REMAIN DISCONNECTED during installation or removal of electrical components and raceway covers to avoid SHOCK HAZARDS.

NOTE: Connections of this modular power distribution component **MUST** be done by a licensed electrician, who must control the size and loading of each branch circuit. The person or group installing Haworth products is responsible for complying with all applicable building and electrical code requirements.

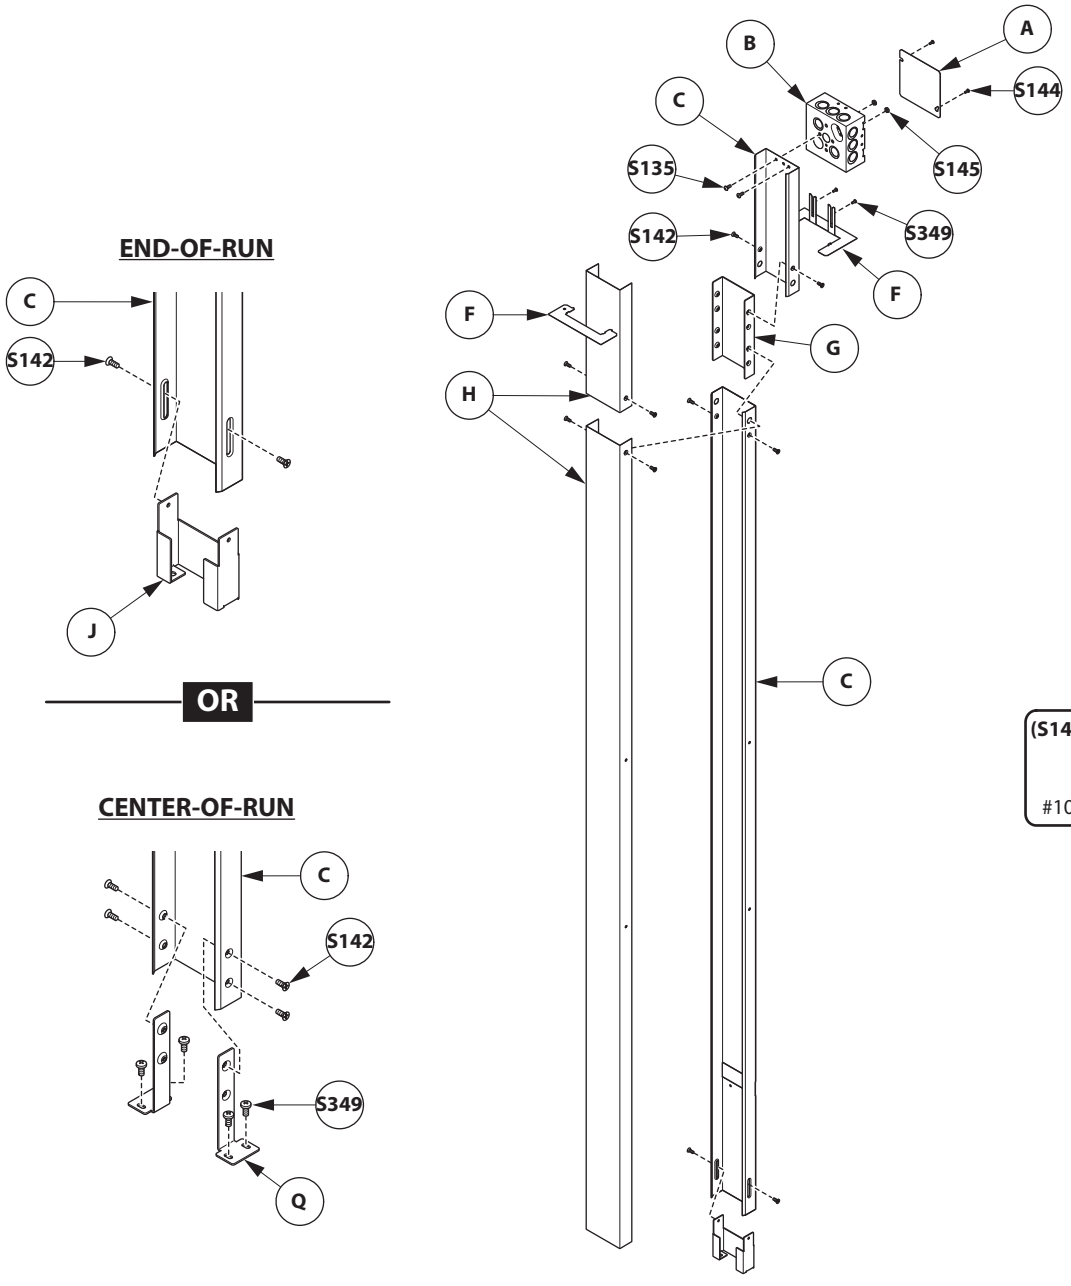


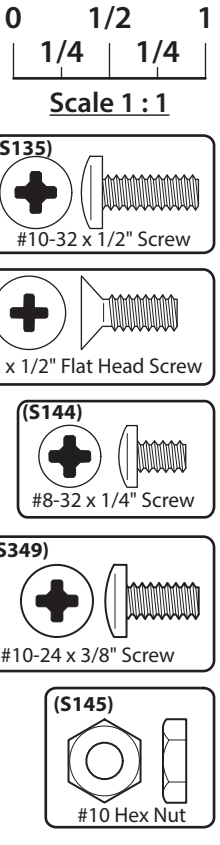


(C) Back Cover - Qty. 1

Center-of-Run


End-of-Run

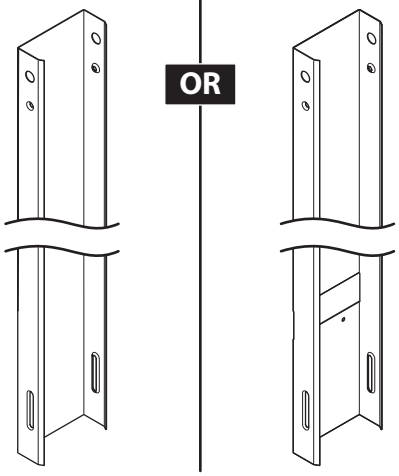


(H) Cover - Qty. 1

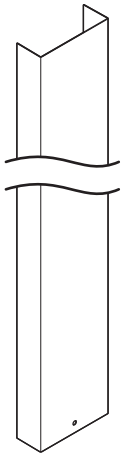


(J) Floor Bracket - Qty. 1

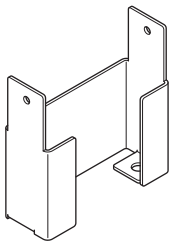


(Q) Center Brackets - Qty. 2

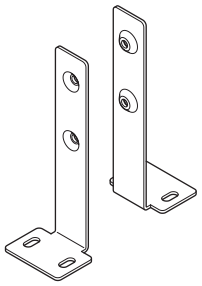


(F) Trim - Qty. 1

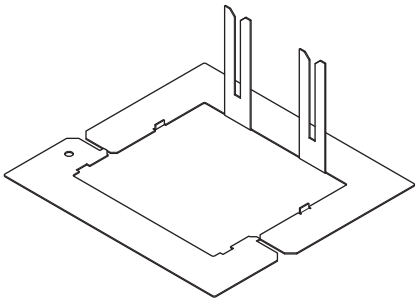


(B) Electrical Box - Qty. 1

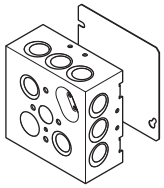


(S) Transition Tray - Qty. 1

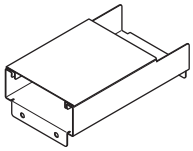


(V) Channel End Cover - Qty. 1

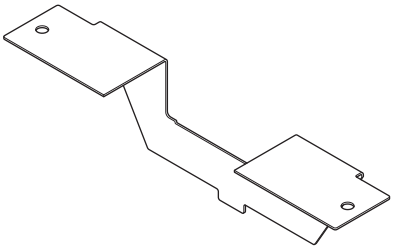


(K) Grommet - Qty. 1

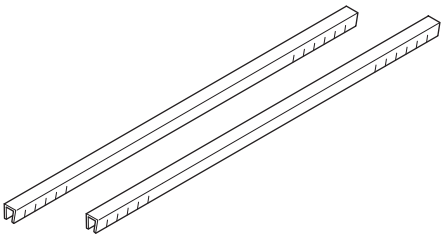


(G) Extented Bracket - Qty. 1




(S142) #10-32 X 1/2" Screw - Qty. 8




(S144) #8-32 X 1/4" Screw - Qty. 2



(S349) #10-24 X 3/8" Screw - Qty. 6



(S135) #10-32 X 1/2" - Qty. 2




(S145) #10-32 Hex Nut - Qty. 2





CENTER-OF-RUN OPTION

1a Install brackets (Q)


NOTE: For transition tray installation refer to base feed instructions 61000284

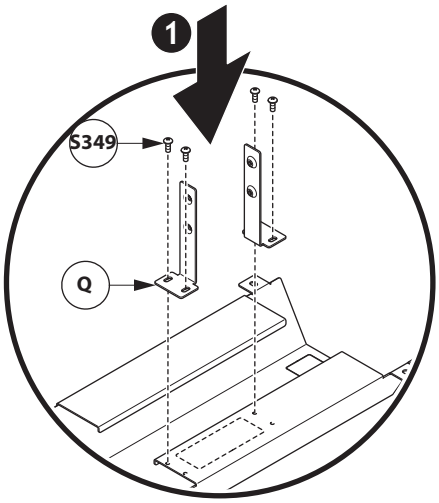


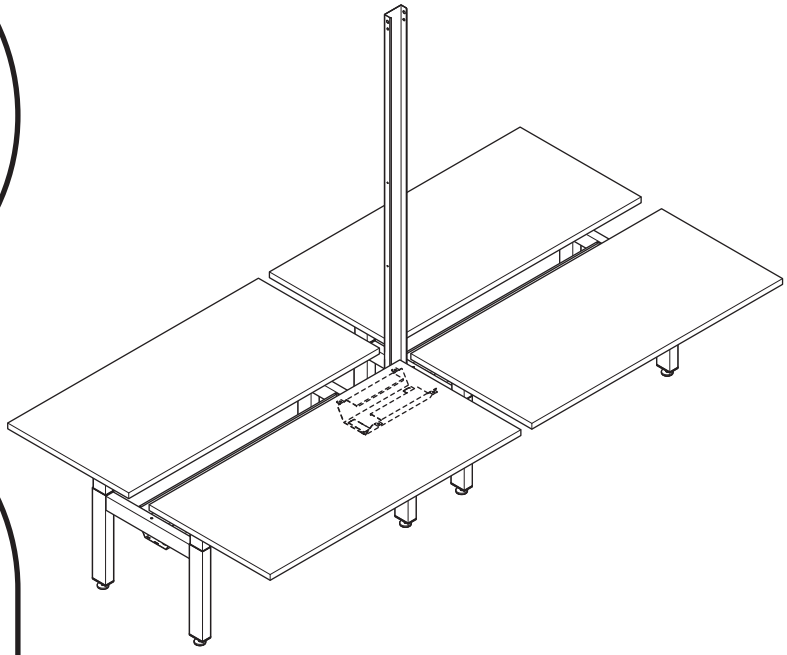

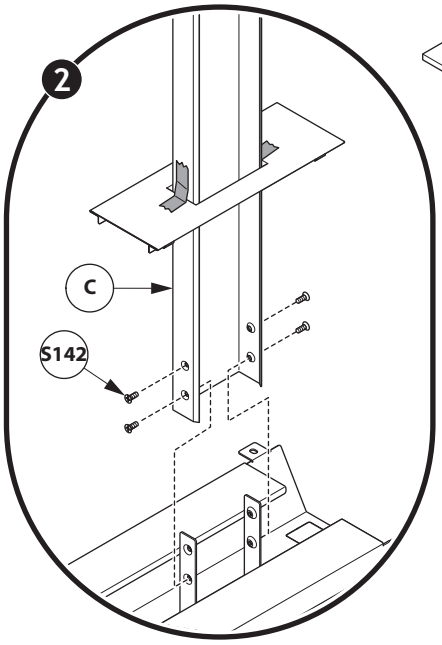

C

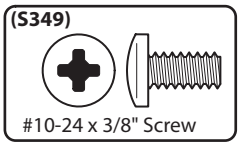

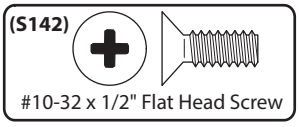


END-OF-RUN OPTION


1b Using cover (C) locate and install bracket (J)


NOTE: Due to varying floor construction fastener anchors are not included and must be field supplied.

NOTE: When installing channel cover (V) refer to instructions 61000287.

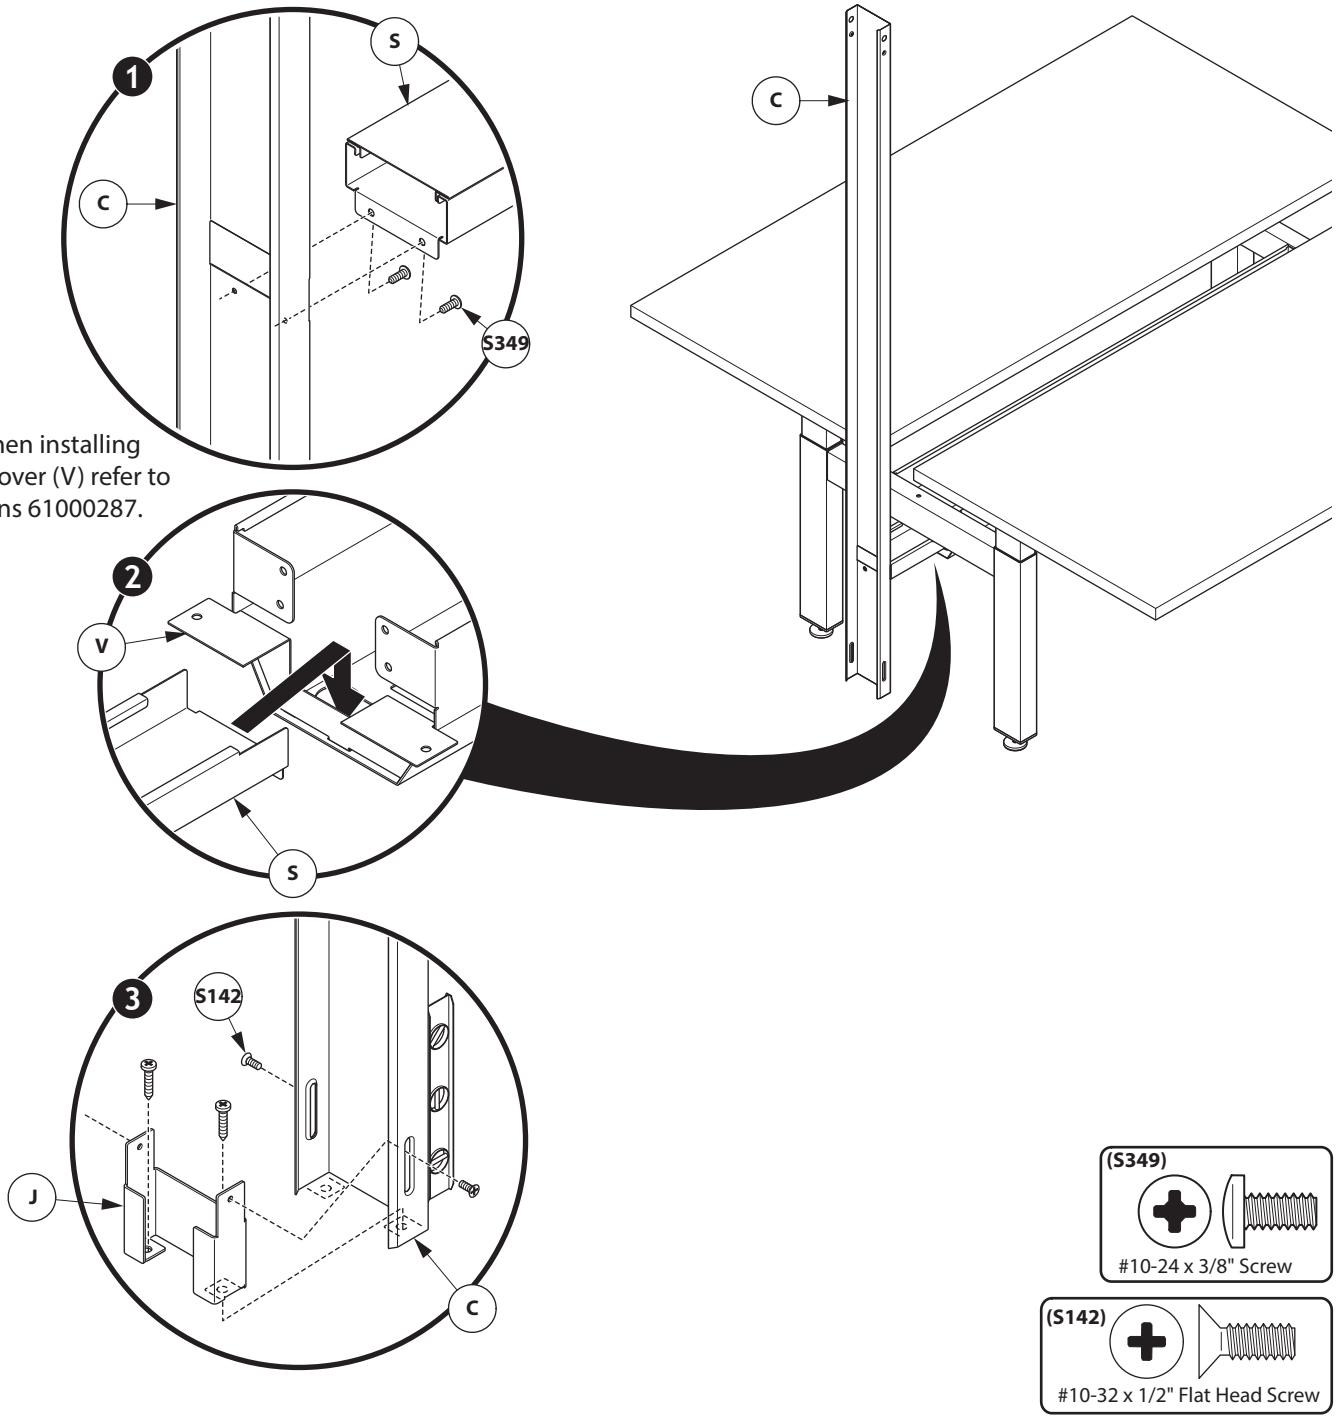


2 Assemble bracket (G)

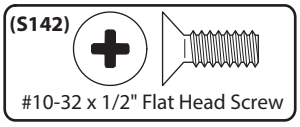


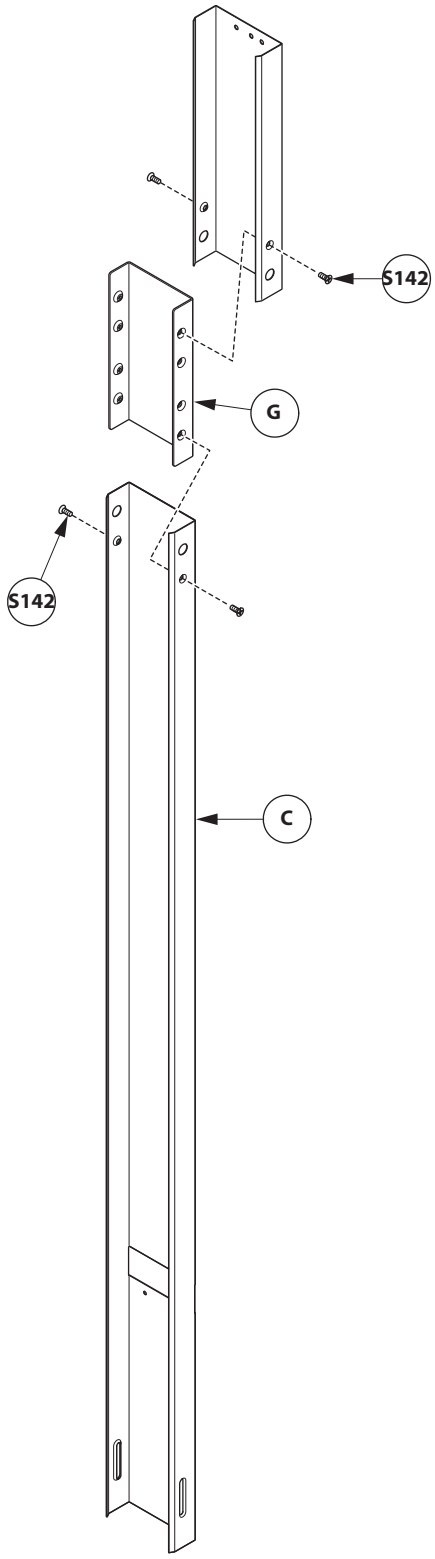


3

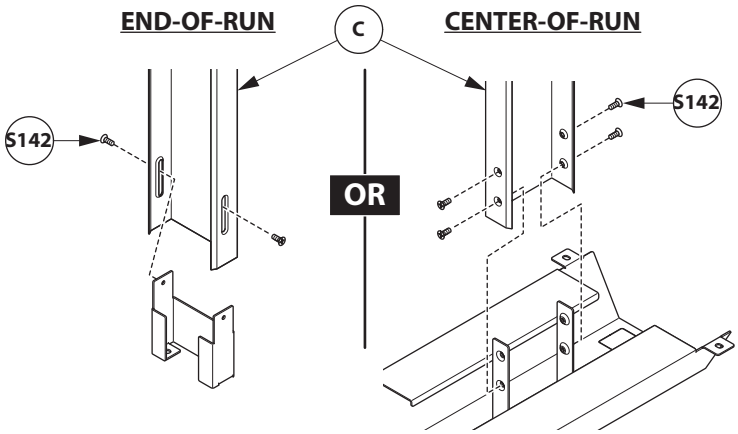

4 Plumb cover (C) and locate and cut a hole in ceiling tile

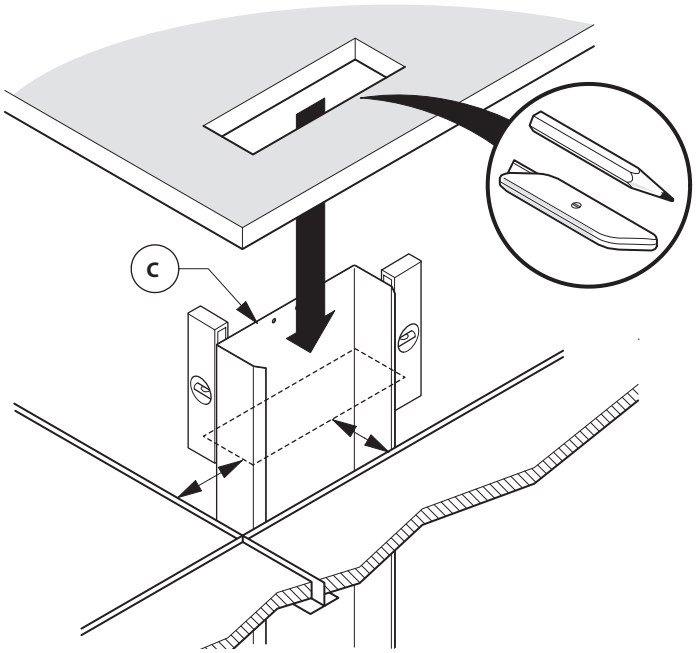



5

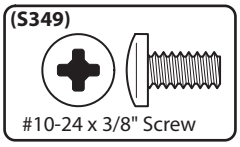


NOTE: When installing channel cover (V) refer to instructions 61000287.


6 Install outer cover (H)

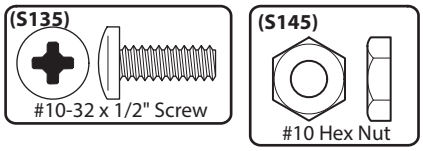

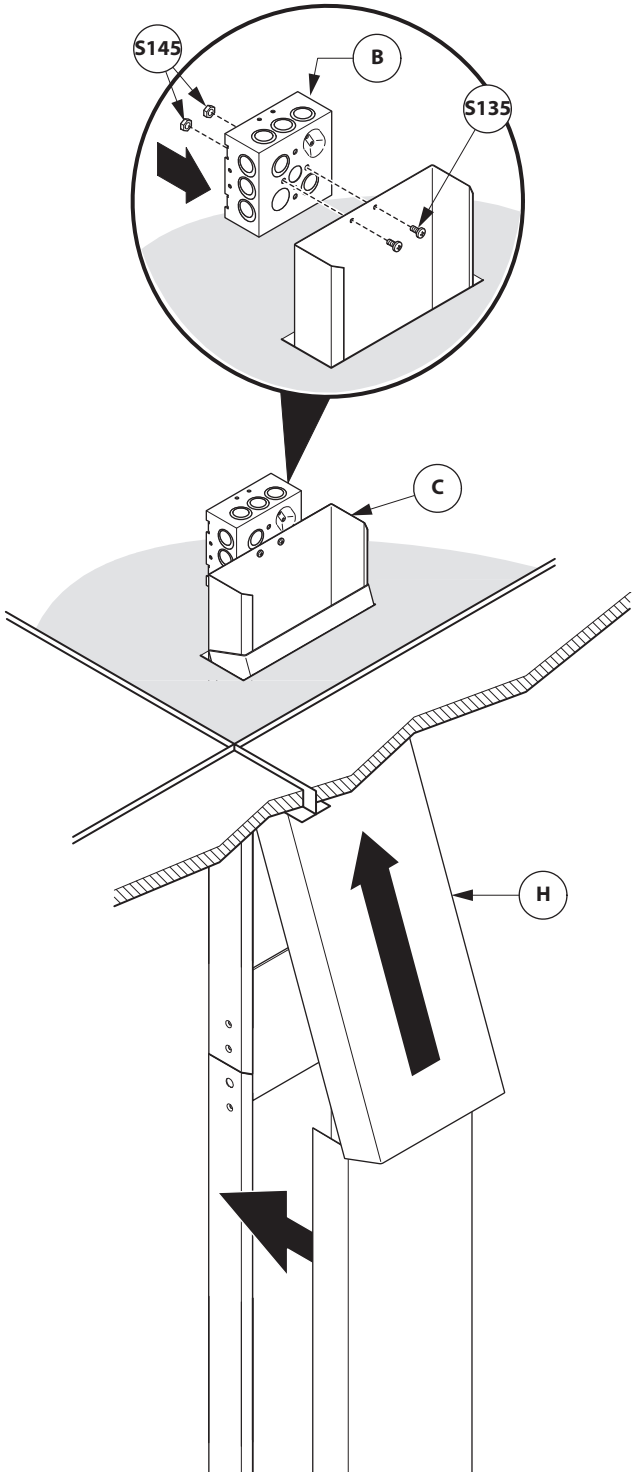



7 Install trim (F)

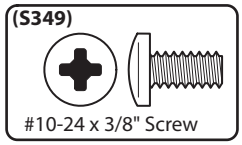

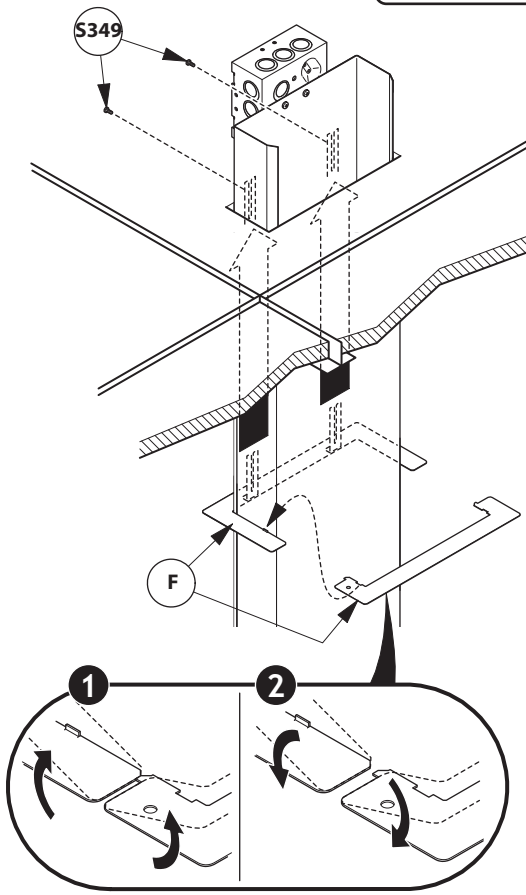


8 Install electrical box cover (A)

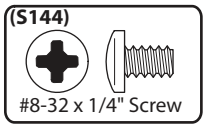

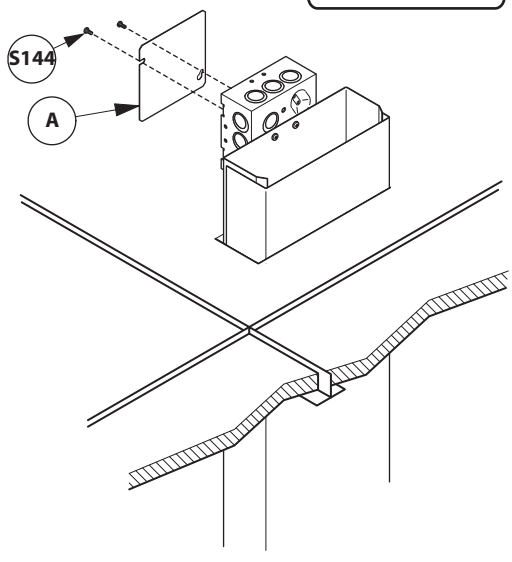

9 Cut & install grommet (K)

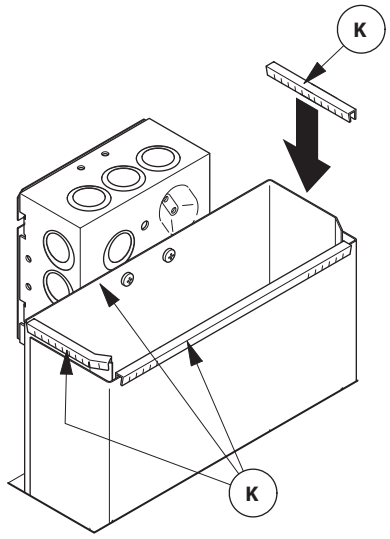

10 Tie top feed (H) to building

