
HAWORTH


Upside Bench


Assembly Instructions

Screens

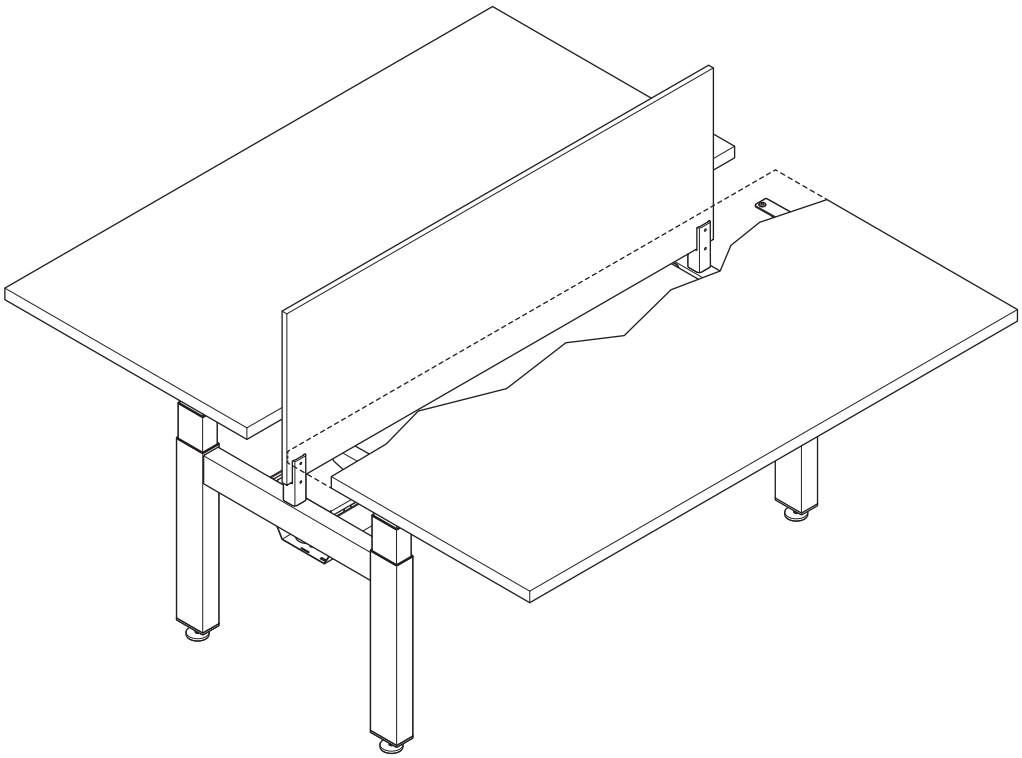


Tools Required

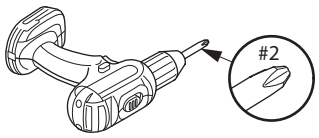





(M) Screen - Qty. 1

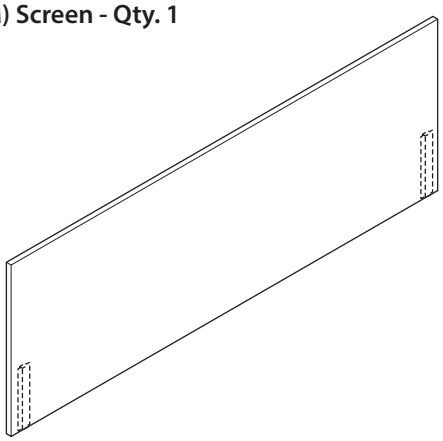


(N) Stanchion - Qty. 2

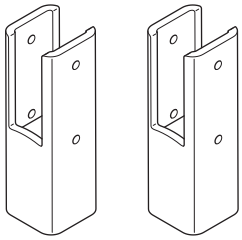


(T) Shim (0.075”) - Qty. 4

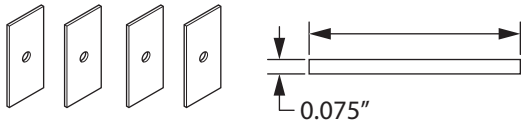

(U) Shim (0.09”) - Qty. 4

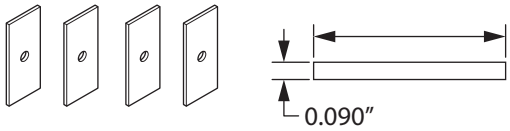


(S379) M8 - 1.25 X 20mm Cap Screw - Qty. 2

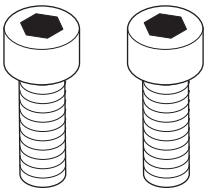


(S372) M6 X 6mm Set Screw - Qty. 8




1 **Install stanchion (N) as shown**

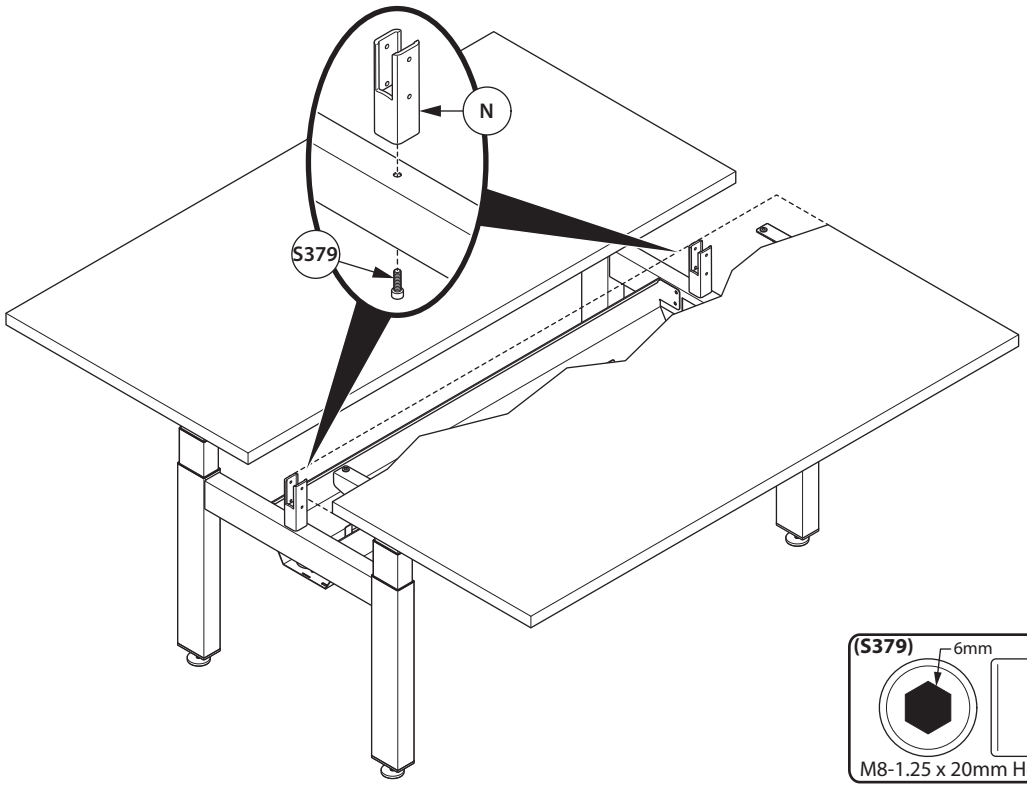

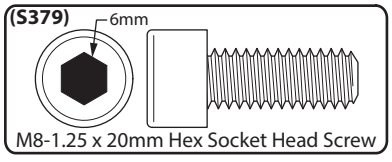


2 Install screen (M) as shown

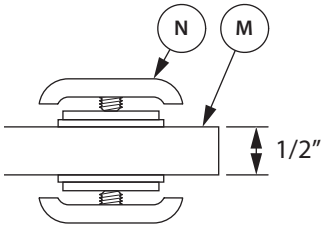


TOP VIEW - Belong Screens


OR

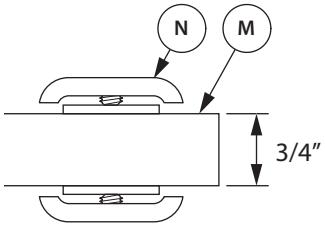


TOP VIEW - Belong + Screens

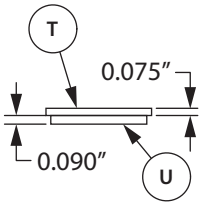

TOP VIEW - Shim

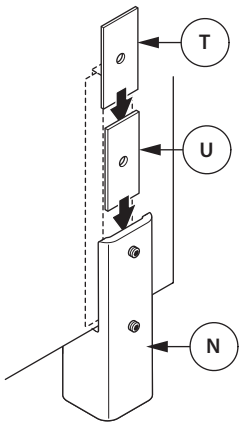

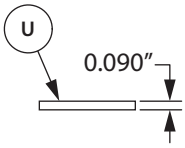

TOP VIEW - Shim

