
HAWORTH

Upside Bench


Assembly Instructions

Infill Panels


INNER PANEL

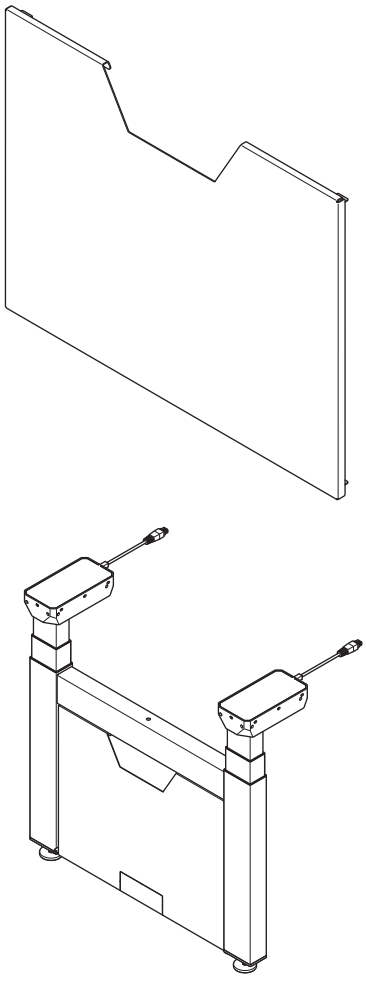


END OF RUN PANEL

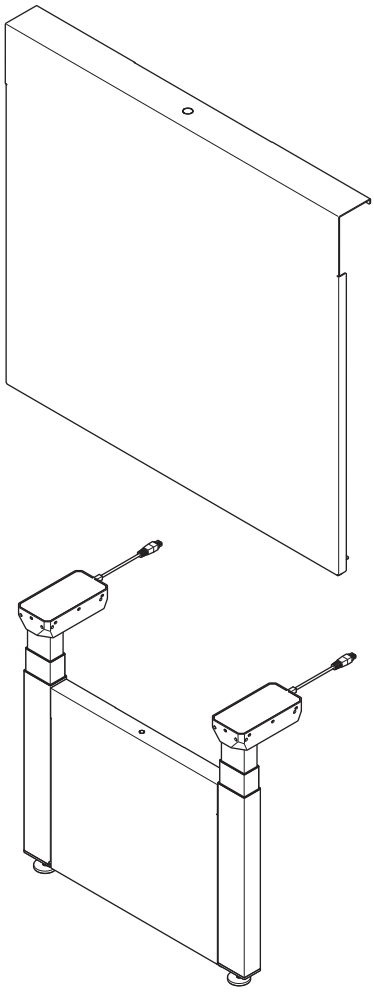


120° CENTER PANEL

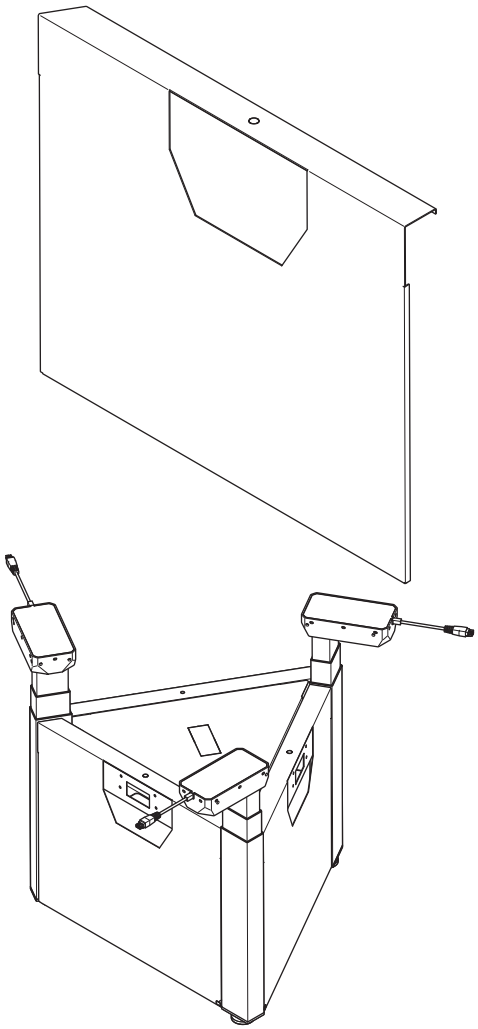


Tools Required

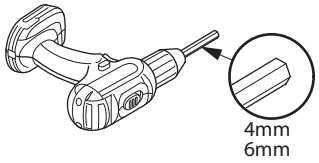


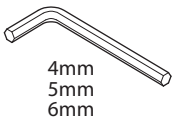


(AA) Infill Panel - Qty. 1

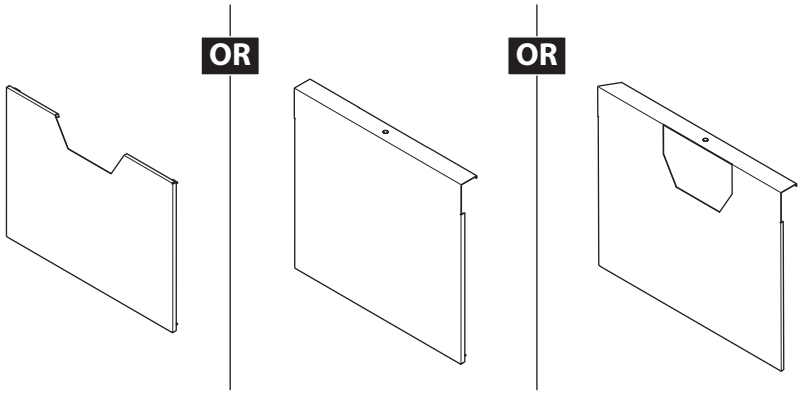


(AB) Infill Bracket - Qty. 2

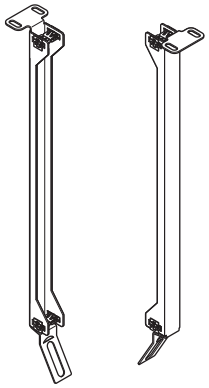


(AC) Infill Leg Bracket - Qty. 3

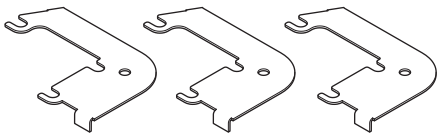


(AD) Infill Bracket Clips - Qty. 4




(S199) M6 X 14mm Set Screw - Qty. 4





(S24) M8 X 12mm Cap Screw - Qty. 4



1 Install infill brackets (AB)

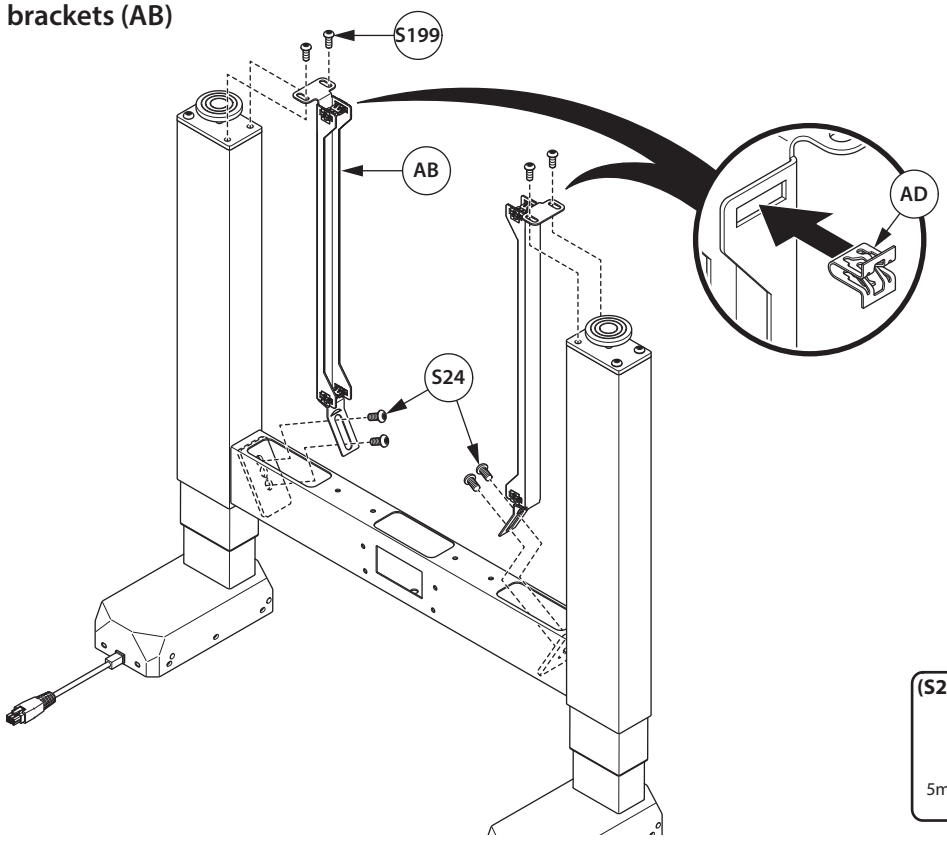


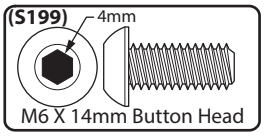

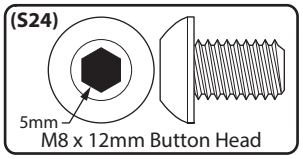


2 Install infill panels (AA)

INNER PANEL

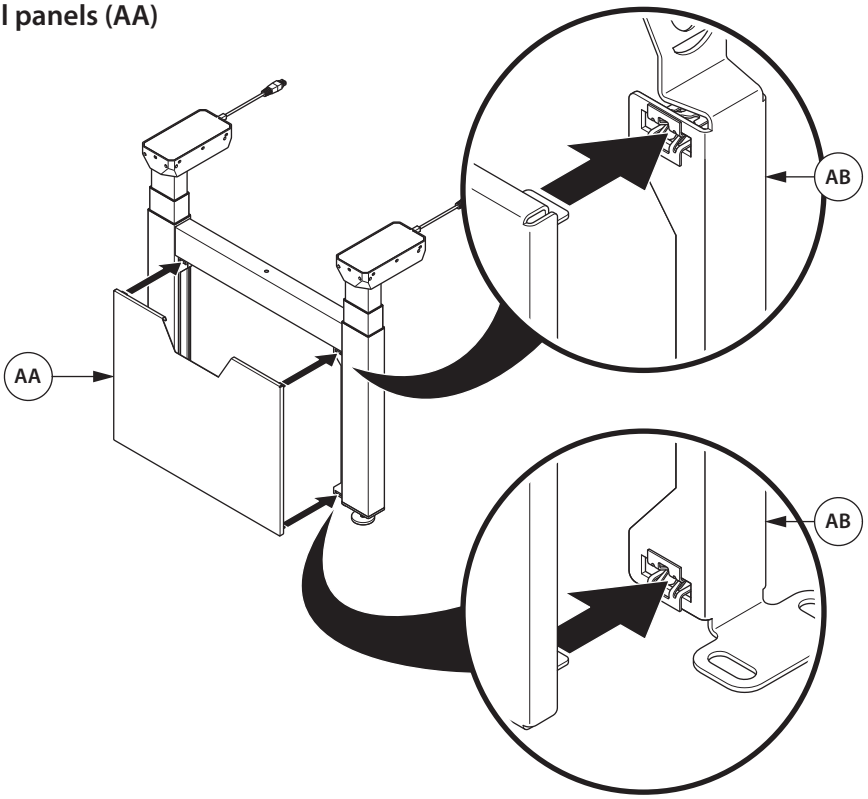


OR

END OF RUN PANEL

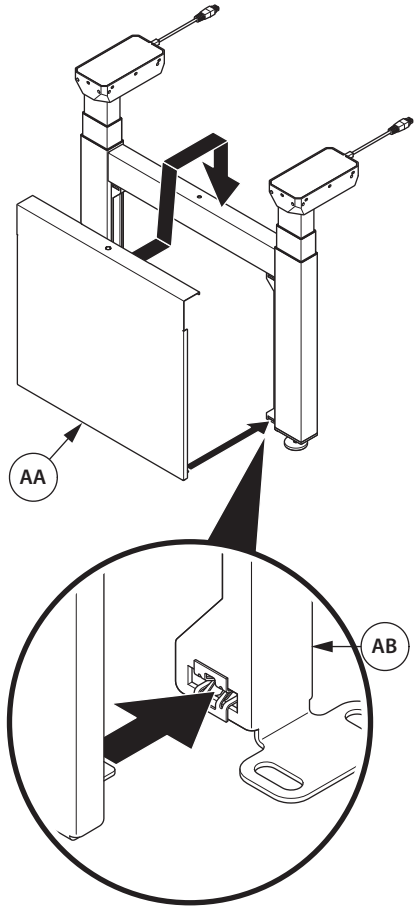

OR

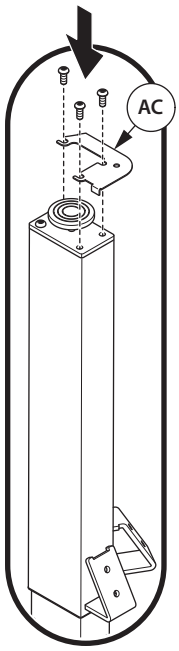

OR

120° CENTER PANEL

