
HAWORTH


Upside Bench

Assembly Instructions


Cable Chain

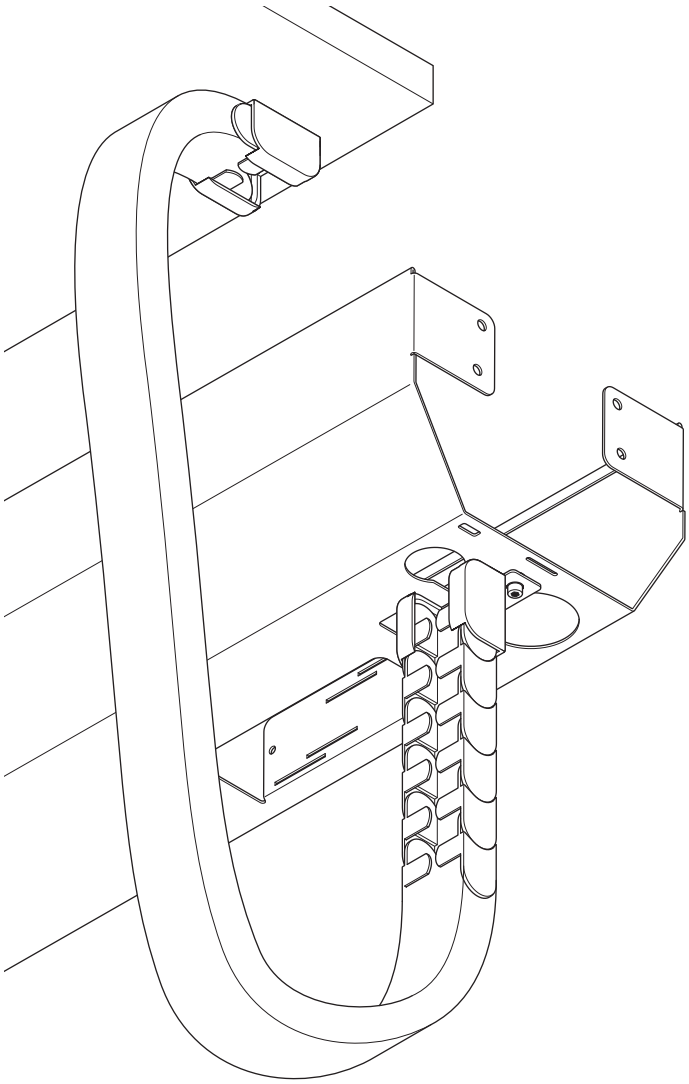


Tools Required

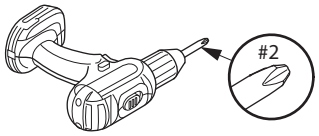


(CA) Bracket - Qty. 1

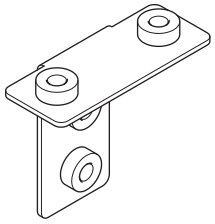


(CB) Cable Chain End - Qty. 2

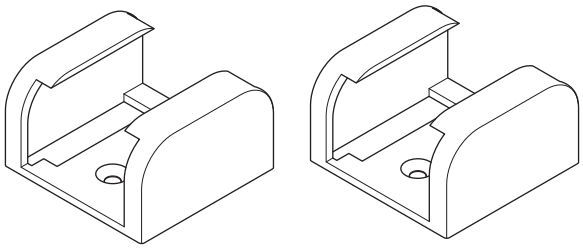


(CC) Cable Chain - Qty. 1

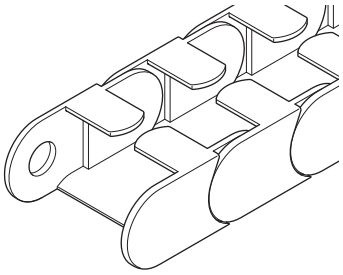


(S374) #10 x 7/16" Flat Head Screw - Qty. 2




(S232) #10 X 1" Flat Head Screw - Qty. 2

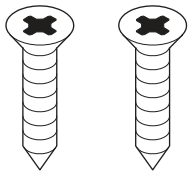



1 Install bracket (CA)

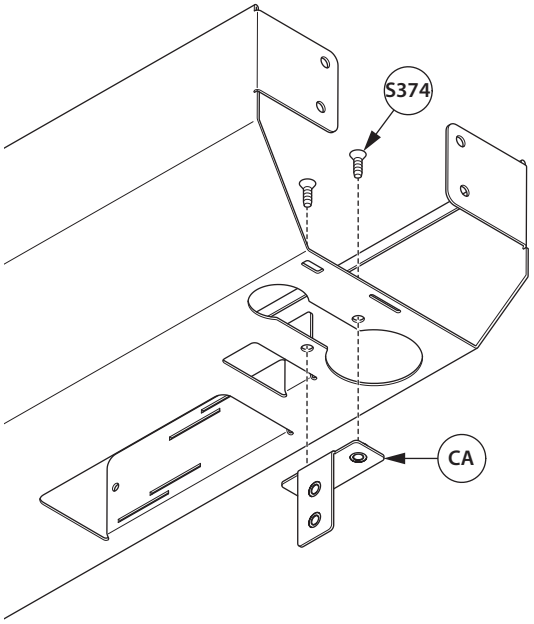

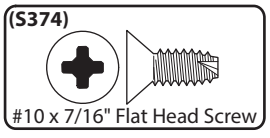



2 Install cable chain end (CB)

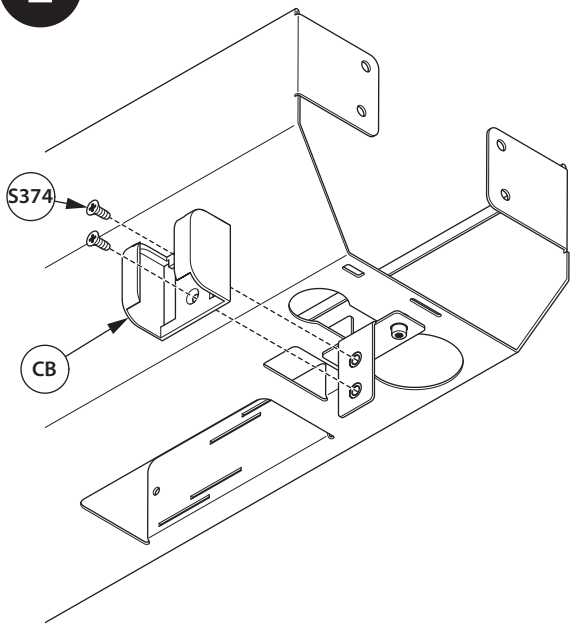

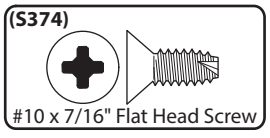

3 Install cable chain end (CB)

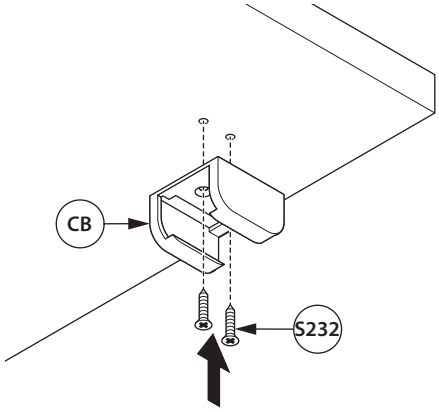

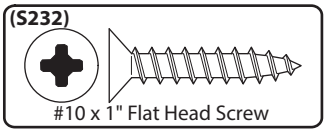

4 Install cable chain (CC)

