
HAWORTH


Masters Renew


Assembly Instructions


Convergent & Sliding Door Storage

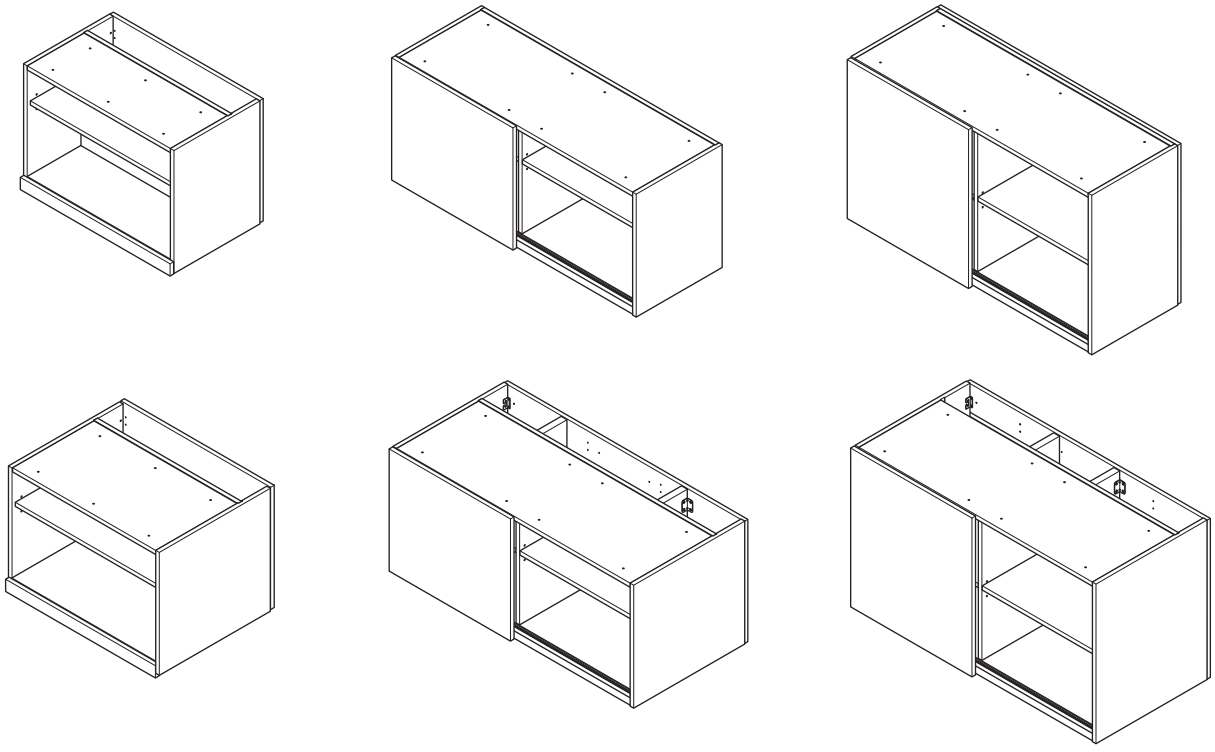



Tools Required

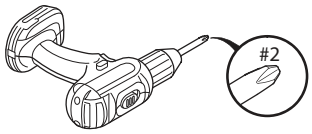


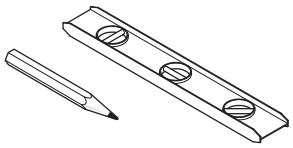




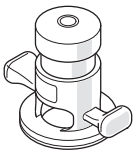








LEG USED WITH THESE UNITS

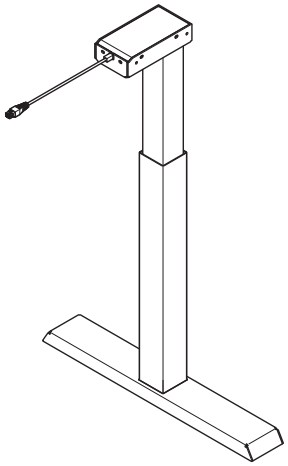


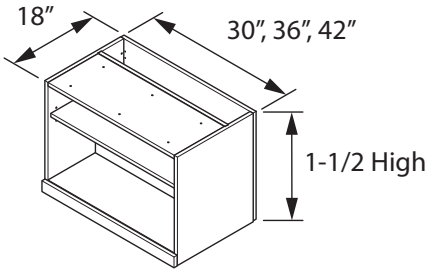


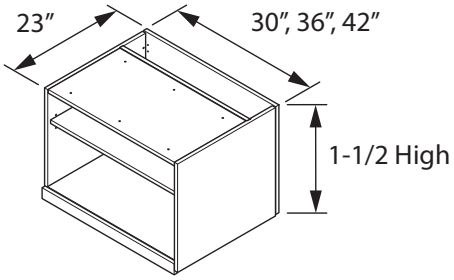


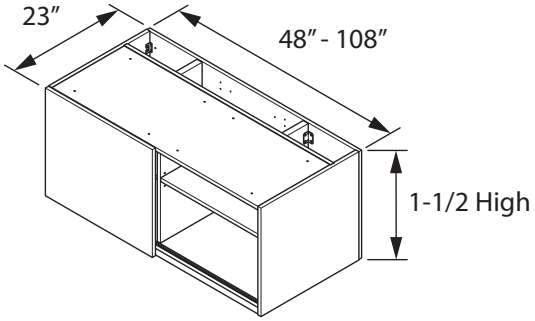


LEG NOT USED WITH THESE UNITS

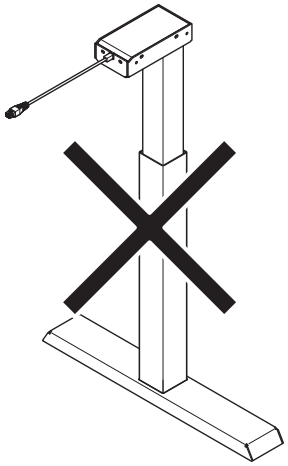


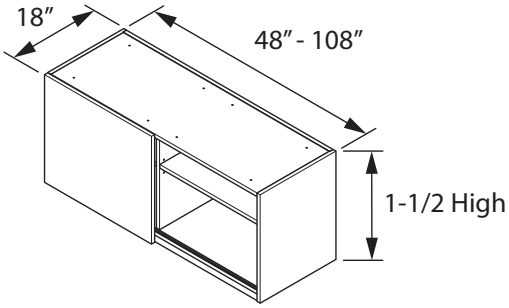

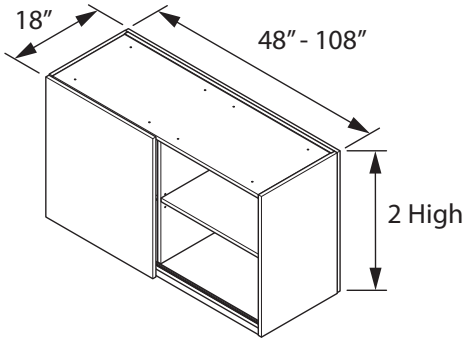


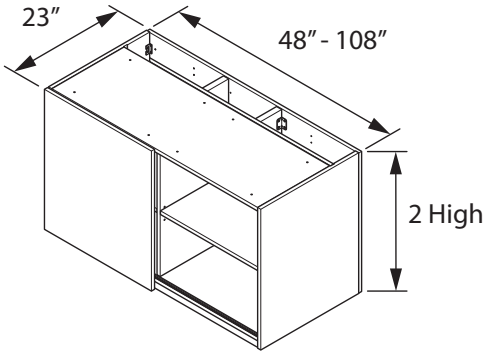


Cable Chain & Leg (OPTIONAL)

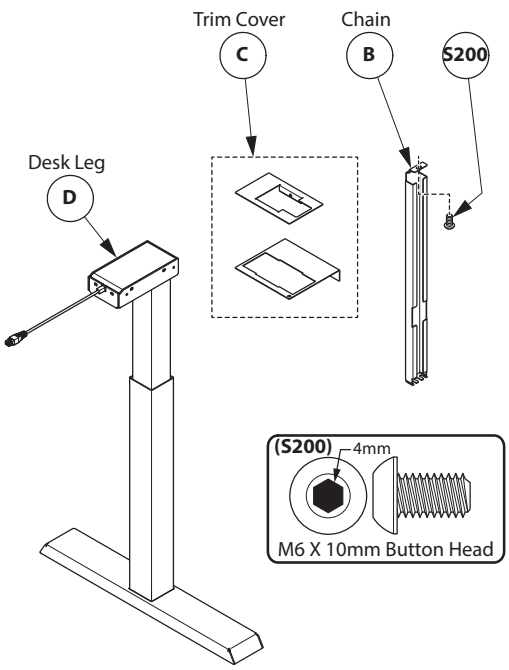

Open Storage

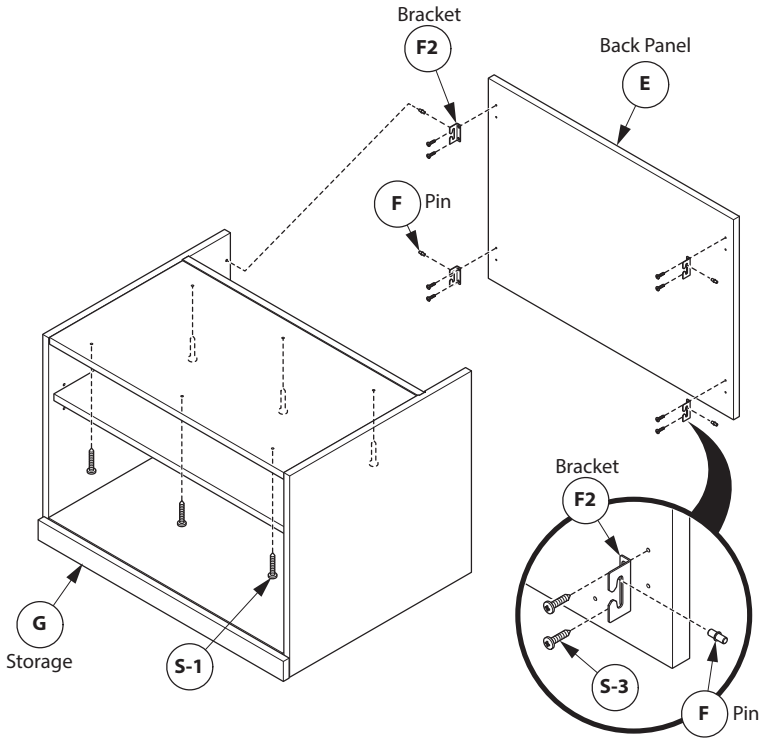



Storage with Sliding Door

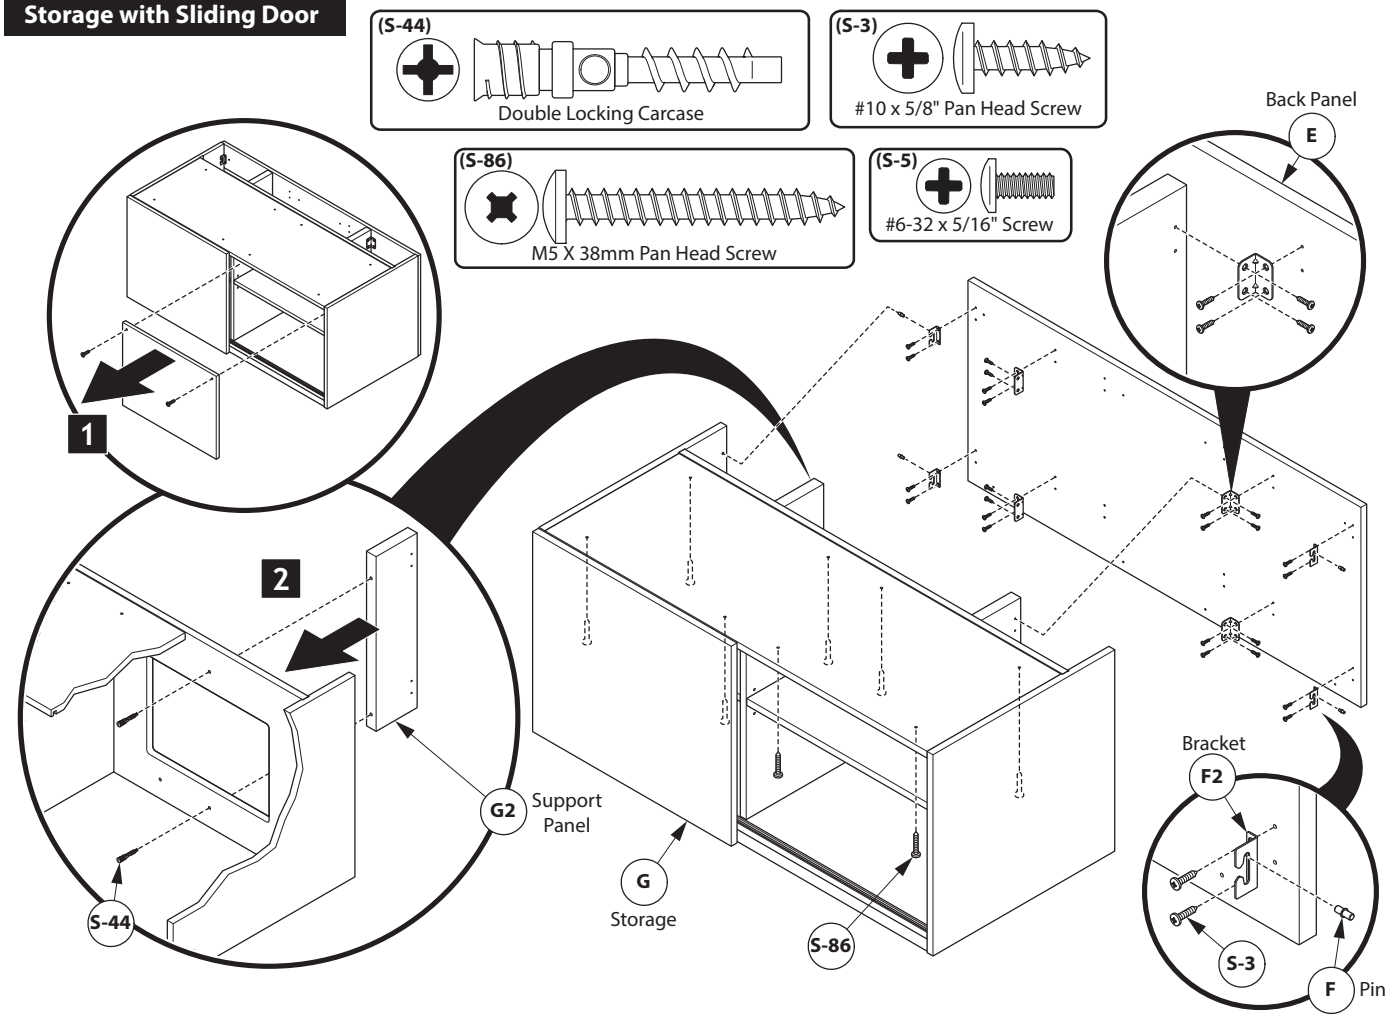

Back Panel Installation - 18" Deep Units


1

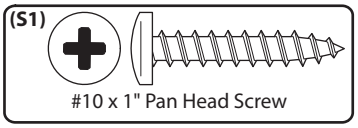


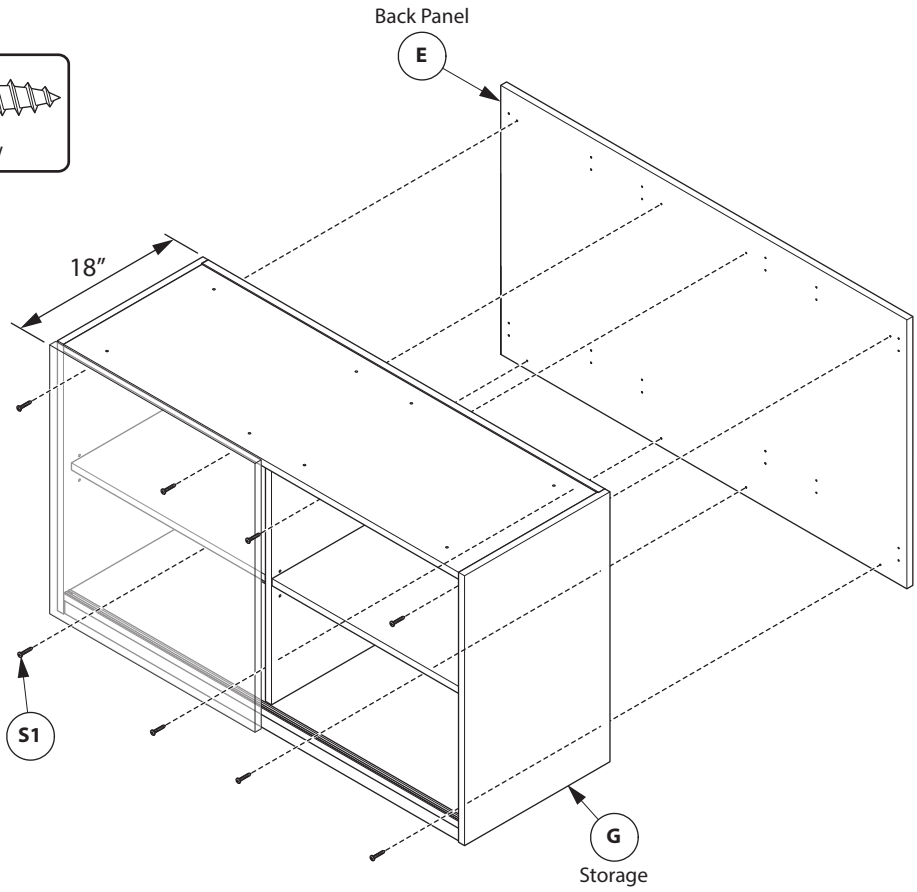


Extended Back Panel Installation


1

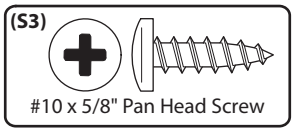

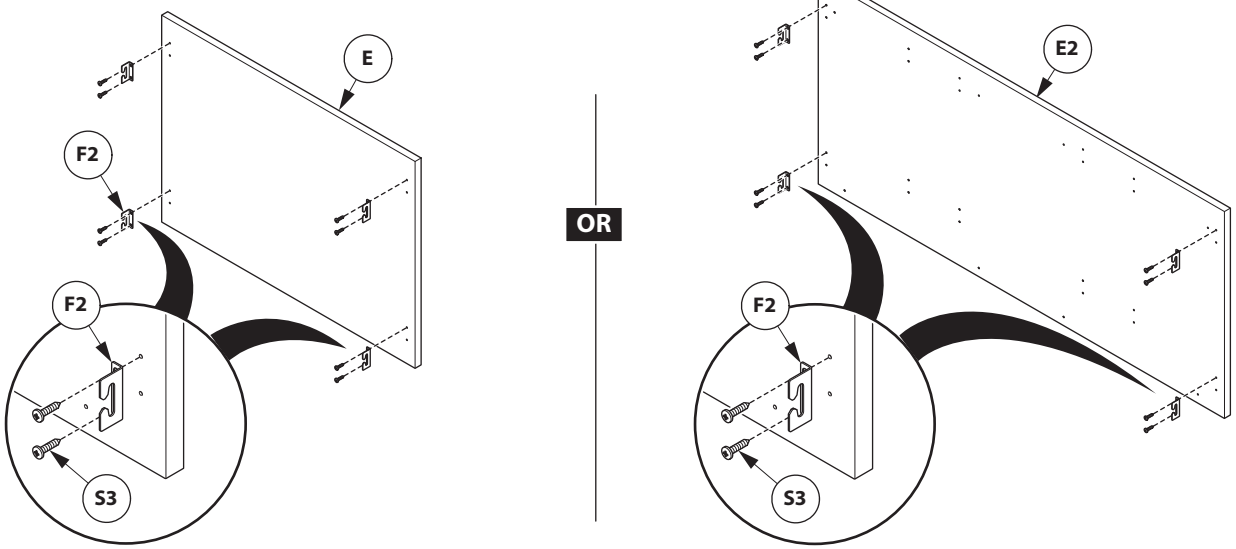



2

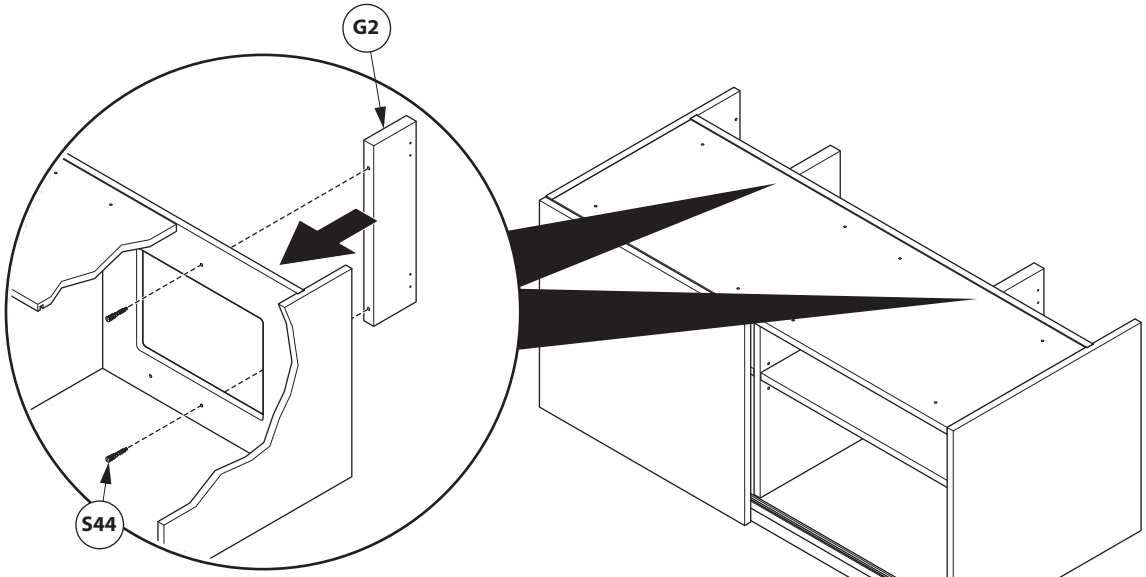

G2
S44

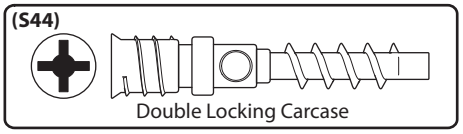

(S44)
Double Locking Carcase


3

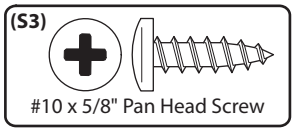
(S3)
#10 x 5/8" Pan Head Screw

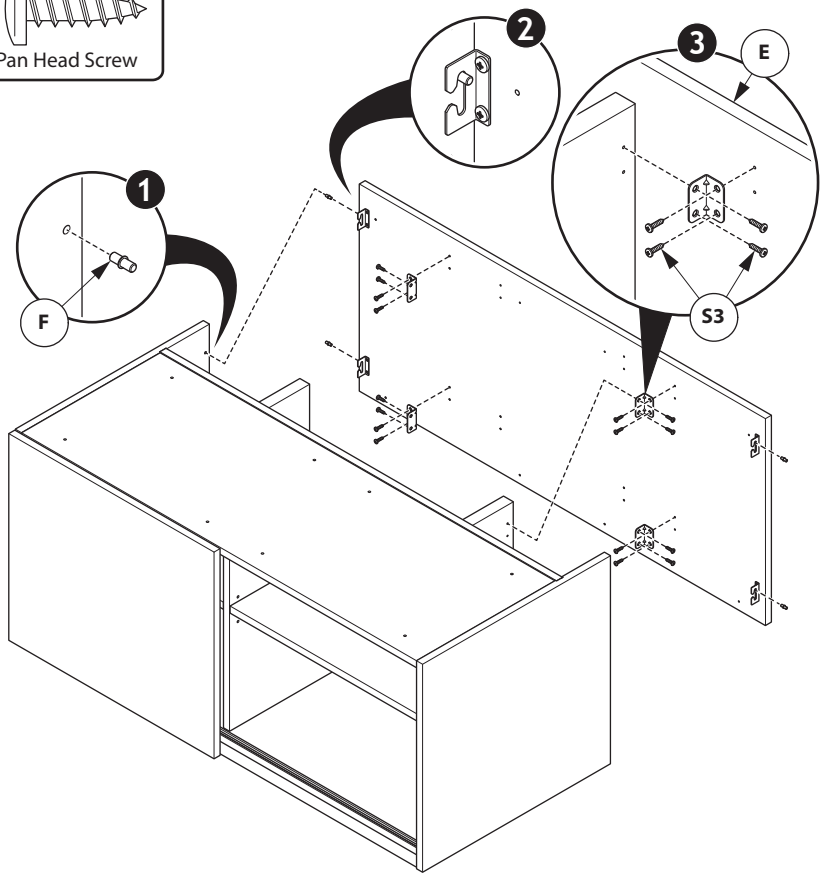
1
2
3
E
F
S3

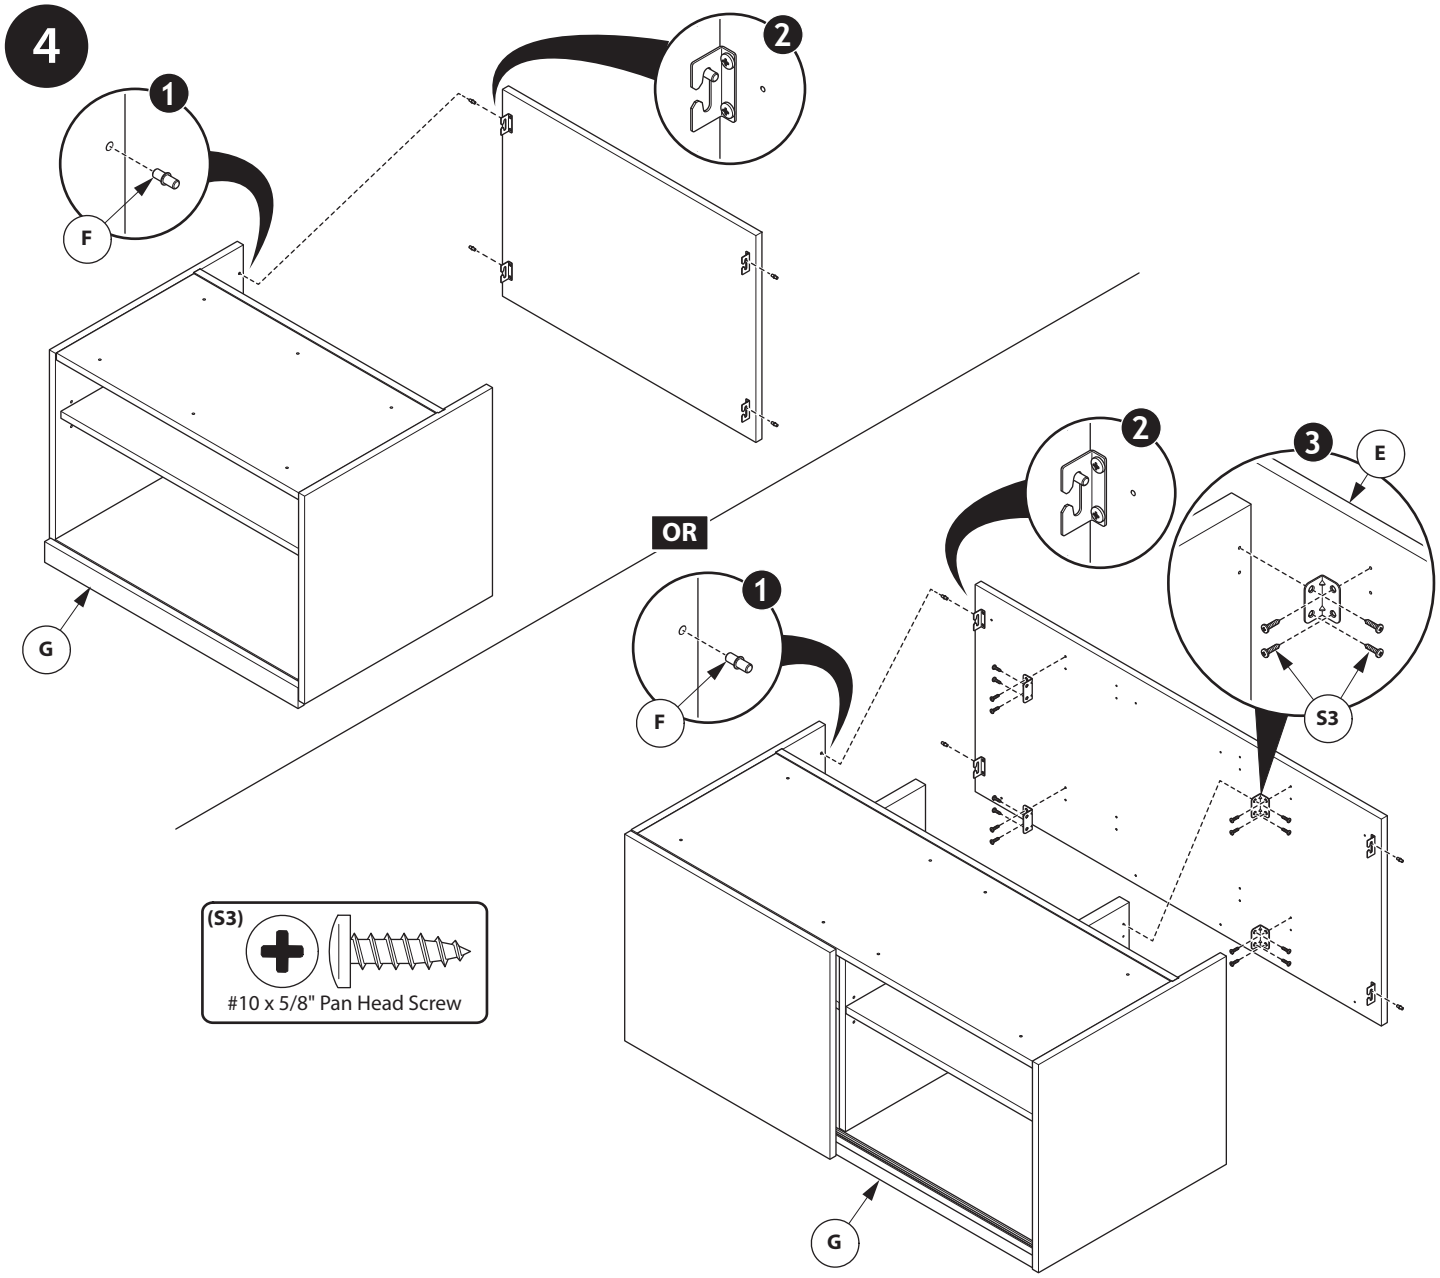

4
1
2
F
G
OR
1
2
3
E
F
S3
G
(S3)
#10 x 5/8" Pan Head Screw

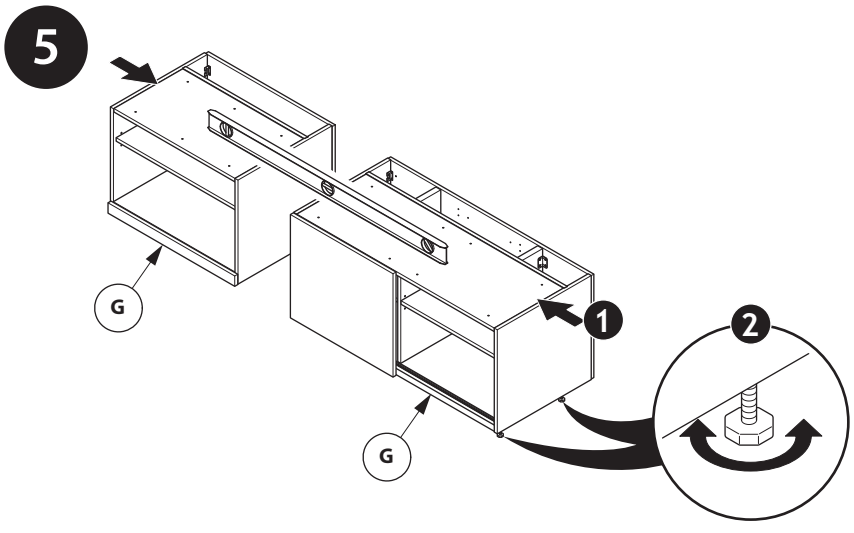
5
G
1
2
G

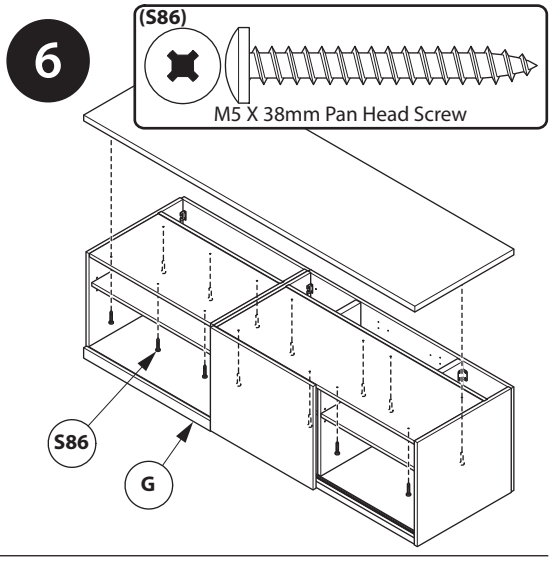

6
(S86)
M5 X 38mm Pan Head Screw
S86
G

CABLE CHAIN

1

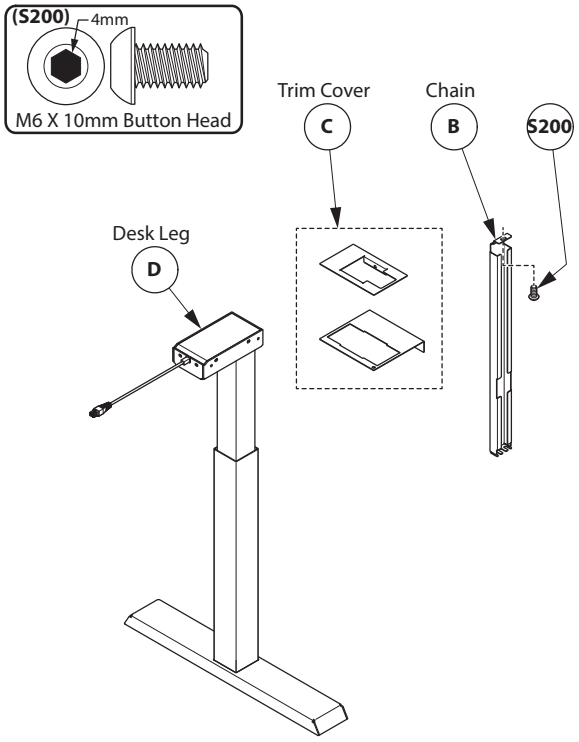


2

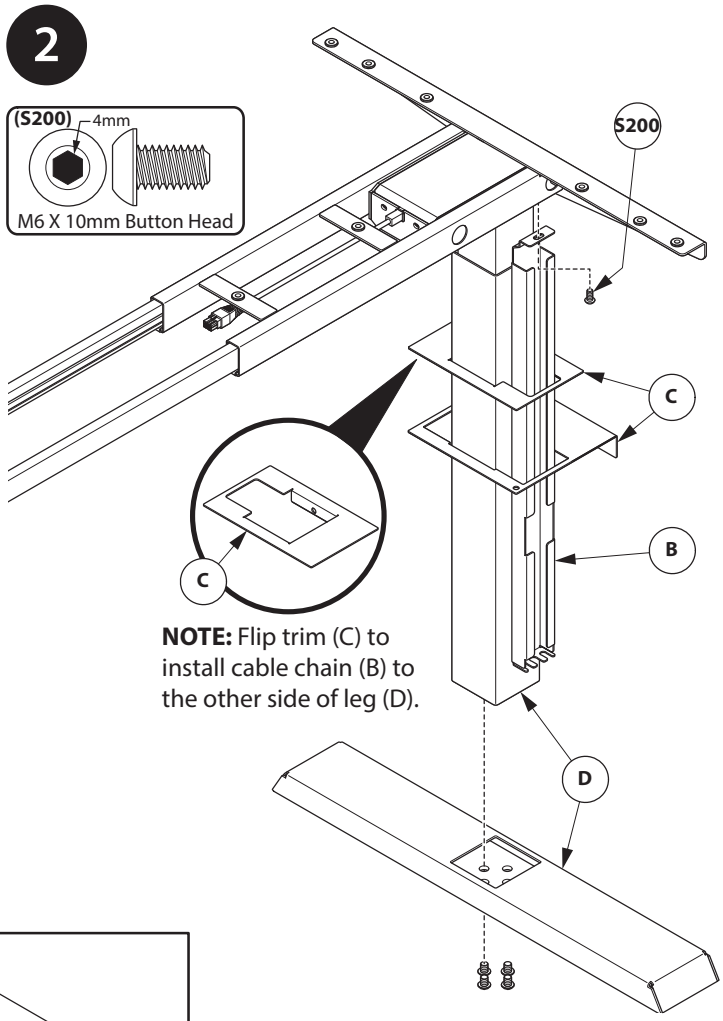


NOTE: Flip trim (C) to install cable chain (B) to the other side of leg (D).

3


NOTE: Position table and mark location on top as shown.

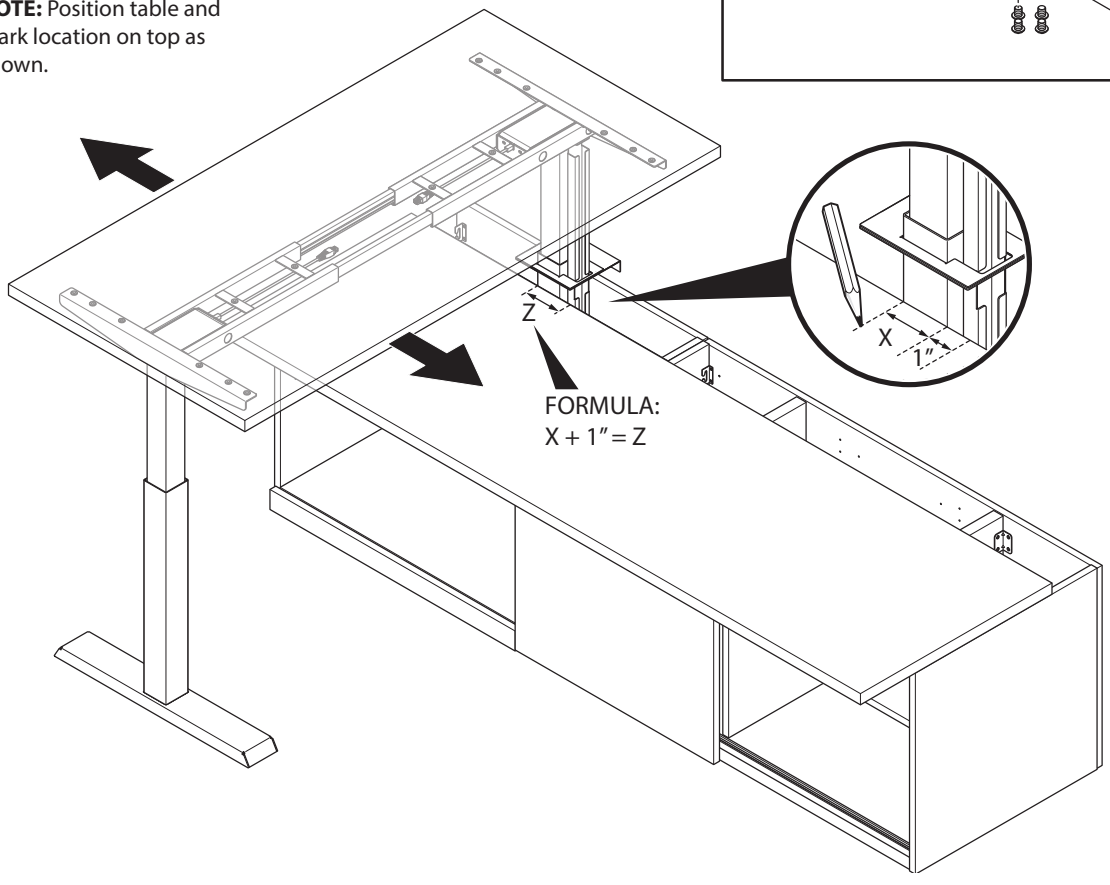


4

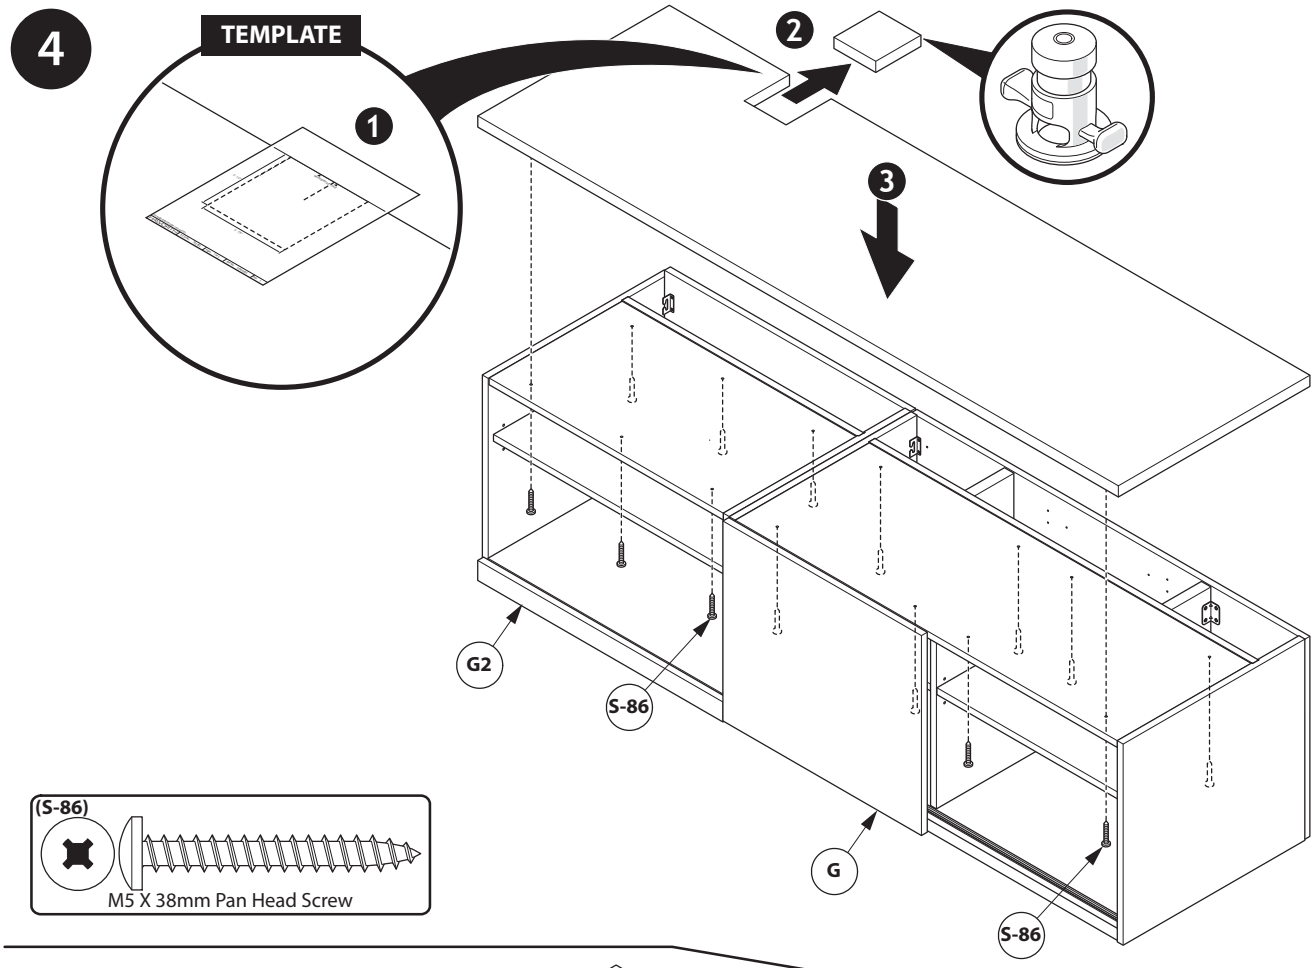

5

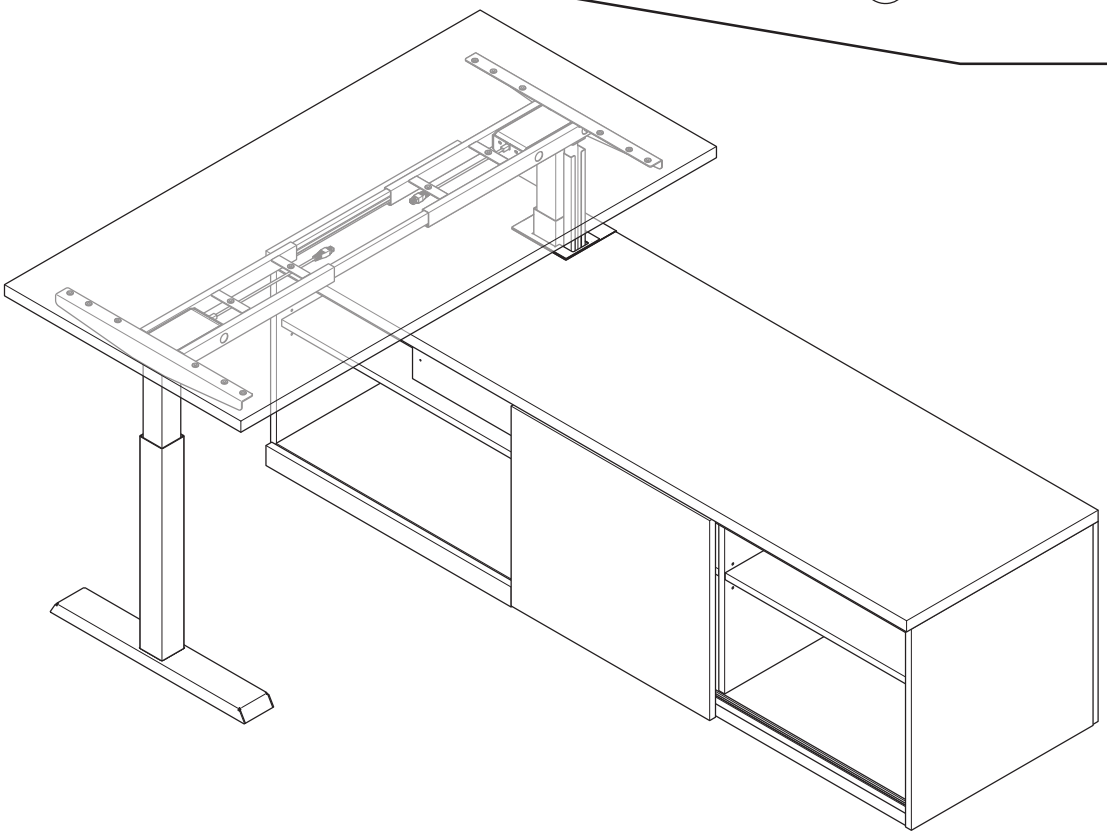

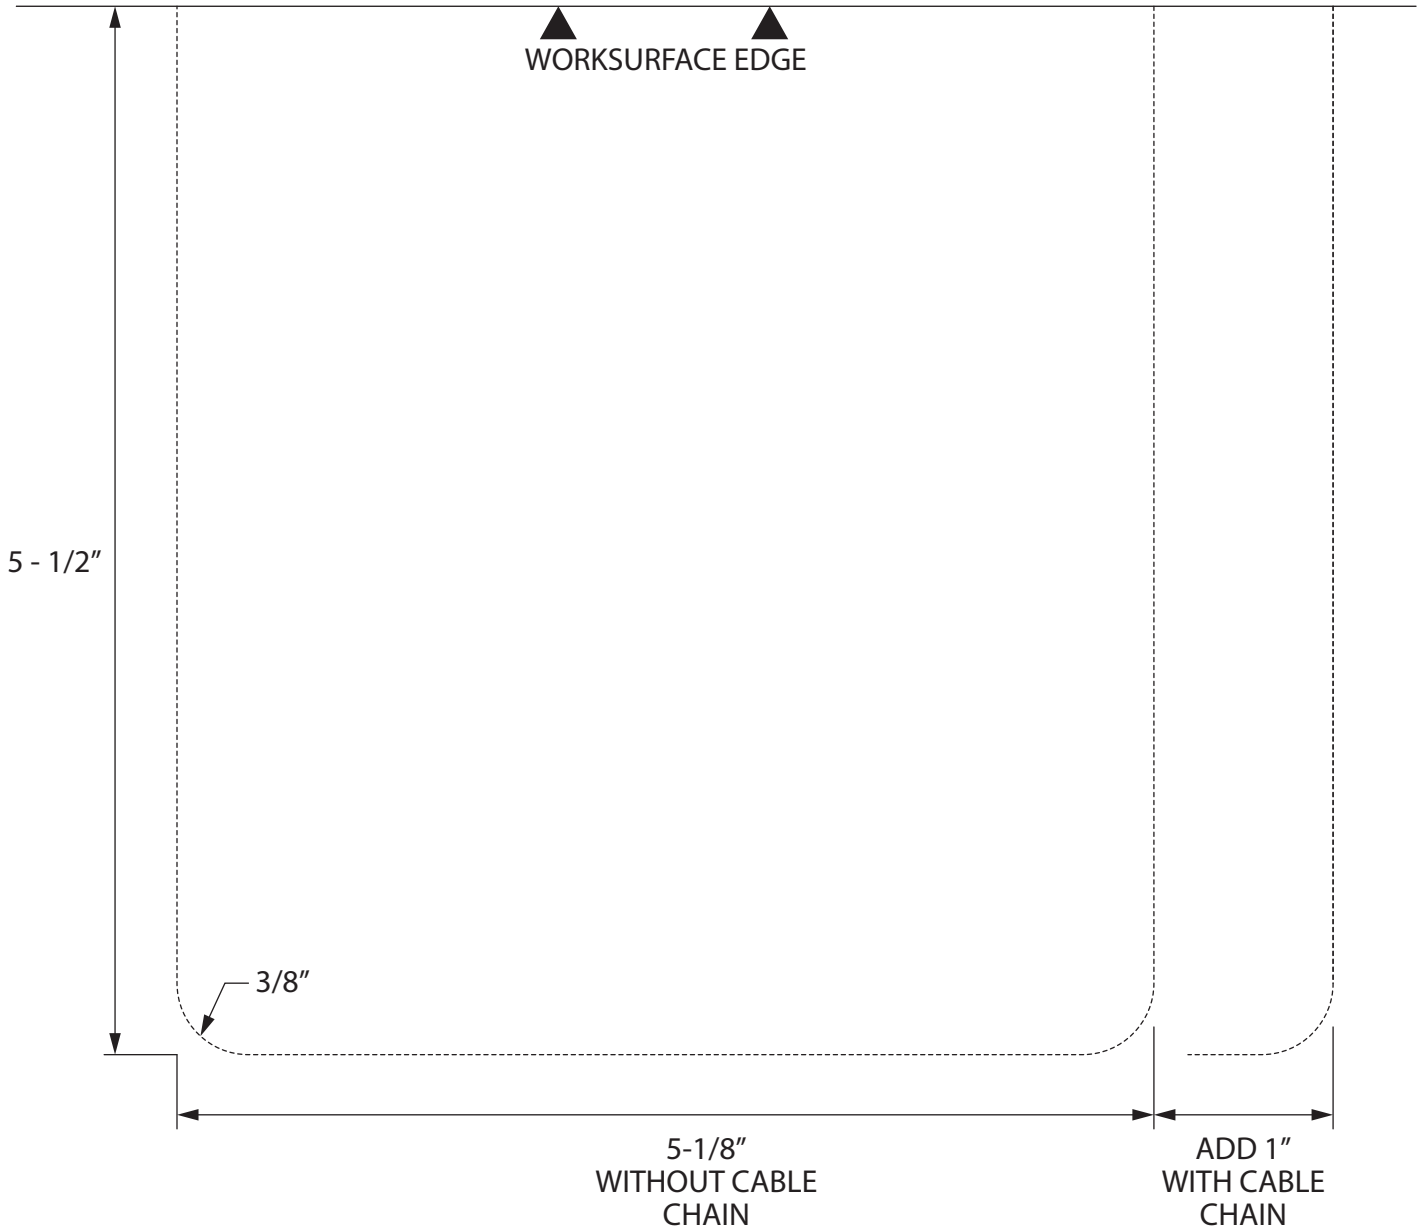
WORKSURFACE EDGE
5 - 1/2″
3/8″
5-1/8″
WITHOUT CABLE
CHAIN
ADD 1″
WITH CABLE
CHAIN