

TRIPOLI™ By SMED®

Executive U or L-shape Station

Installation Instructions


Tools Required

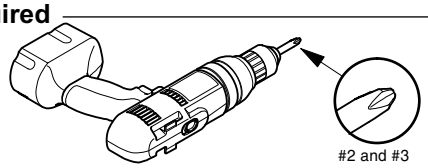


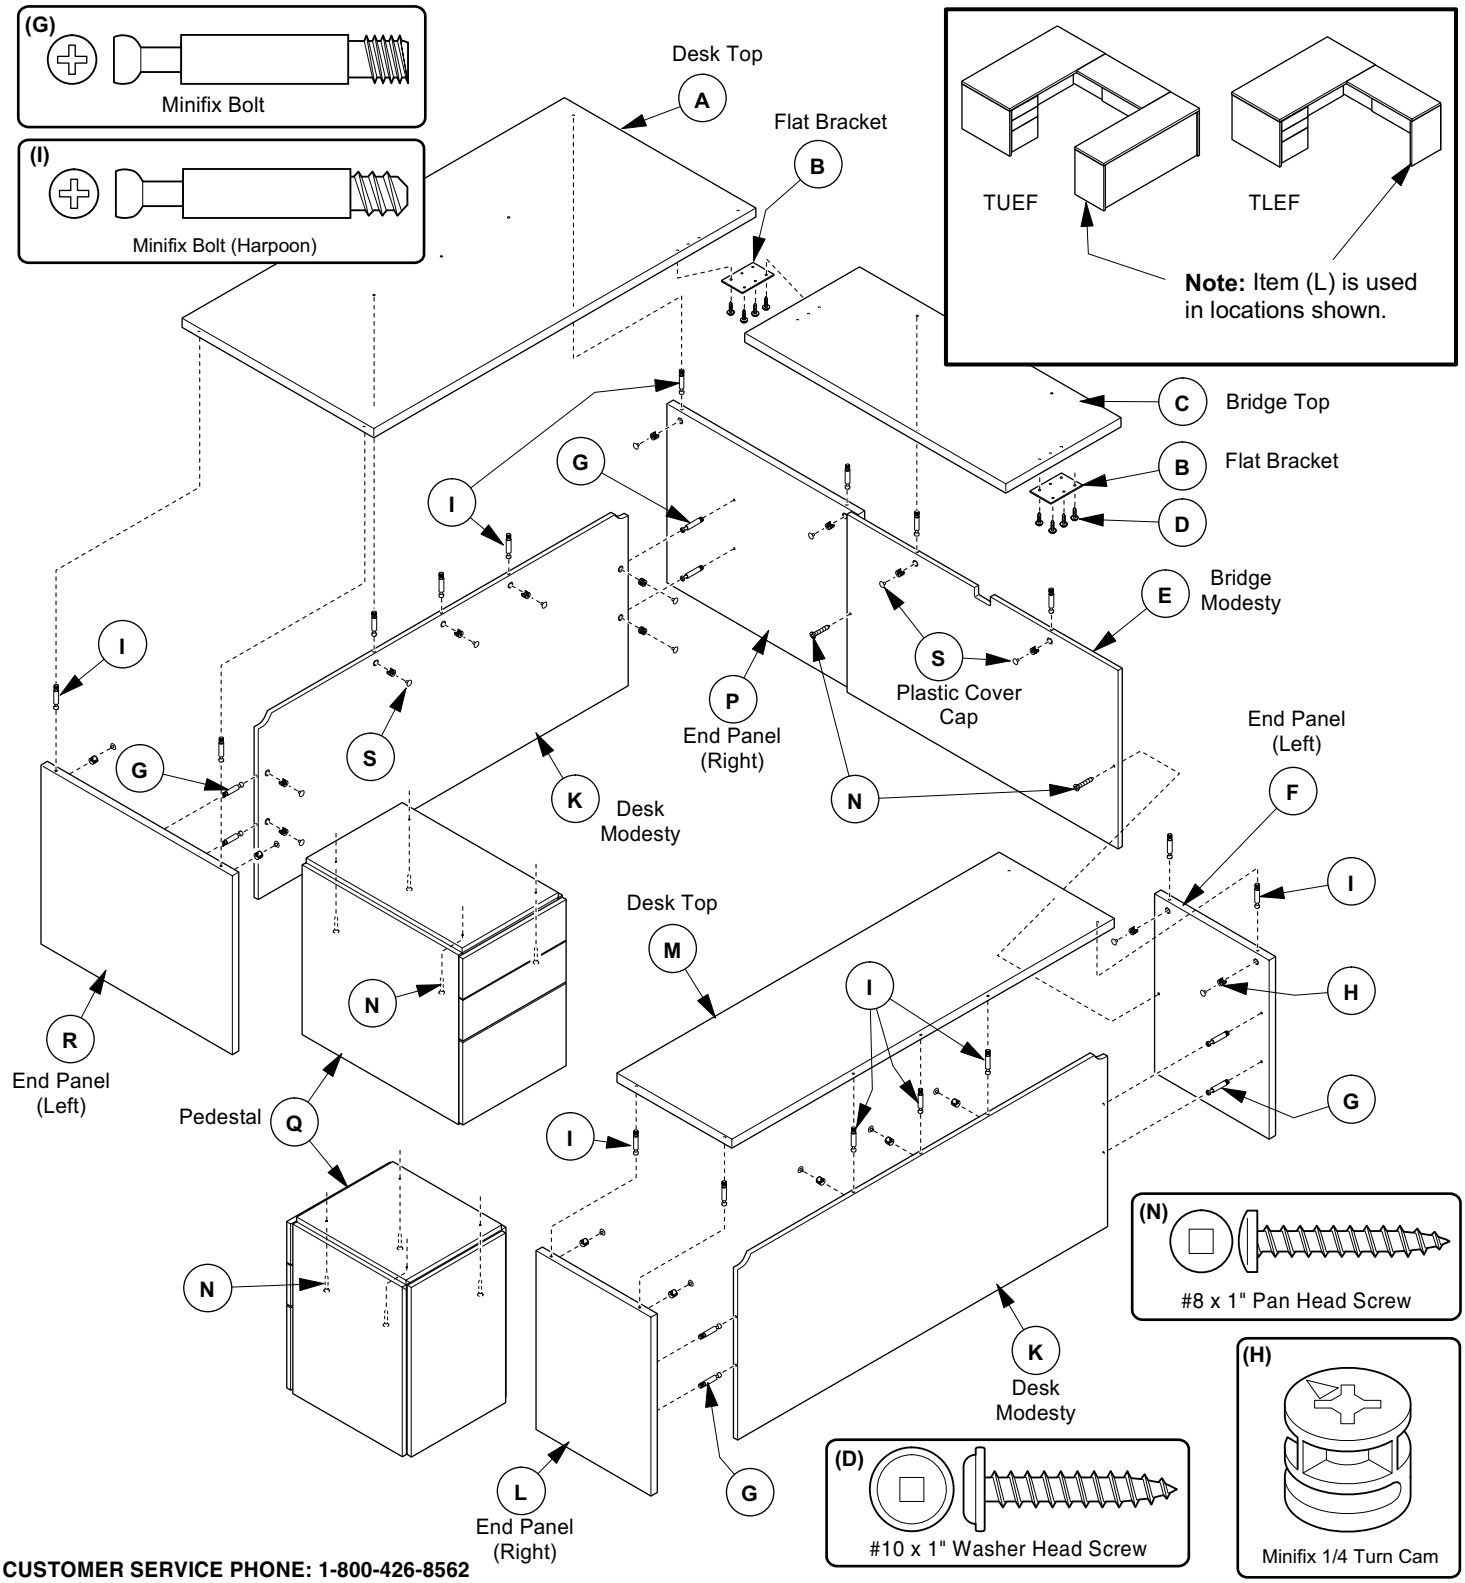


CUSTOMER SERVICE PHONE: 1-800-426-8562


1 Install harpoon bolts (I) into tops (A, C&M)

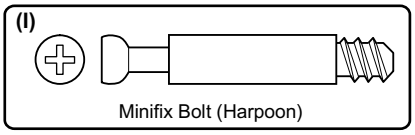

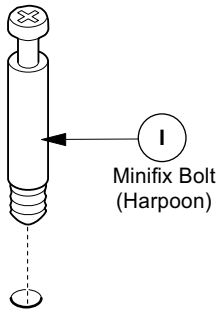

2 Install bolts (G) into modesty (E&K) and end panel (F,L,R&P)

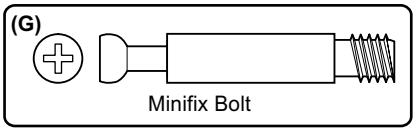


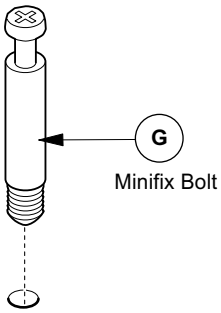


3 Install Cams (H)


NOTE!


Insert cams with open end pointing towards the nearest edge. Refer to **page 1** when locatiing items.

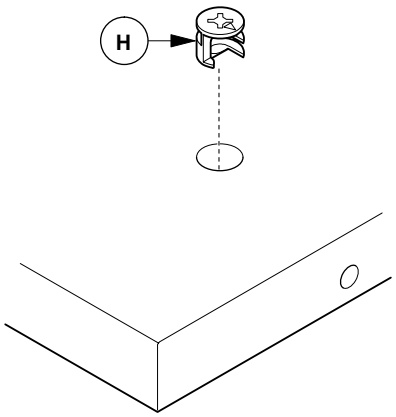

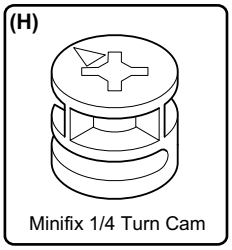



4 Assemble end panels (R&P and F&L) to modestys (K)

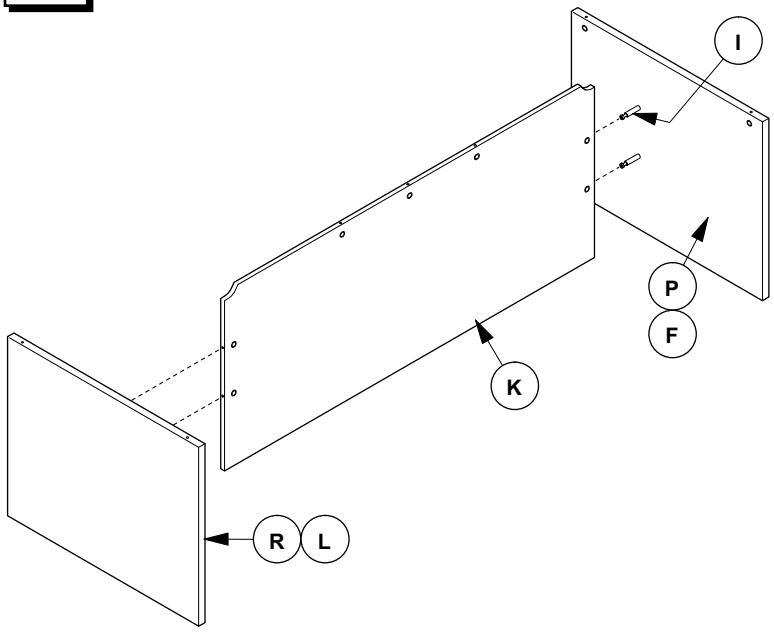


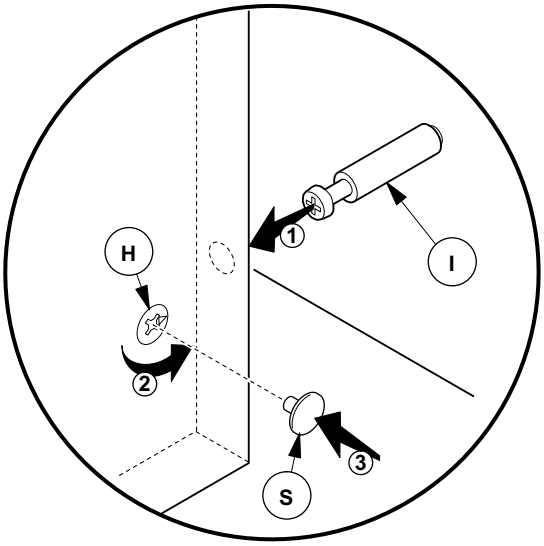


5 Assemble tops (A&M)

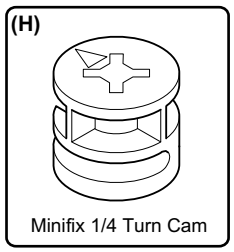


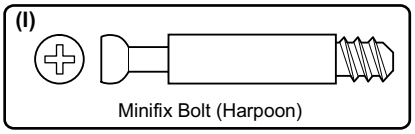

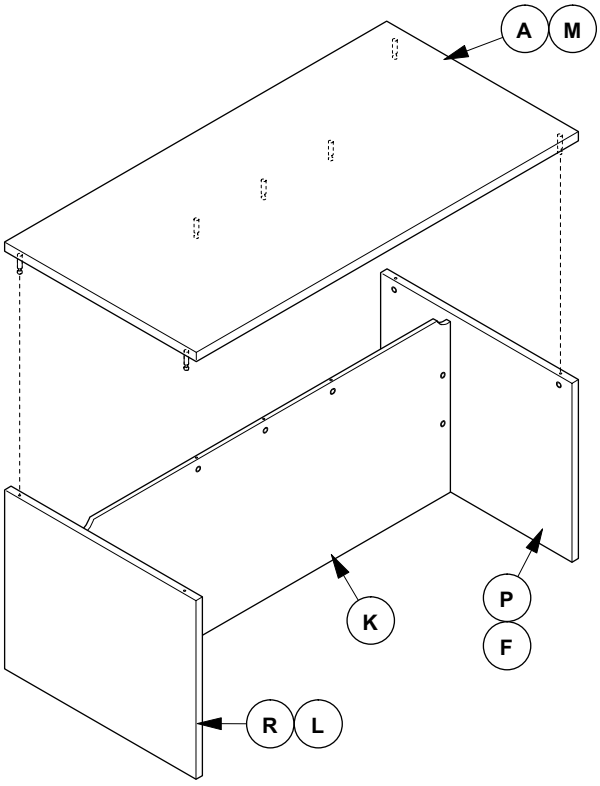


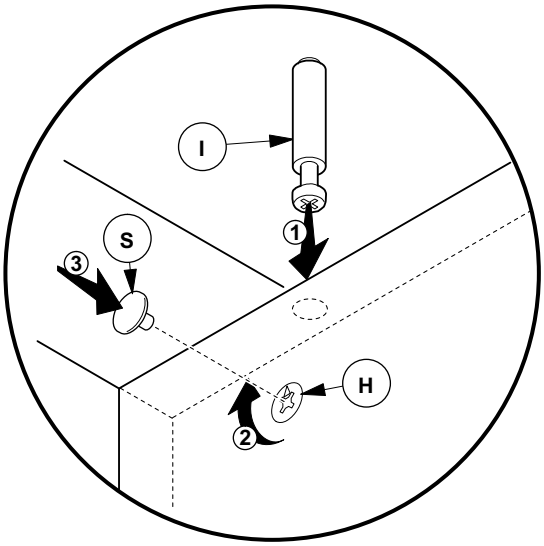


6 Assemble bridge top (C) to modesty (E)

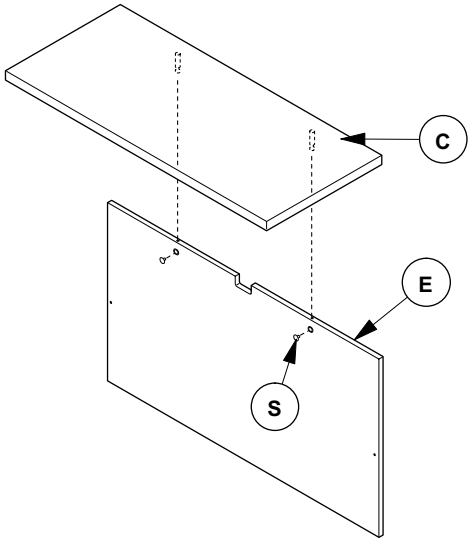

7 Assemble peds (Q) to tops (A&M)

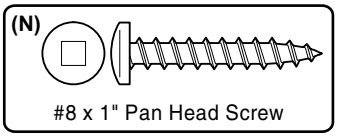


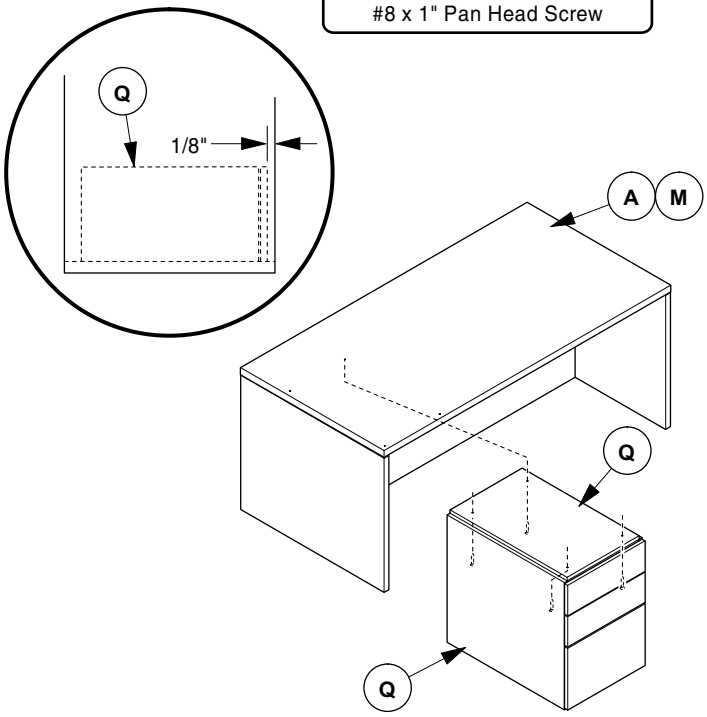



CUSTOMER SERVICE PHONE: 1-800-426-8562

8 Attach flat bracket (B) to tops (A,M&C)

9 Install screw (N)

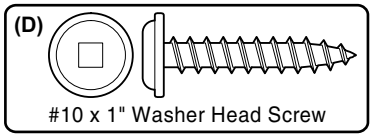


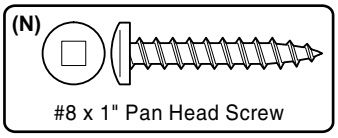


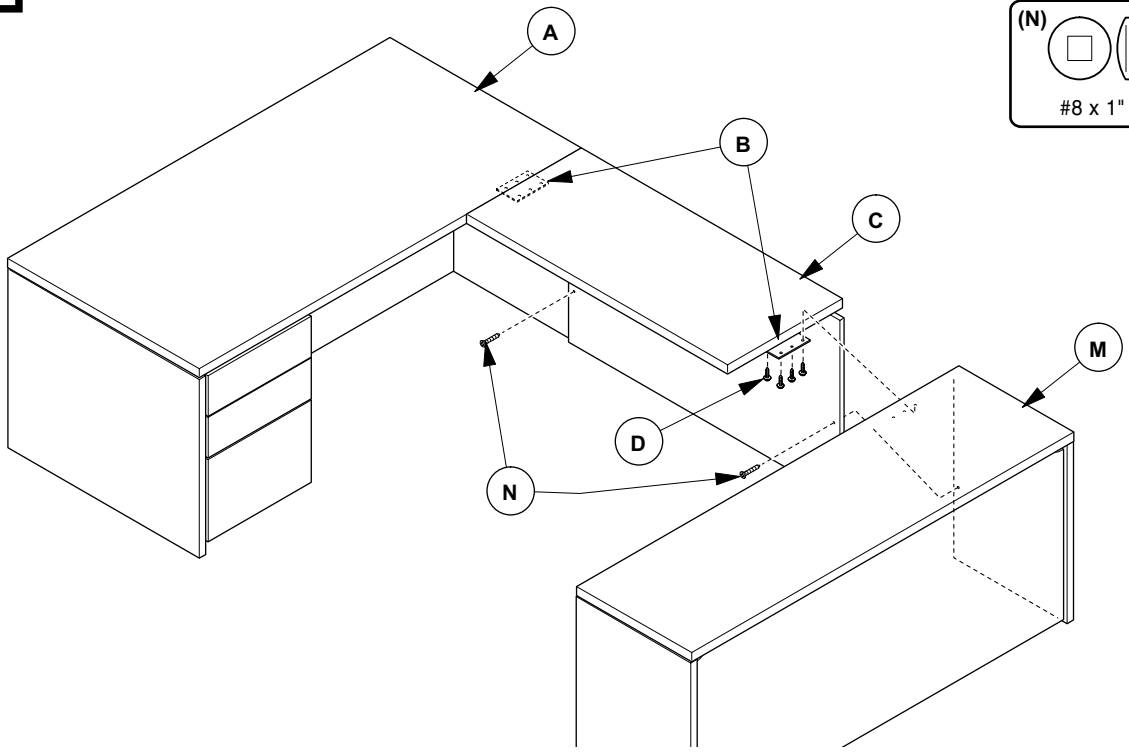


For L-shape stations only

10 Assemble end panel (L) to bridge top (C)

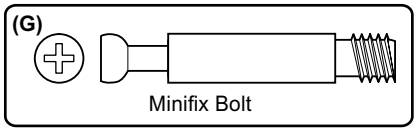

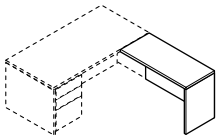

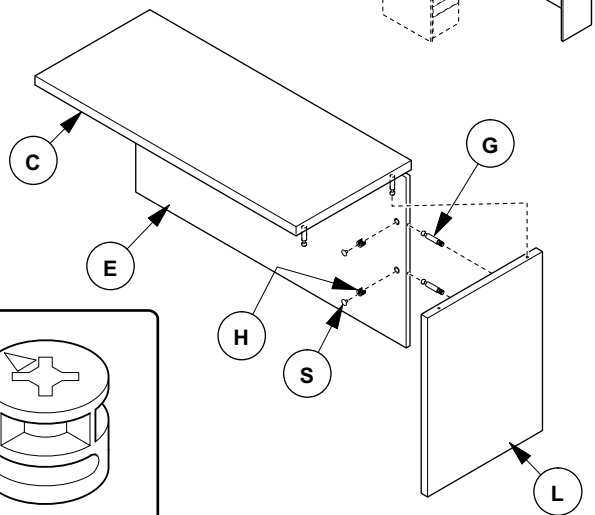

11 Attach flat bracket (B) to tops (A&F)

12 Install screw (N)

