

TRIPOLI™

Reception Desk

Installation Instructions

Tools Required

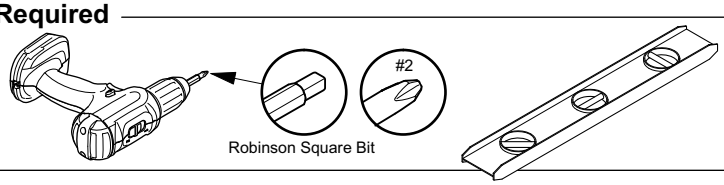

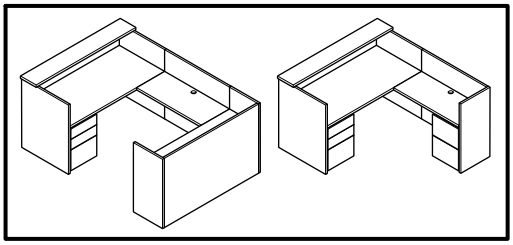

(E)
#14 x 1/2" Cross Recess
Shoulder Clip Screw

(D)
#8 x 5/8" Pan Head Screw

(D2)
#8 x 5/8" Flat Head Screw


Reception Top
A
E
C Bracket
D2
F End Panel (Right)
E
Bridge Panel
G
E
Side Panel
J
D
E
End Panel (Left)
H
M
T
Desk Top
D
S
Bridge Top
Flat Bracket
R
Desk Top
P
W
End Panel (Left)
Gallary Bracket
V
U
Pedestal
E
J Side Panel
End Panel (Right)
K
E

(V)
#8 x 1.25" Pan Head Screw


CUSTOMER SERVICE PHONE: 1-800-426-8562

1 Assemble end panels (F&W and H&K) to panels (J)

(E) #14 x 1/2" Cross Recess Shoulder Clip Screw

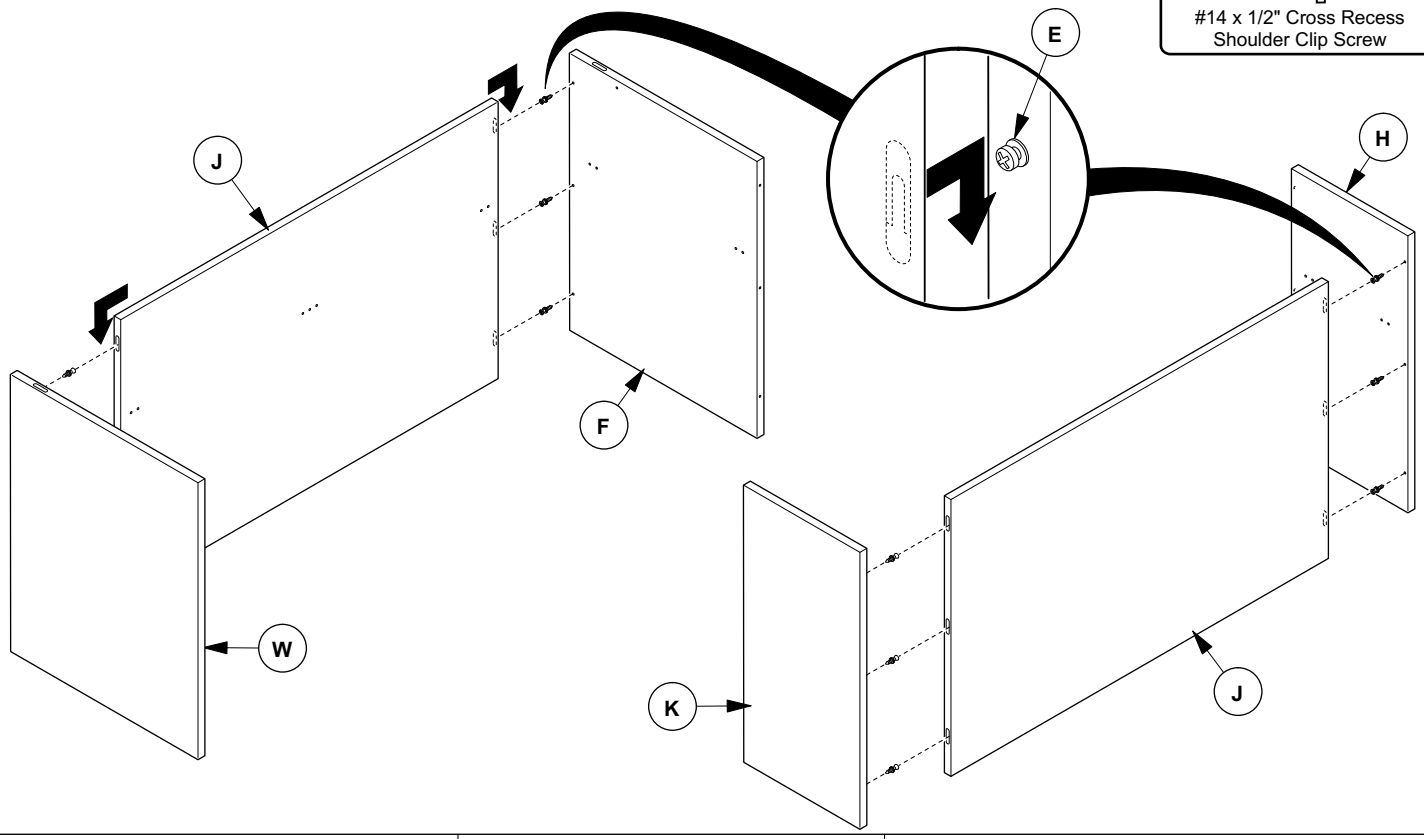


2 Attach brackets (M)

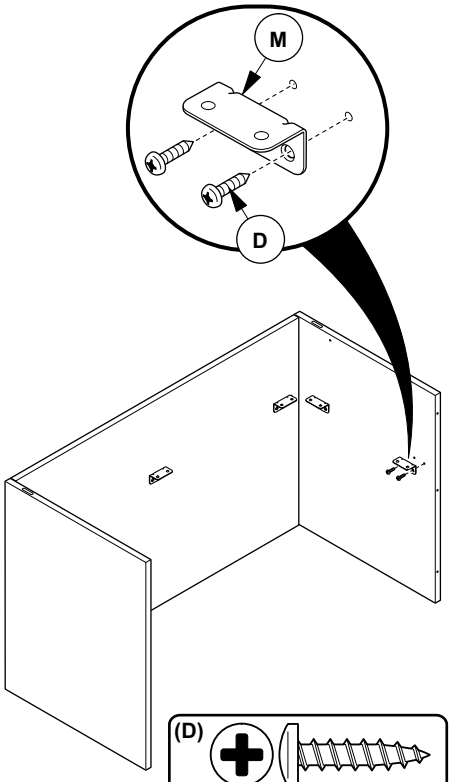


(D) #8 x 5/8" Pan Head Screw

3 Remove drawers (U)

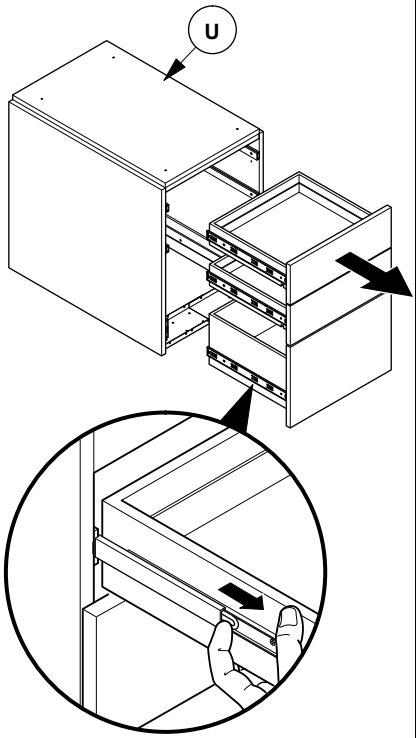


4 Install ped (U)

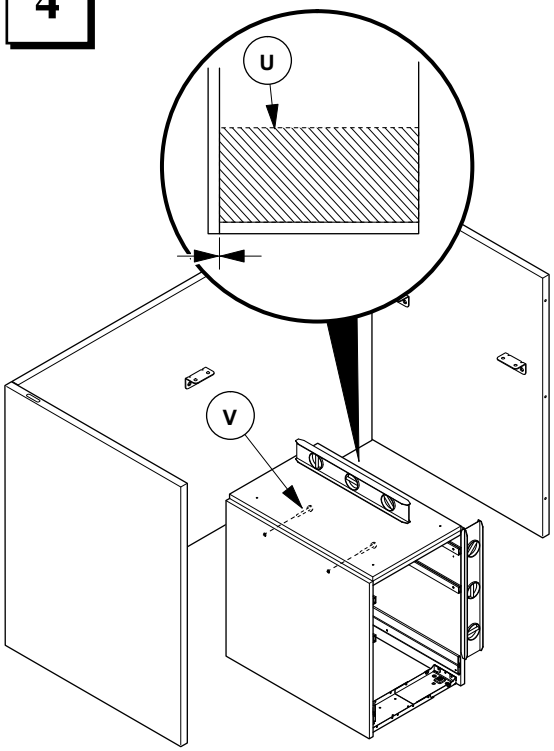

(V) #8 x 1.25" Pan Head Screw

CUSTOMER SERVICE PHONE: 1-800-426-8562

5 Install tops (P&T)

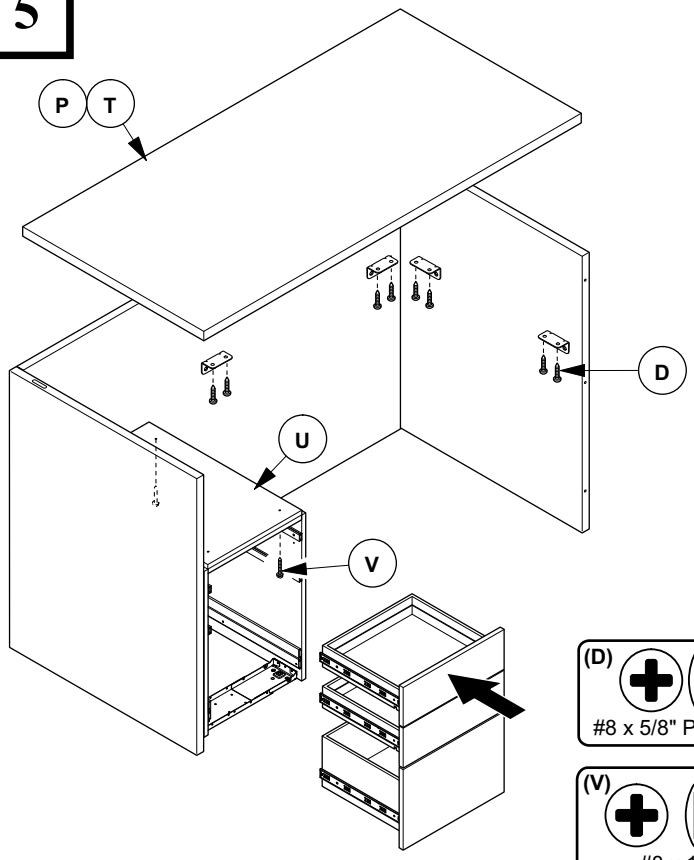


(D)
#8 x 5/8" Pan Head Screw


(V)
#8 x 1.25" Pan Head Screw

6 Install brackets (J)

(D)
#8 x 5/8" Pan Head Screw

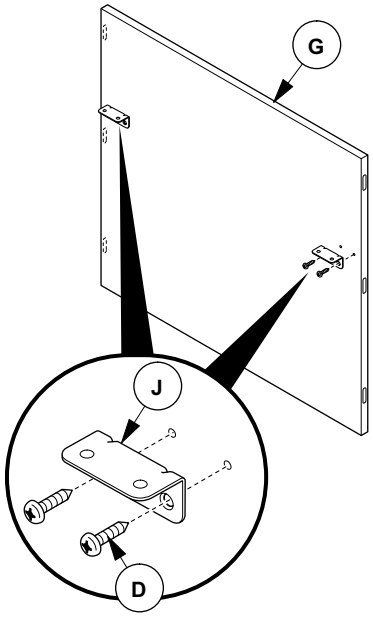


6 Install panel (G)

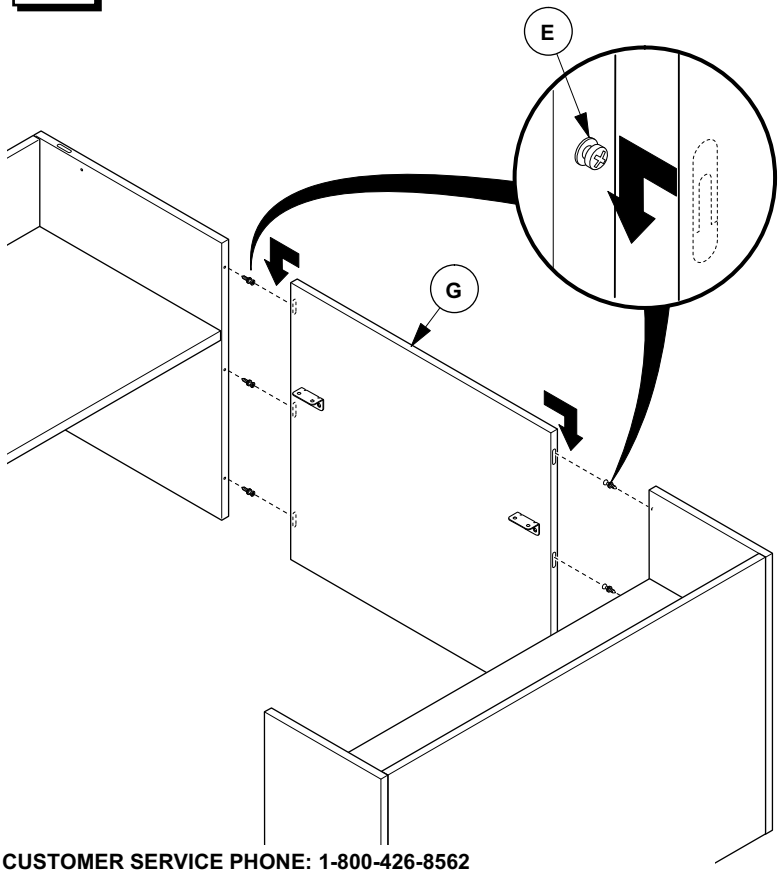

7 Install bridge top (S)


(D)
#8 x 5/8" Pan Head Screw

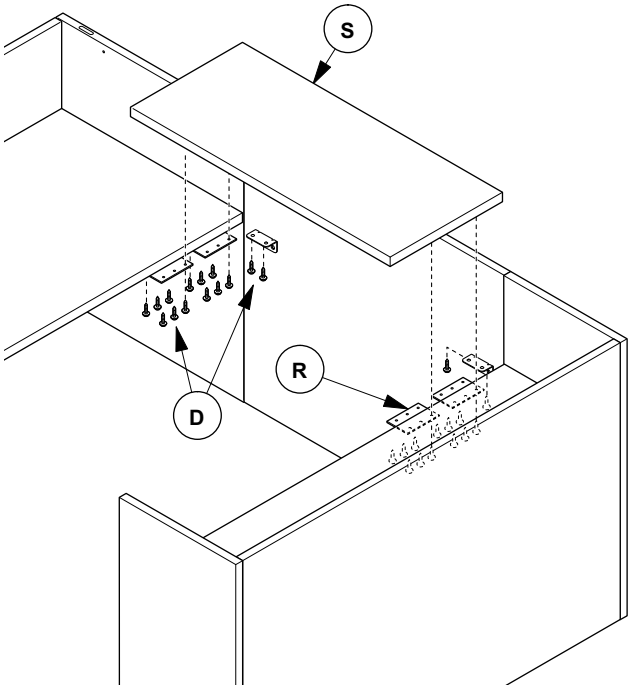

CUSTOMER SERVICE PHONE: 1-800-426-8562

8 Attach bracket (C)

(D2)
#8 x 5/8" Flat Head Screw

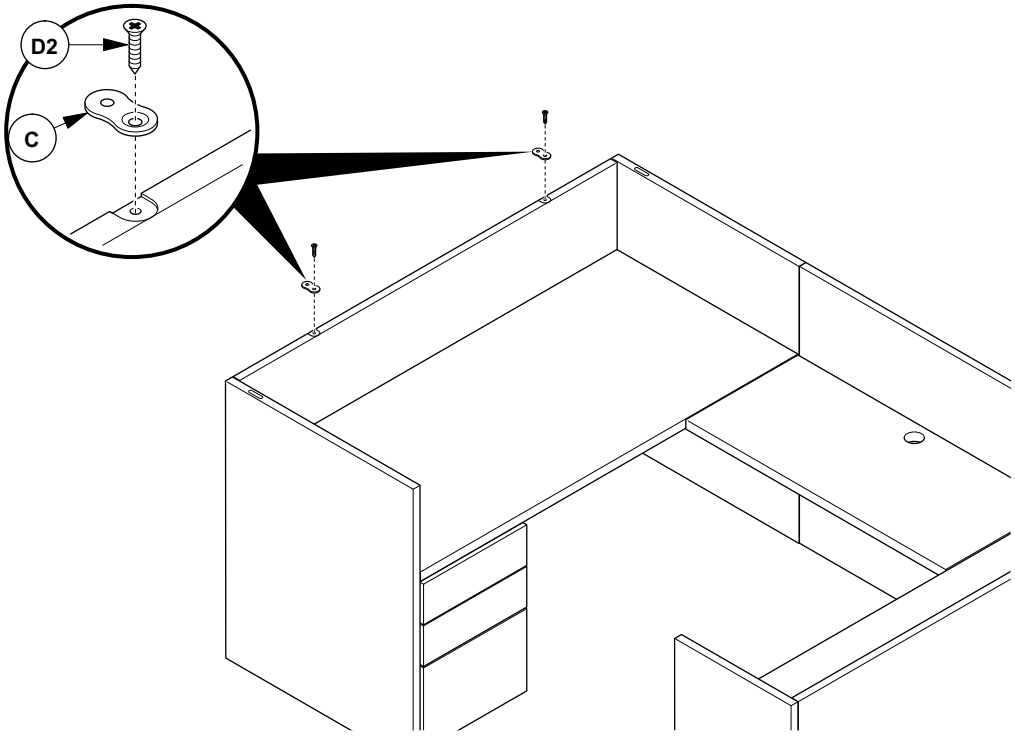

9 Install reception top (A)

(D2)
#8 x 5/8" Flat Head Screw

(E)
#14 x 1/2" Cross Recess
Shoulder Clip Screw

