
TRIPOLI™


Corner Desk

Installation Instructions

Tools Required

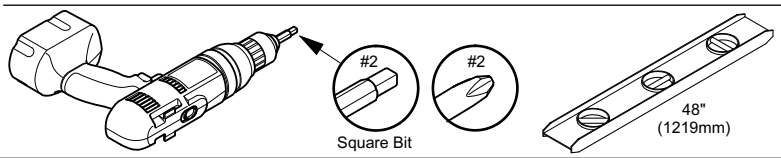


(E)

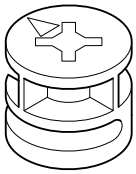

Minifix 1/4 Turn Cam

(C)

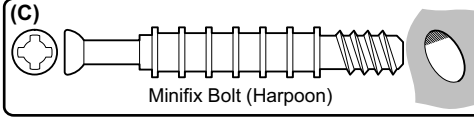


Minifix Bolt (Harpoon)


(B)




Dowel Pin

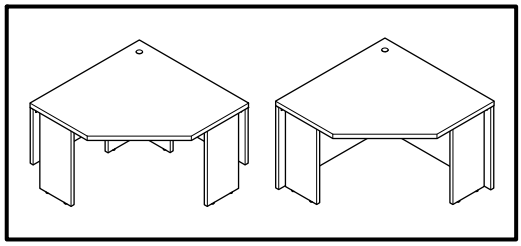

Desk Top

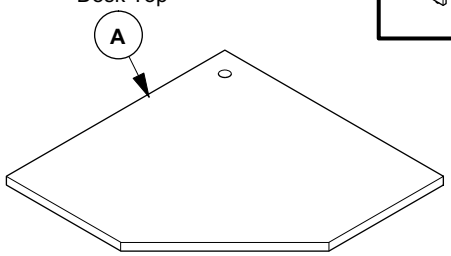

HALF MODESTY

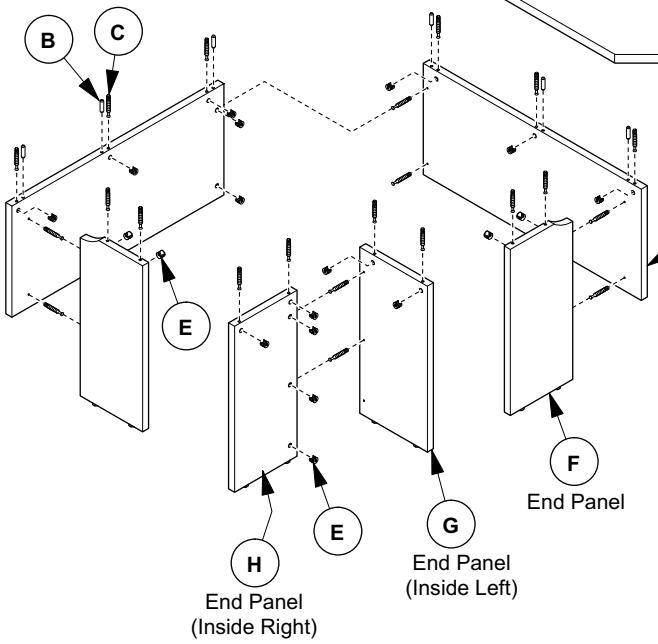


Modesty Panel




OR


FULL MODESTY

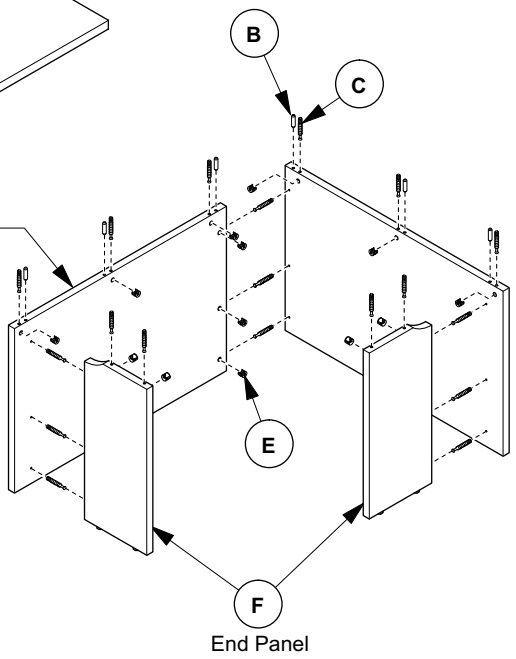

1 **Install Cams (E)**

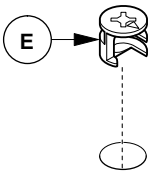


NOTE: Insert cams with open end pointing towards the nearest edge.

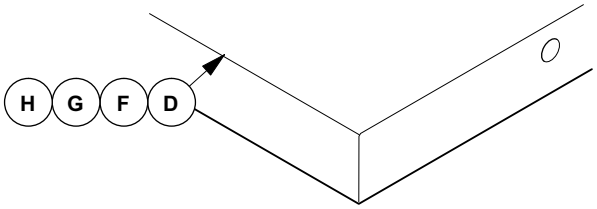


2 **Install bolts (C) into top (A)**

3 **Install dowels (B) into top (A)**

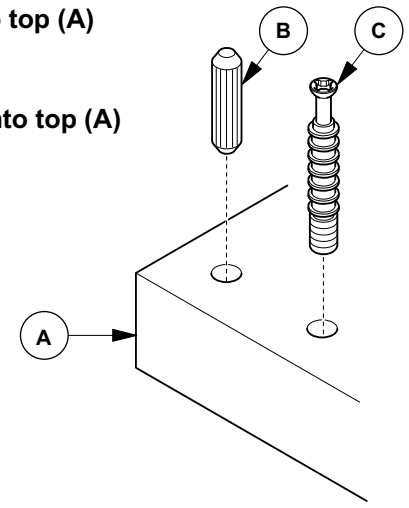


CUSTOMER SERVICE PHONE: 1-800-426-8562

4 Install modesty panels (D) to end panels (F)

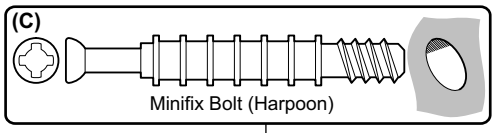


HALF MODESTY

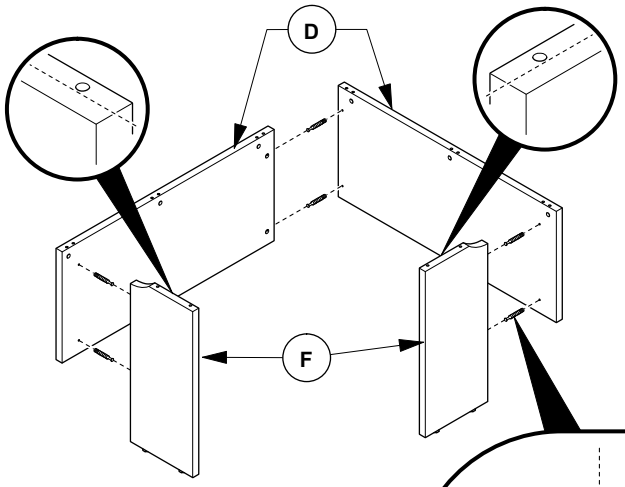



OR


FULL MODESTY

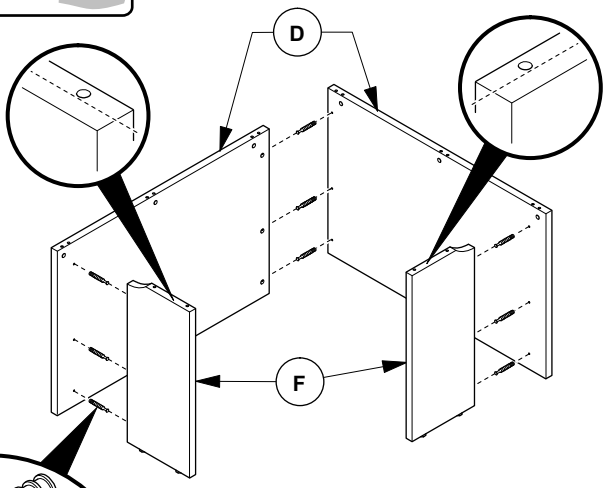


5 Install inner panels (G&H)

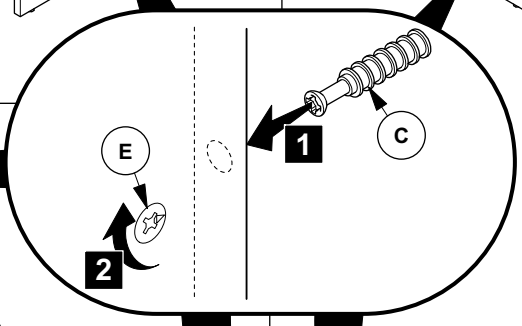

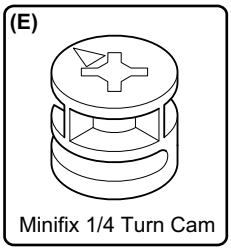


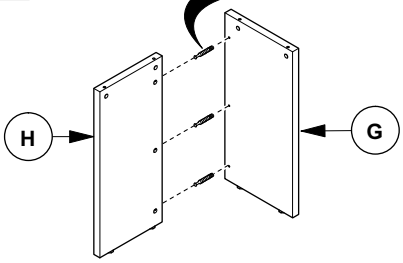



6 Install top (A)

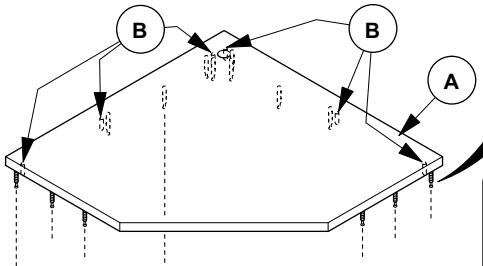


OR

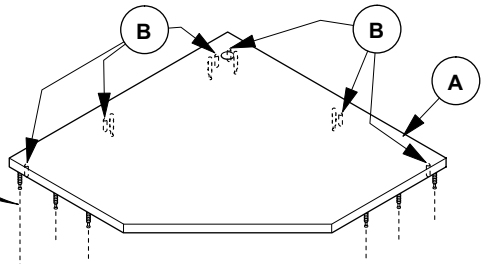


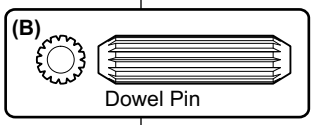

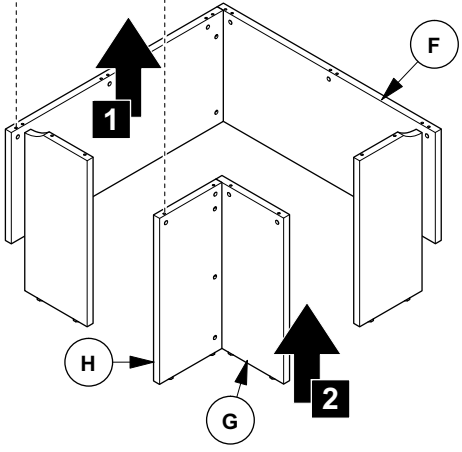

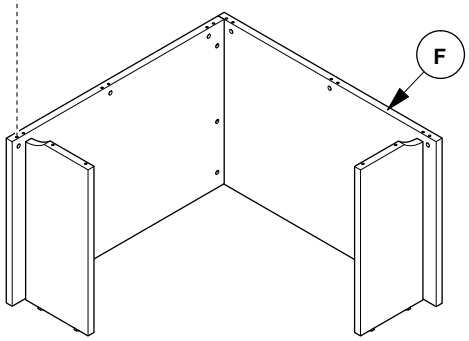

7 Adjust glide (J) to level

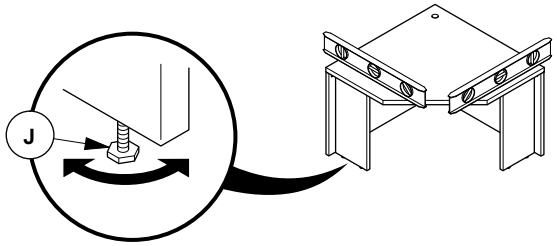

CUSTOMER SERVICE PHONE: 1-800-426-8562