

VARIA™ By SMED®

D-Top/P-Top Extension


Installation Instructions

Tools Required

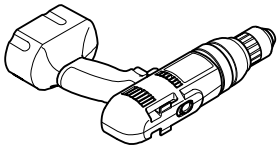





Robinson Square Bit

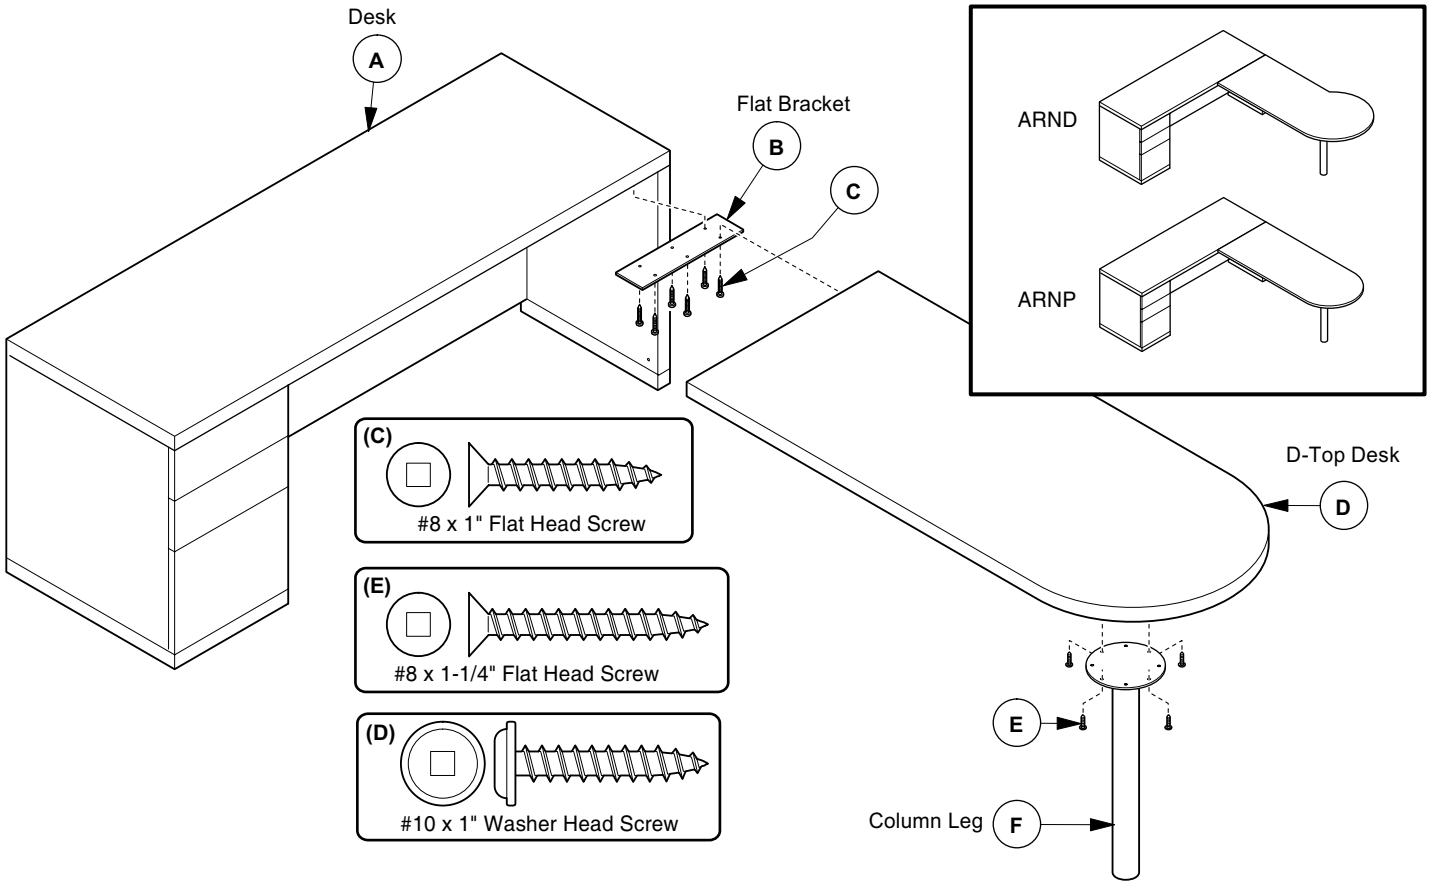

1 **Install leg (F)**

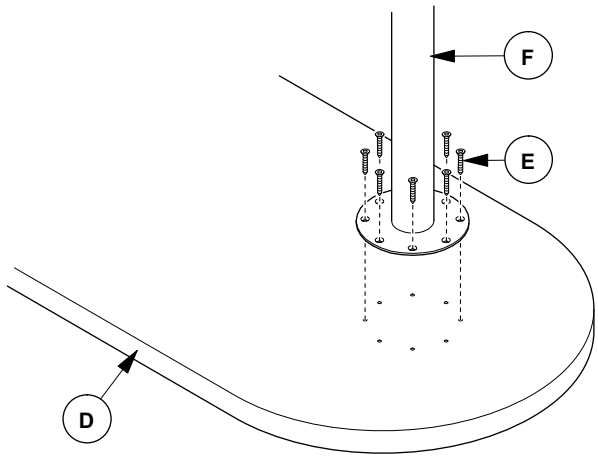

2 **Install flat bracket (B) to tops (A&D)**

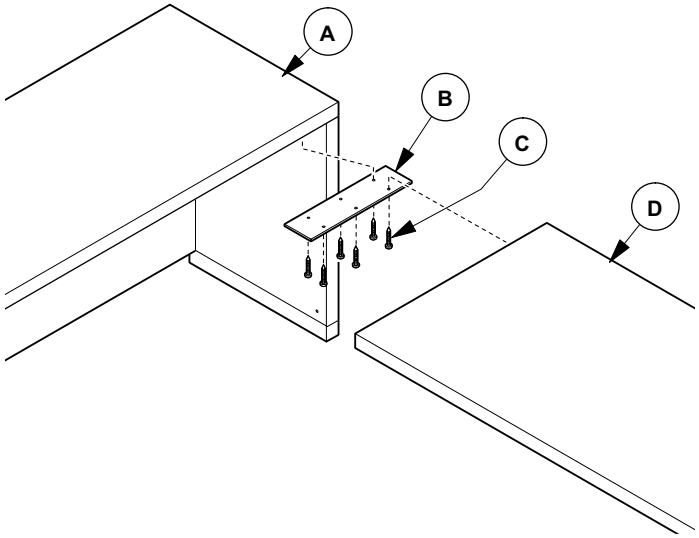

CUSTOMER SERVICE PHONE: 1-800-426-8562