

VARIA™

X / L / Cylinder Base Tables


Installation Instructions


Tools Required






Robinson Square Bit




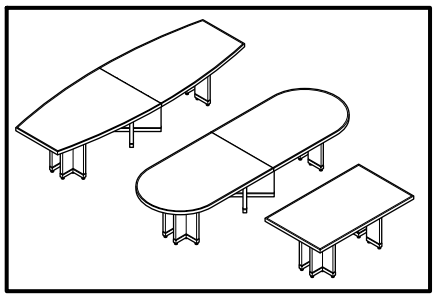


L - BASES

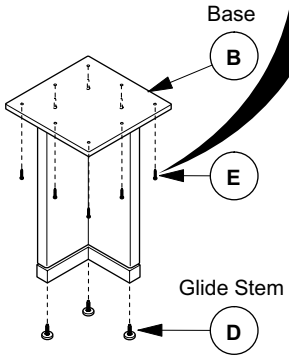


X - BASES

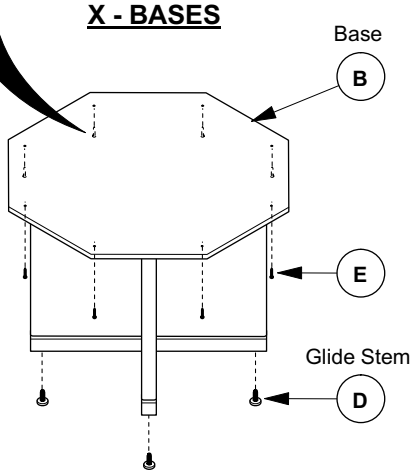

CYLINDER - BASES

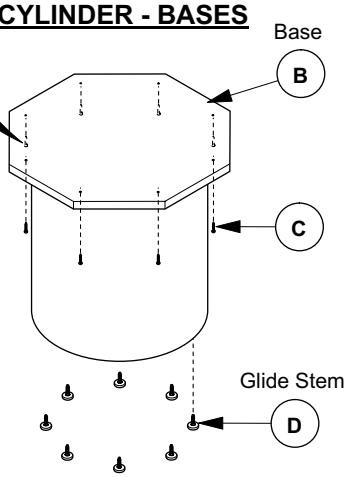


1 Install glide stems (D)

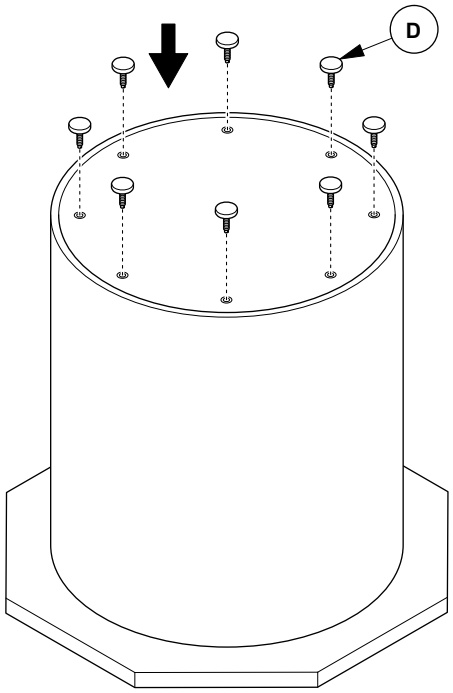

2 If necessary install tops (A) together


NOTE: Before tightening joint connector use plywood and C-clamp to keep worksurfaces flush. Shoulder of connecting rod should be inside the double slotted retaining ring.

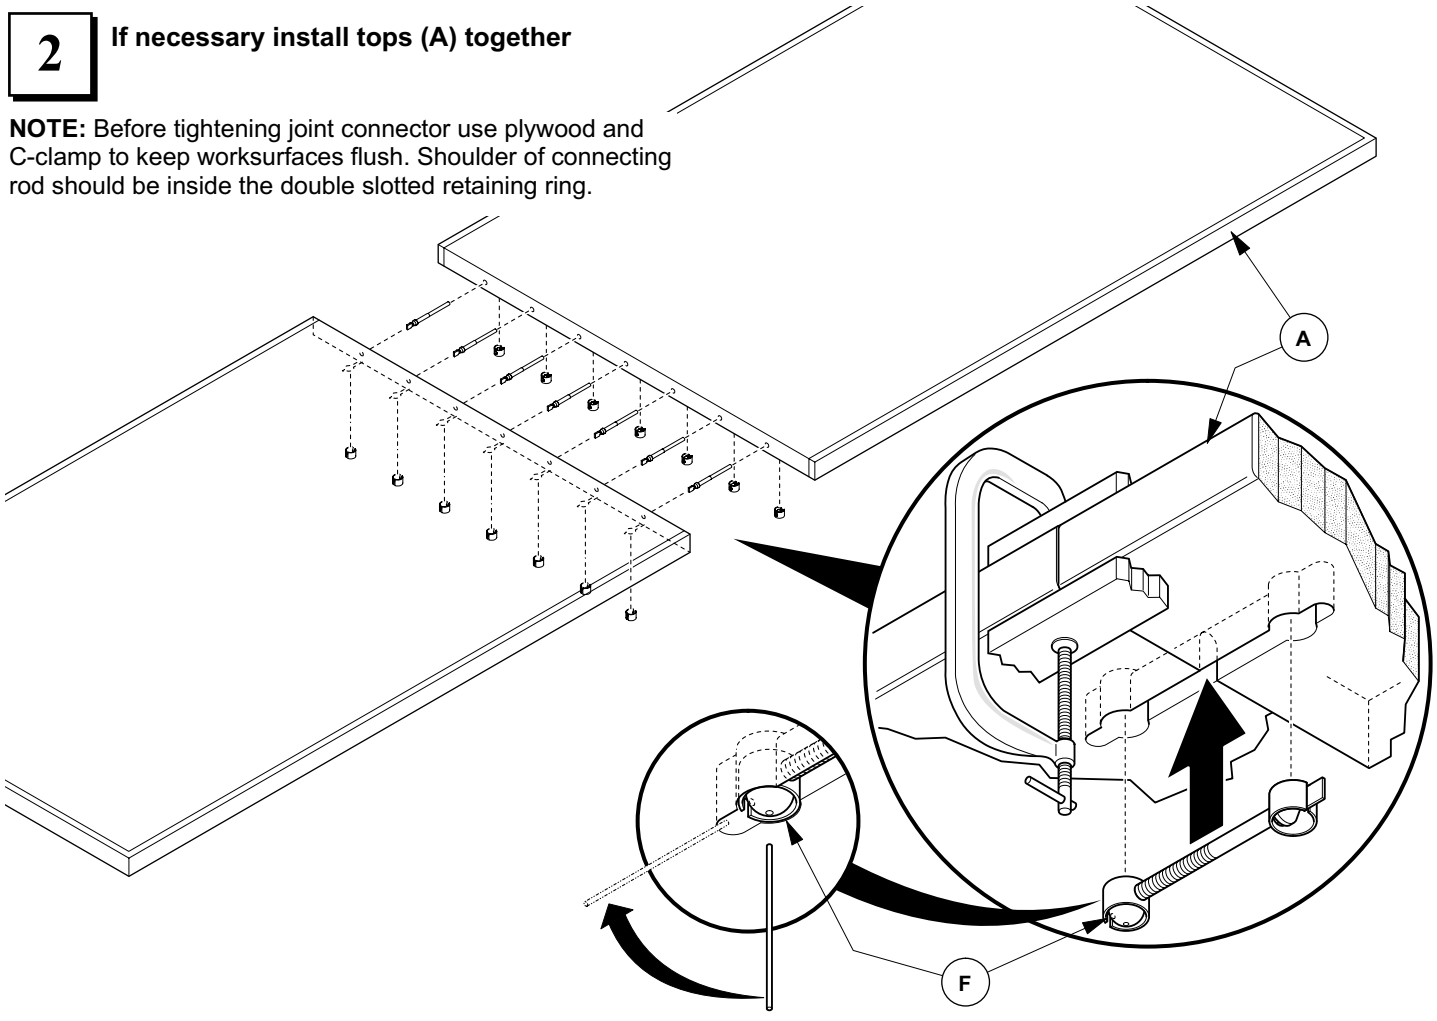



3 Install L-bases (B)


4 Adjust glides (D) to level


FOR L - BASE ASSEMBLY

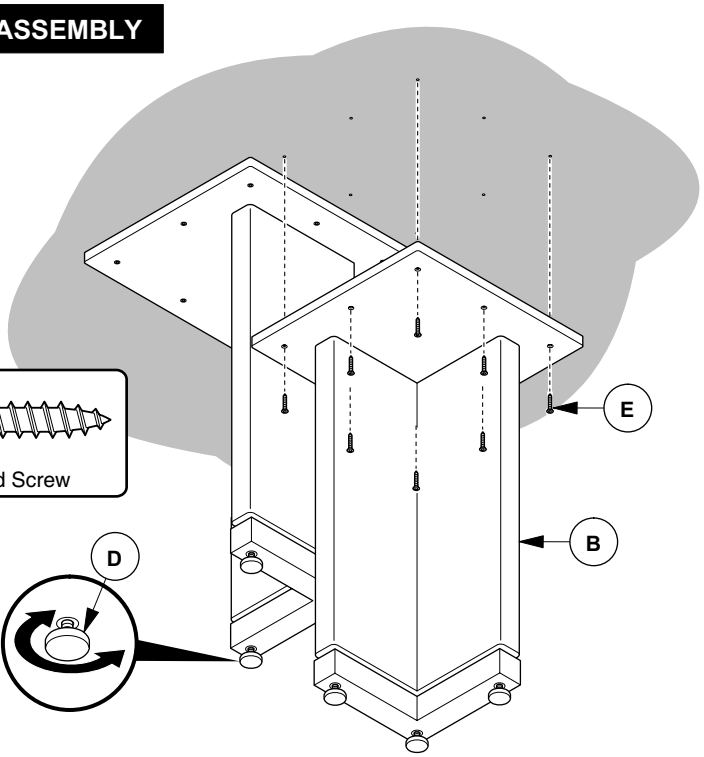


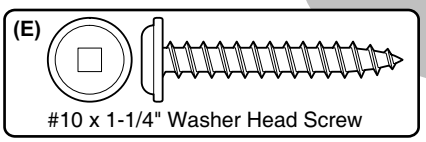


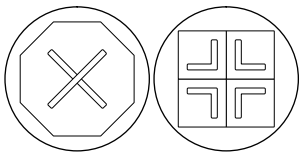

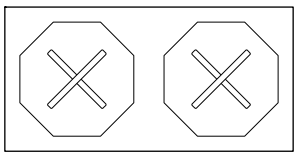

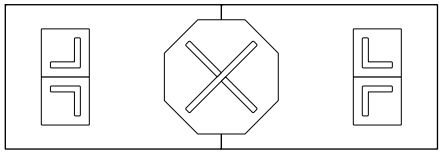


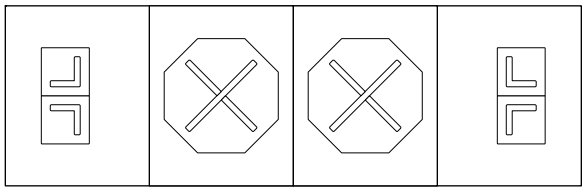


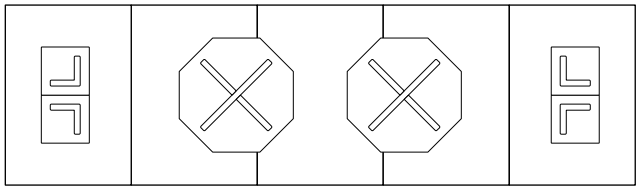

OR

FOR X - BASE ASSEMBLY

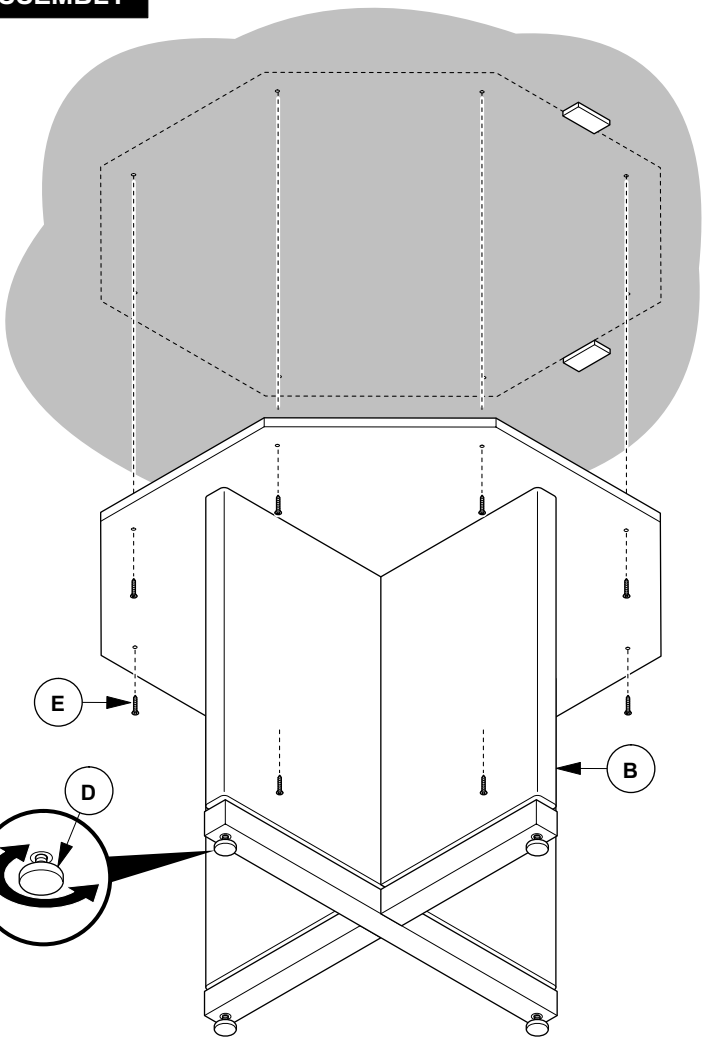

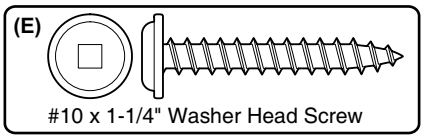

FOR CYLINDER BASE ASSEMBLY

