
YORK®

Wall Mounted Overhead Storage


Installation Instructions

Tools Required

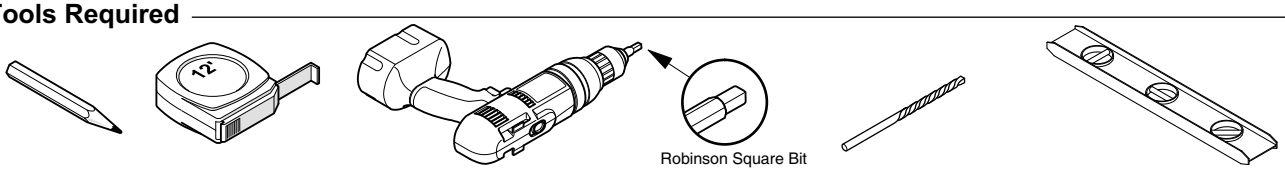

NOTE: The customer must ensure that the structural integrity of the wall is sufficient to support the wall mounted product. The customer is responsible for any and all reinforcing to the wall. Haworth recommends that Architects and or Engineers be consulted where appropriate. All hardware should be securely fastened to the studs in the load bearing wall.

NOTE: Due to the varying wall construction, fasteners are not included. Use fasteners designed for the wall construction.

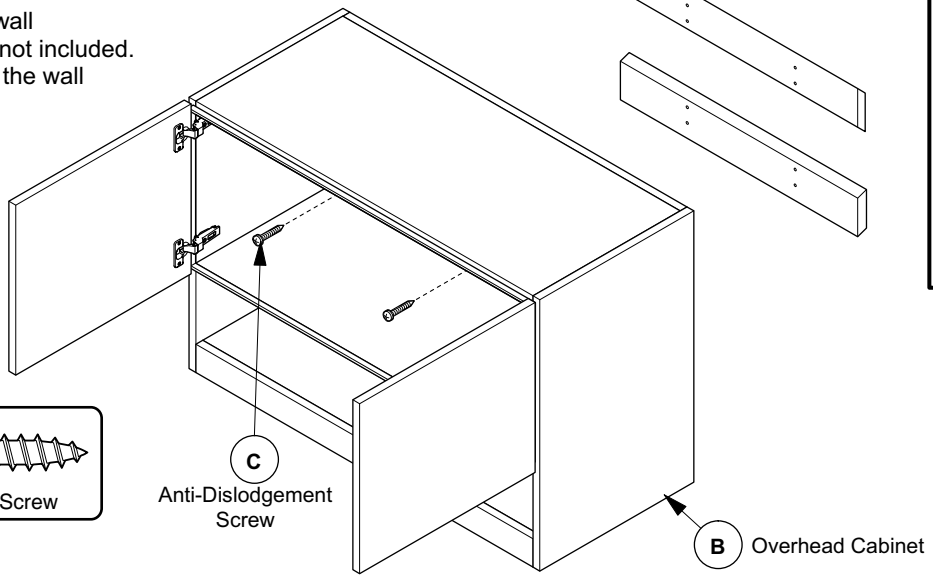


1 Install horizontal bar (A)

NOTE: Mounting of the Plywood French Cleat **(A)** to the wall must be in accordance with local building code standards. For example Haworth performed certification testing by mounting the Plywood Cleat to the wall using 2- #10 x 3" Flat Head wood screws per stud. Two 3mm (1/8") pilot holes were drilled vertically into each metal stud (16" centers) and wood screws secured plywood french cleat **(A)** to the wall.


Installers must ensure that the head of the screw does not protrude from the plywood french cleat.

NOTE: Minimum size of fasteners should be a #10 engaged at least 1" deep into studs.

FOR 24.6" TALL UNITS

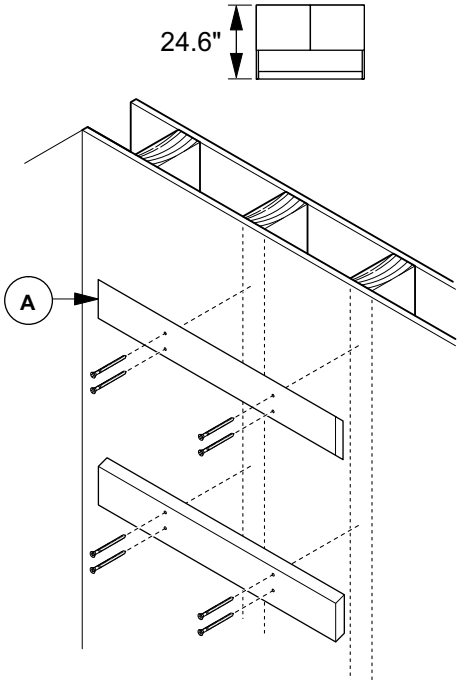

FOR 33.6" TALL UNITS

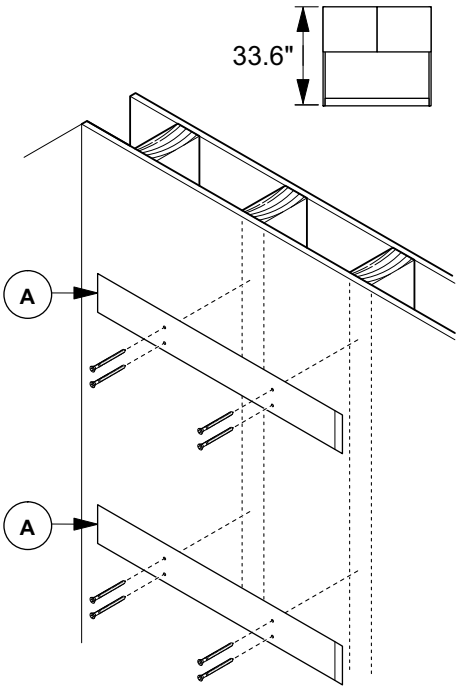


CUSTOMER SERVICE PHONE: 1-800-426-8562

2 **Remove Doors (see below)**


3 **Install overhead cabinet (B) and Anti-dislodgement screws (C)**

NOTE: For units with two cleat bars **(A)** only the top bar requires Anti-dislodgement screws **(C)**.


NOTE: Unit hangs on top Cleat **(A)**. Lower Cleat is to be mounted 1/4" up from the bottom of the unit.

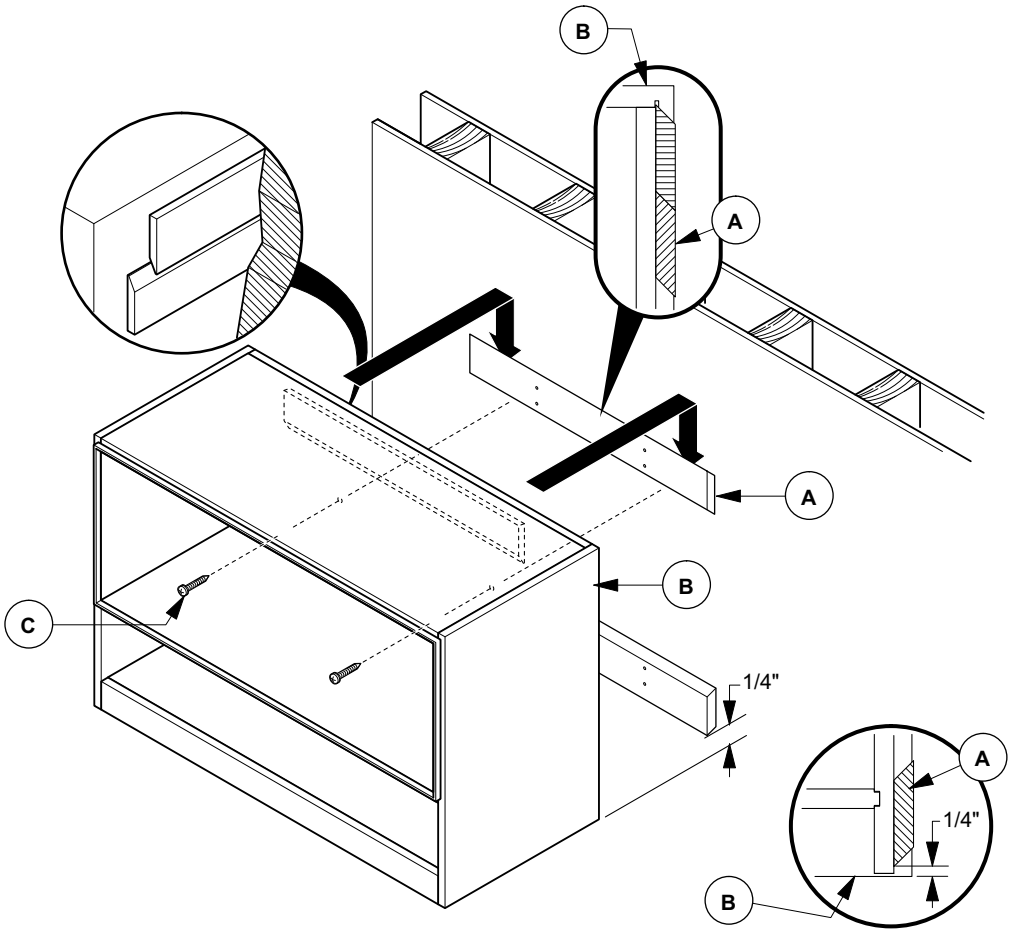

DOOR INSTALLATION/REMOVAL

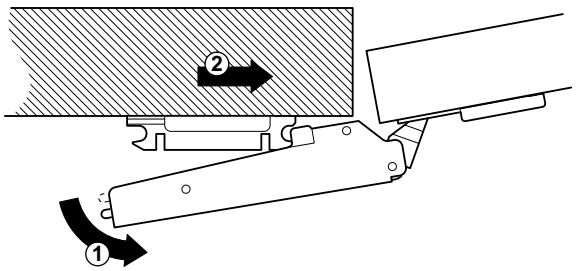

DOOR HINGE ADJUSTMENT

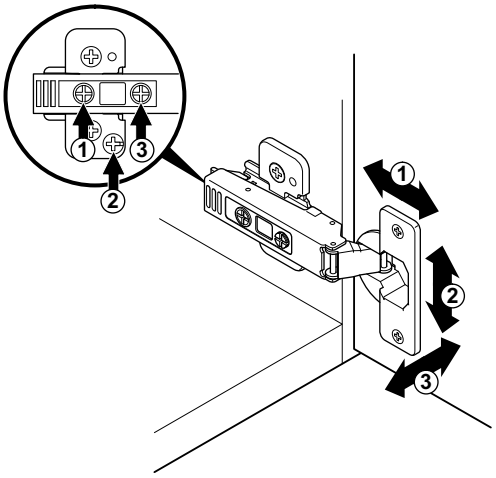

CUSTOMER SERVICE PHONE: 1-800-426-8562