
HAWORTH

Masters Renew


Assembly Instructions

Wall & Enclose Mounted Height Adjustable Table


WALL MOUNTED 2-LEG

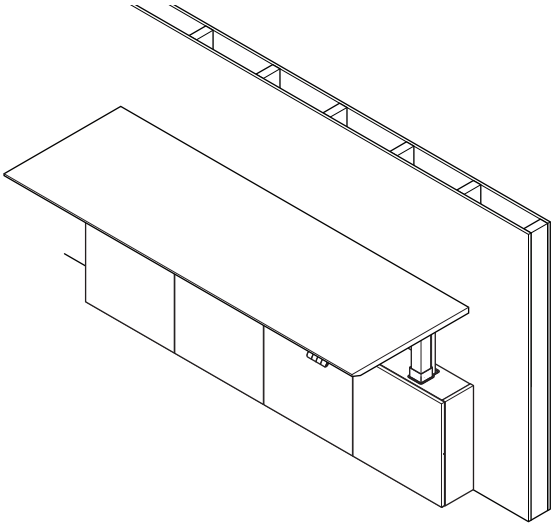


WALL MOUNTED 3-LEG

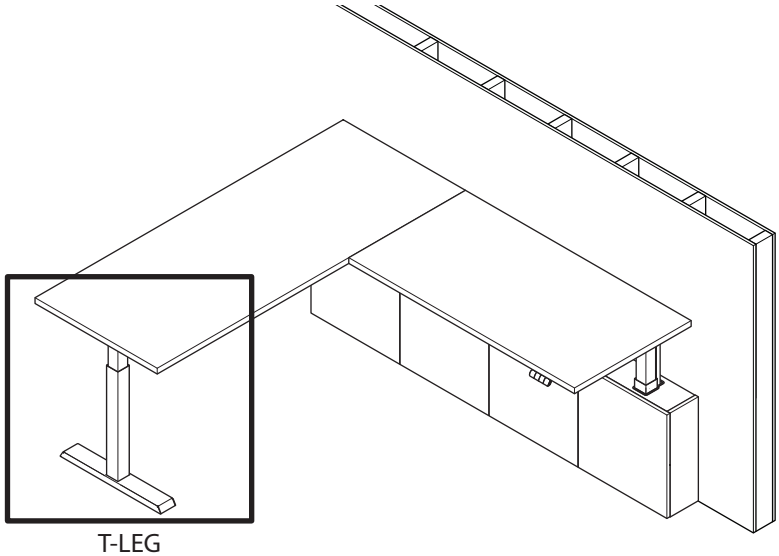

T-LEG
REFER TO THIS INSTRUCTION
61000369

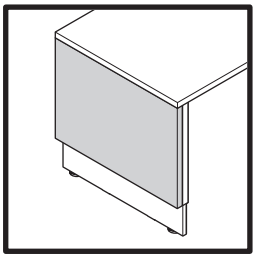

METAL SHROUD
REFER TO INSTRUCTION
61000340

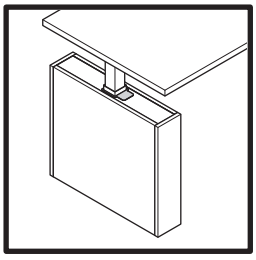

WOOD SHROUD
REFER TO INSTRUCTION
61000367

Important Safety Instructions

For use with Master Series electric height-adjustable desks
For Commercial Use only
This product conforms to UL962 and is certified to CAN/CSA C22.2 No. 68.

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using this desk.

DANGER - To Reduce the Risk of Electric Shock

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING - To Reduce the Risk of Burns, Fire, Electric Shock, or Injury

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Do not use outdoors.
7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
8. To disconnect, turn all controls to the off position, then remove plug from outlet.

WARNING - Risk of Electric Shock, Fire, and Injury.

Review the assembly instructions to confirm that the appropriate critical components and accessories are being used with the furnishing.

9. Connect this furnishing to a properly grounded outlet only. See grounding instructions.

Save These Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product
is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-

grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and has a NEMA 5-15P configured plug, illustrated in Figure 1. Make sure that the product is connected to an outlet having the same configuration as the plug. No 3 prong adapter should be used with this product.

Maximum Load rating including surface: 250 lbs

Electrical Rating

120V, 60Hz, 5.4 Amp for 2 leg desks
120V, 60Hz, 6.0 Amp for 3 leg desks

V6 Control Box



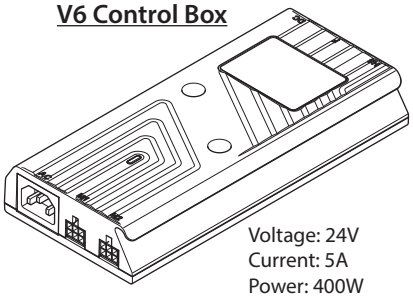


Figure 1

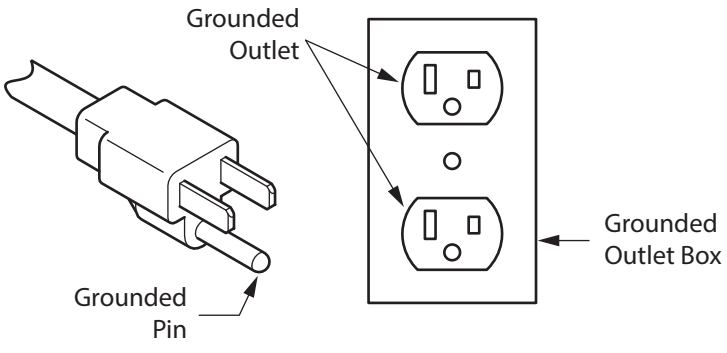


Tools Required

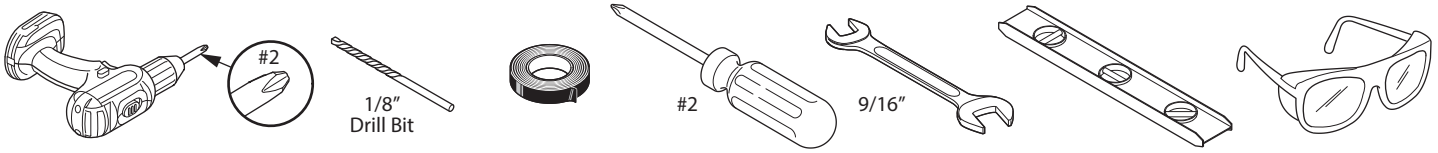


Optional: For caster installation only.


Assembly Overview

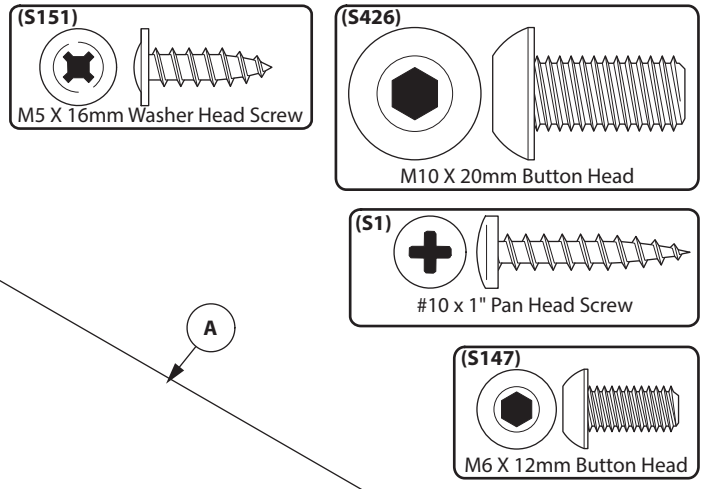

FOR ATTACHMENT TO ENCLOSE WALLS

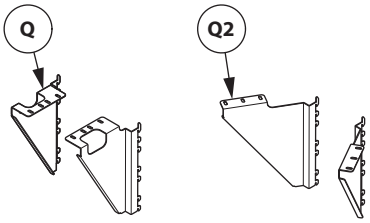


1 Install legs (B) with bezels (D & D2) as shown

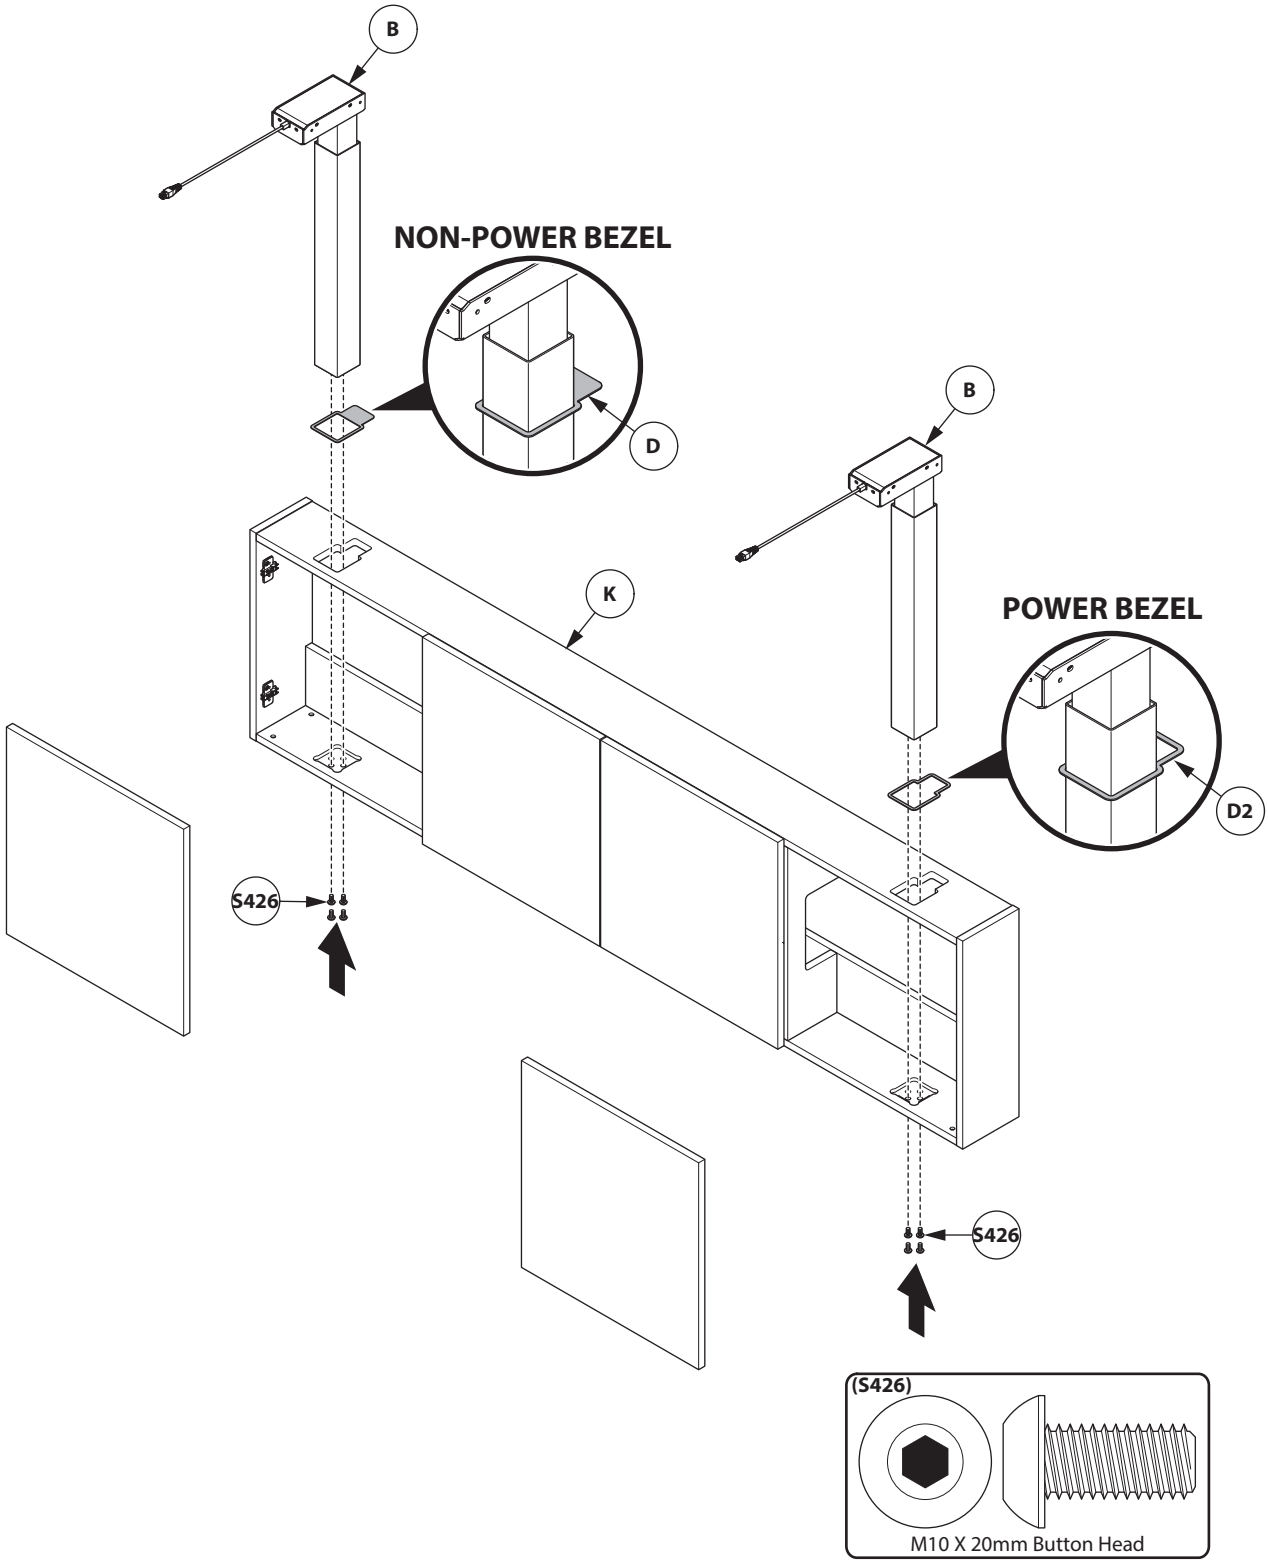


2 Install set screws (S20) and Glides (E) as shown

(S20)
#10-24 x 1/4" Set Screw

Column Collar

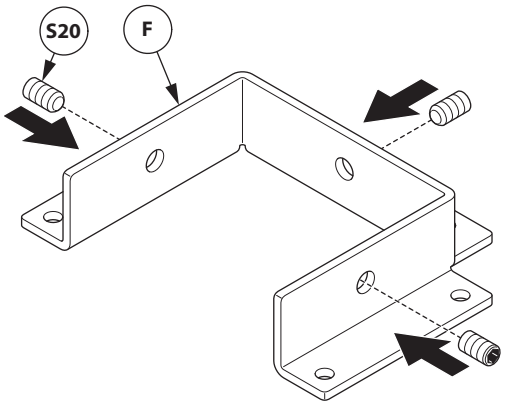


Cable Chain Collar

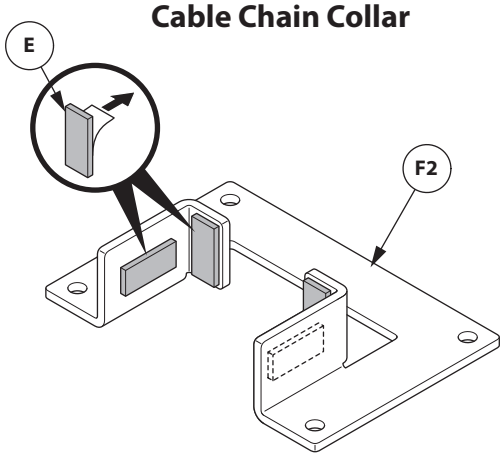


3 install two column collars (F) and one cable chain collars (F2) as shown


(S151)
M5 X 16mm Washer Head Screw

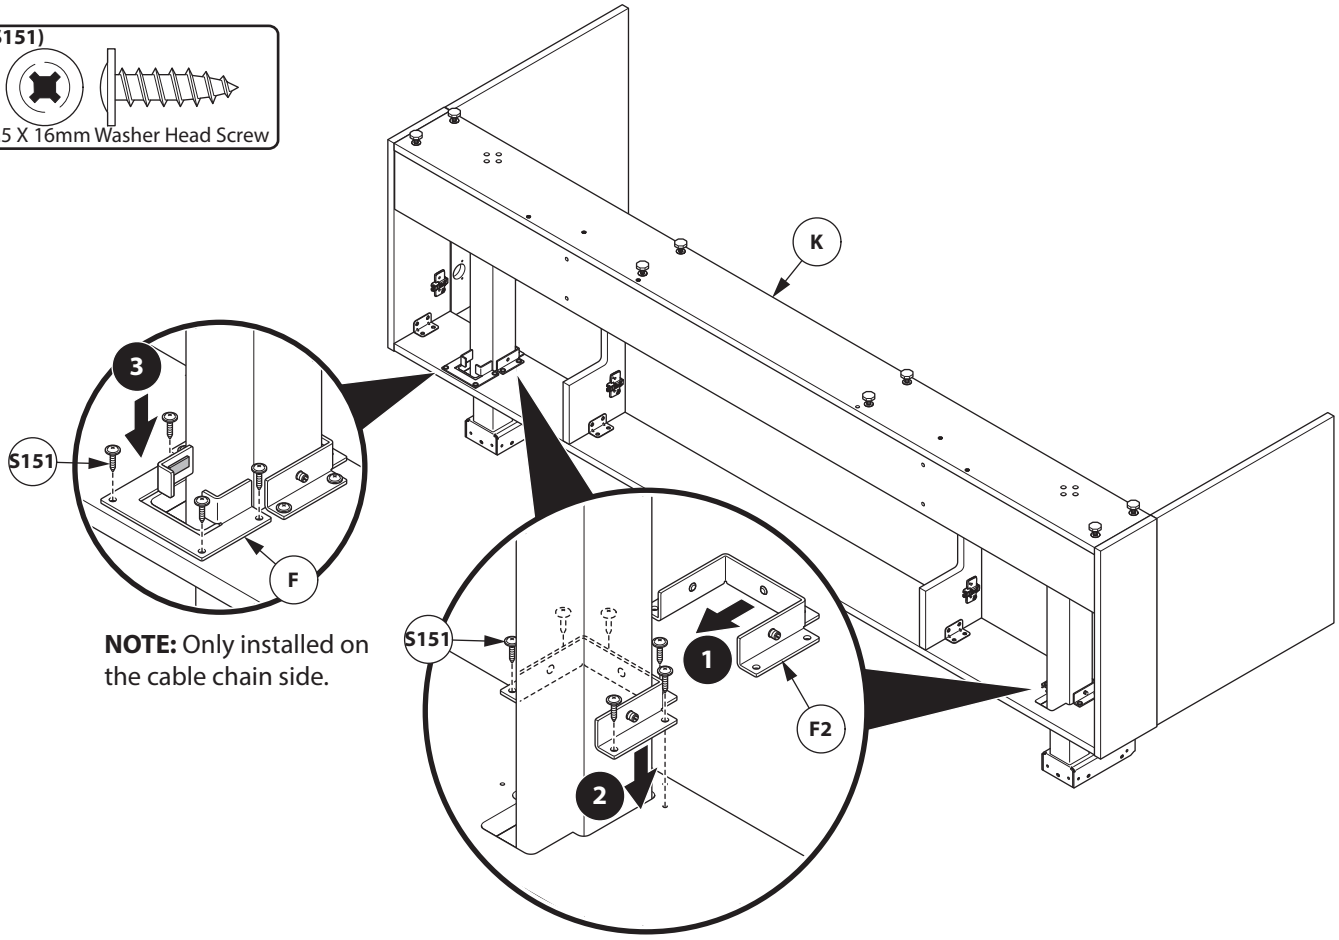


NOTE: Only installed on the cable chain side.


4 Install five brackets (P) loosely as shown

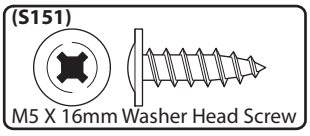


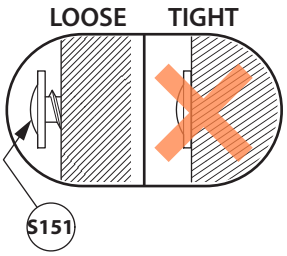

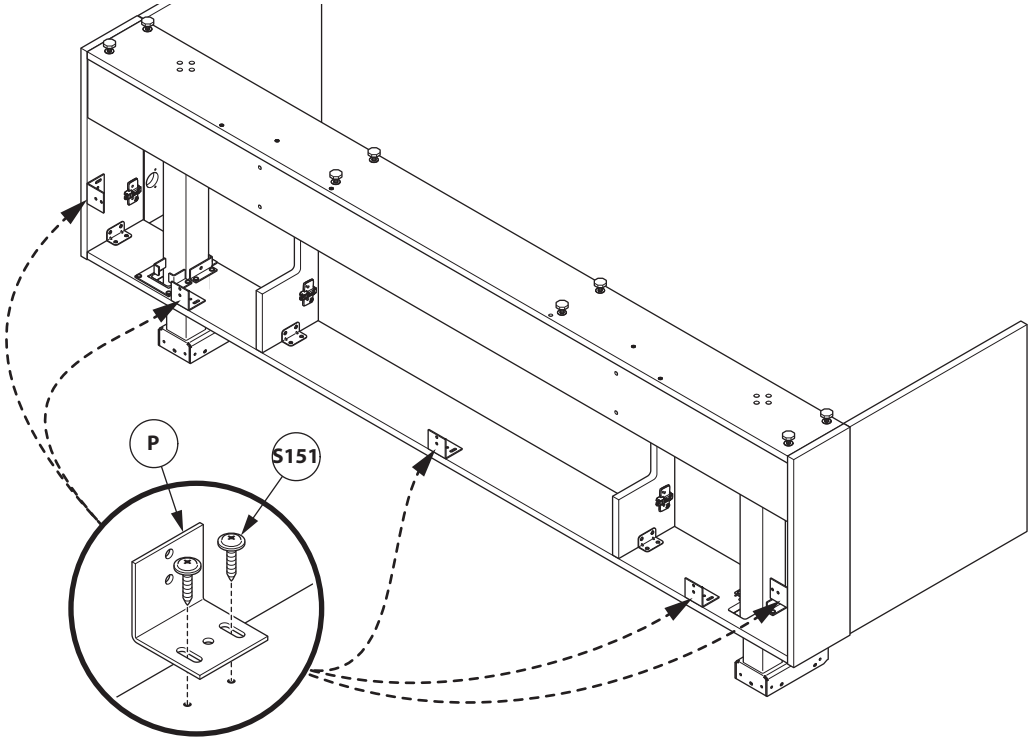


5 Install column arms (H) as shown

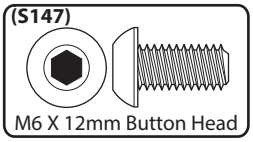

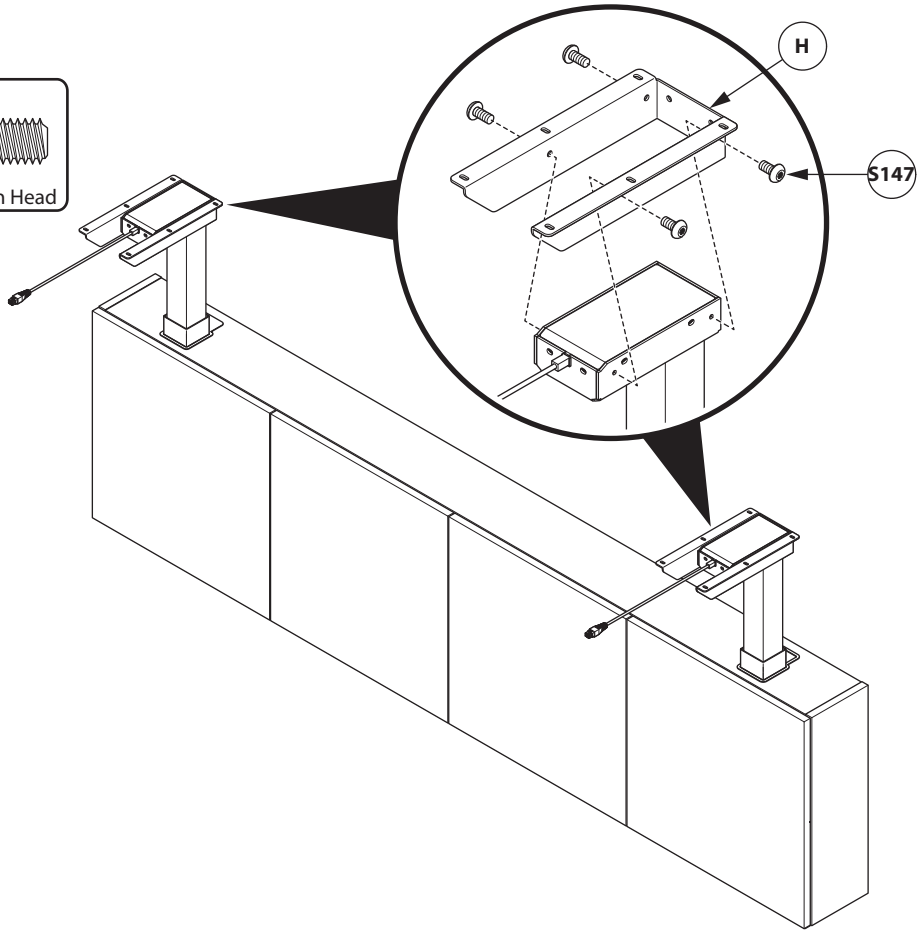

6 Insert cable chain (J) and attach as shown

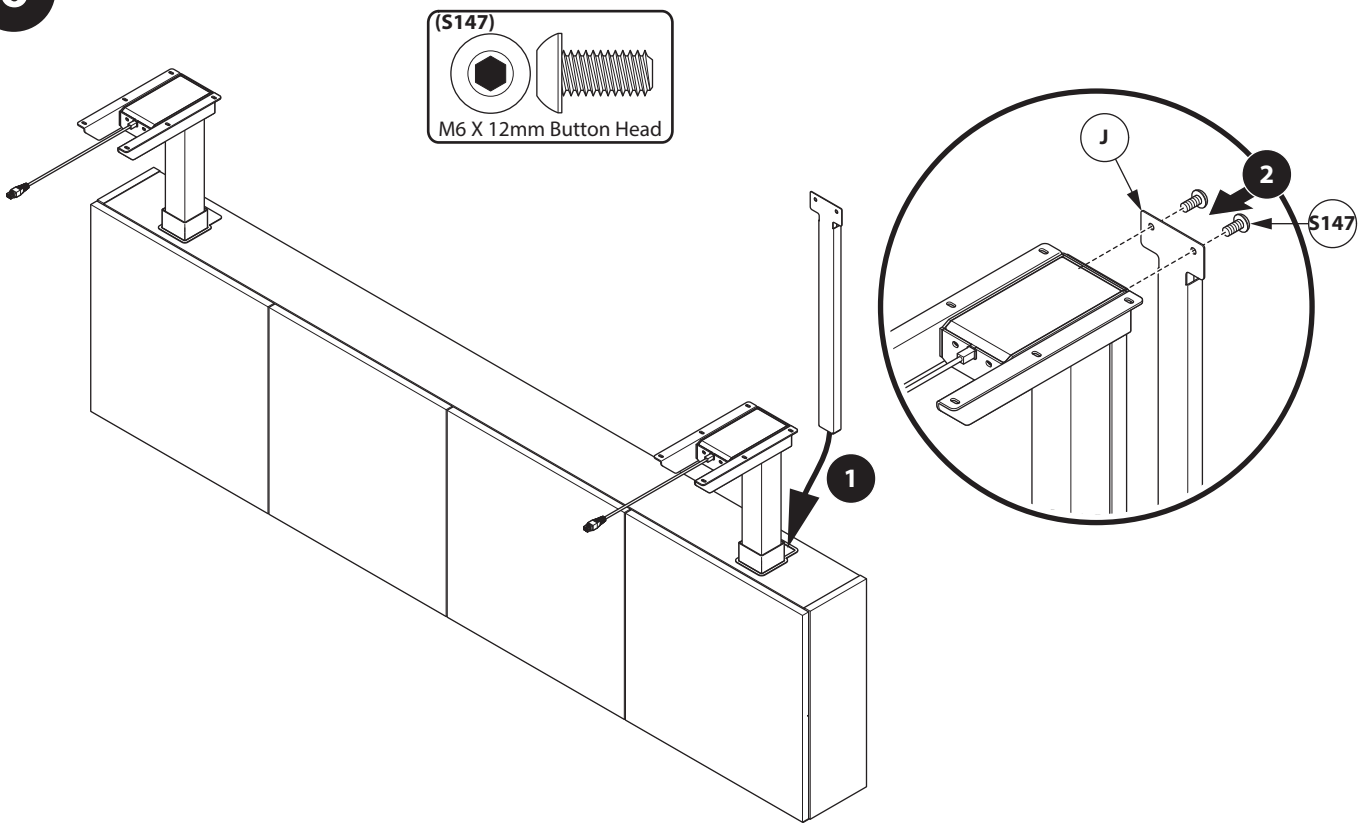


BRACKET TO WALL ATTACHMENT OPTIONS

7 Install brackets (P) to stud or 3/4" plywood as shown


IMPORTANT:
Wall attachment brackets and screws are required to be installed as shown in Steps 7 through 10 to ensure table is secure and stable.

IMPORTANTE:
Les supports de fixation murale et les vis doivent être installés comme indiqué dans les étapes 7 à 10 afin de garantir la sécurité et la stabilité de la table.

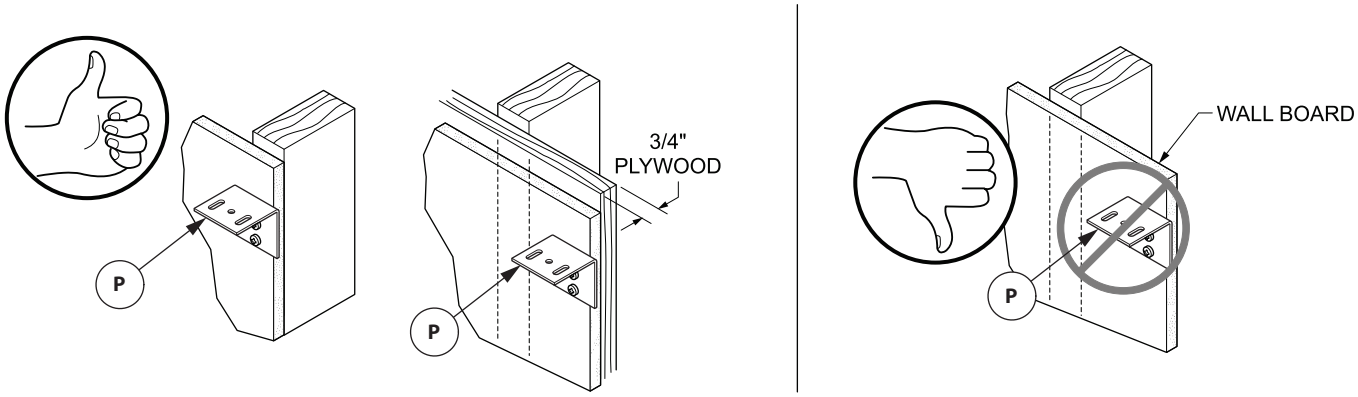

8 Level cabinet (K) and attach to wall as shown


WARNING! Appropriate screws/bolts must be used to attach wall-bracket to wall. Due to various wall constructions, fasteners are not provided. Refer to local codes for proper attachment.

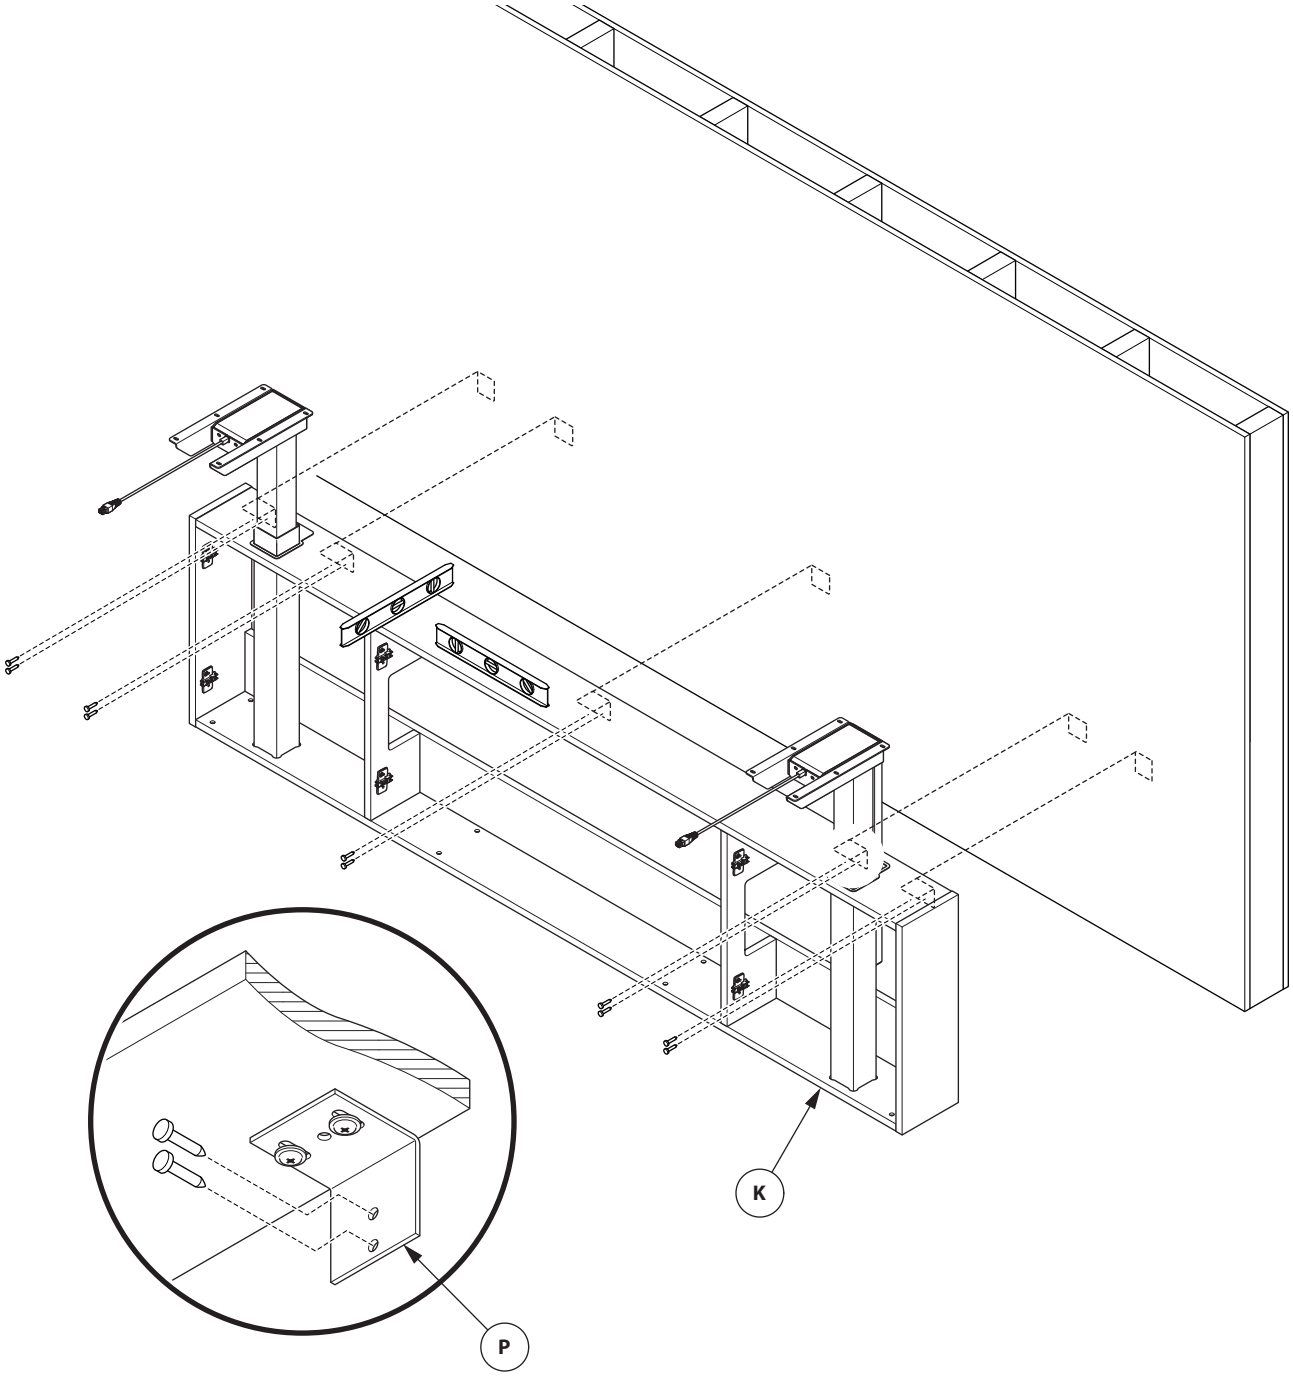


9 Follow steps below to remove gaps as shown






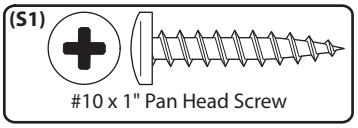


1 PUSH TO REMOVE GAPS

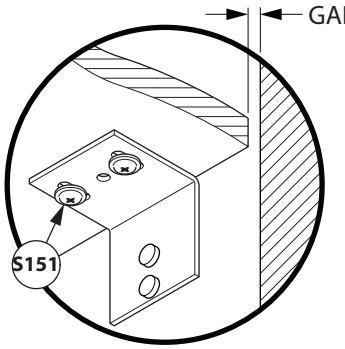


2 ONCE TOUCHING WALL TIGHTEN SCREWS (S151)

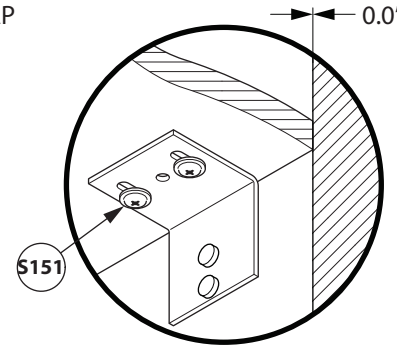

3 TIGHT

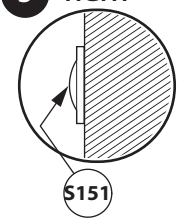


4 INSTALL CENTER SCREWS (S1)

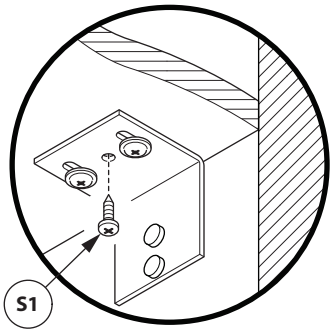


10 Install screws through bottom back panel as shown

WARNING! Appropriate screws/bolts must be used to attach wall-bracket to wall. Due to various wall constructions, fasteners are not provided. Refer to local codes for proper attachment.

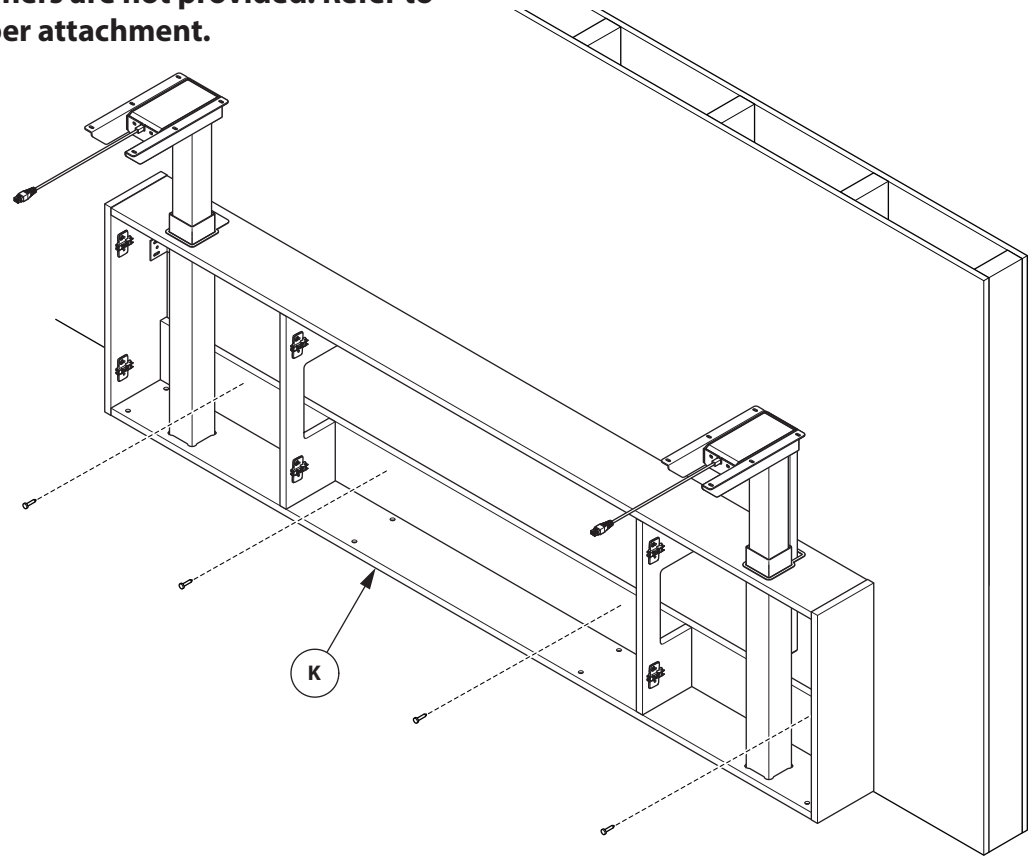


11a Install reinforcement tube (A2) to worksurface (A) as shown

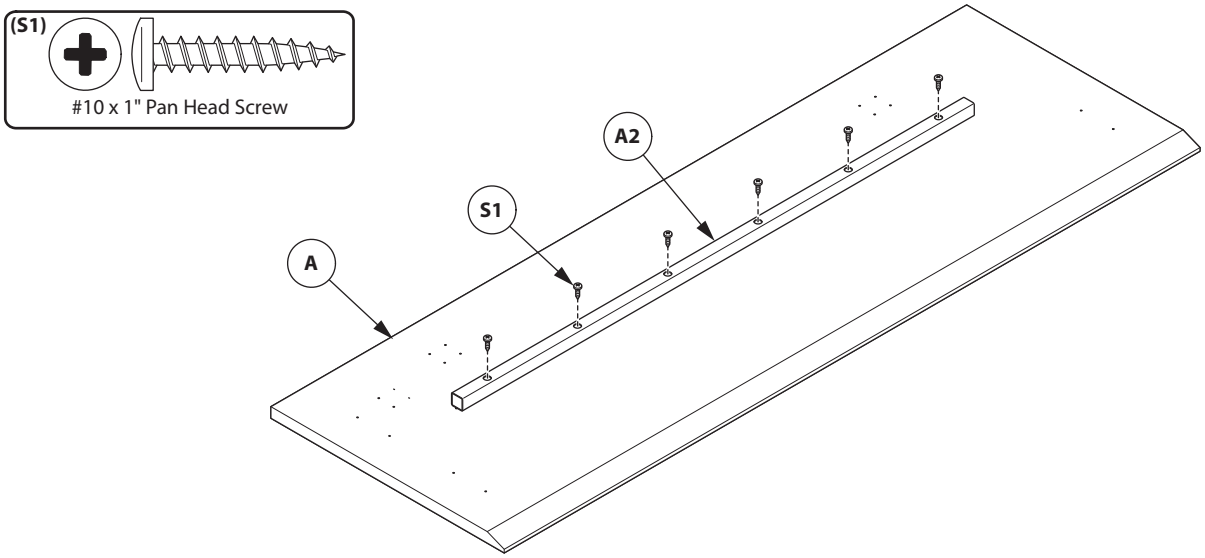


FOR 3-LEG TABLES

11b Install reinforcement tube (L2) and tie plates (K2) to worksurface (L) as shown

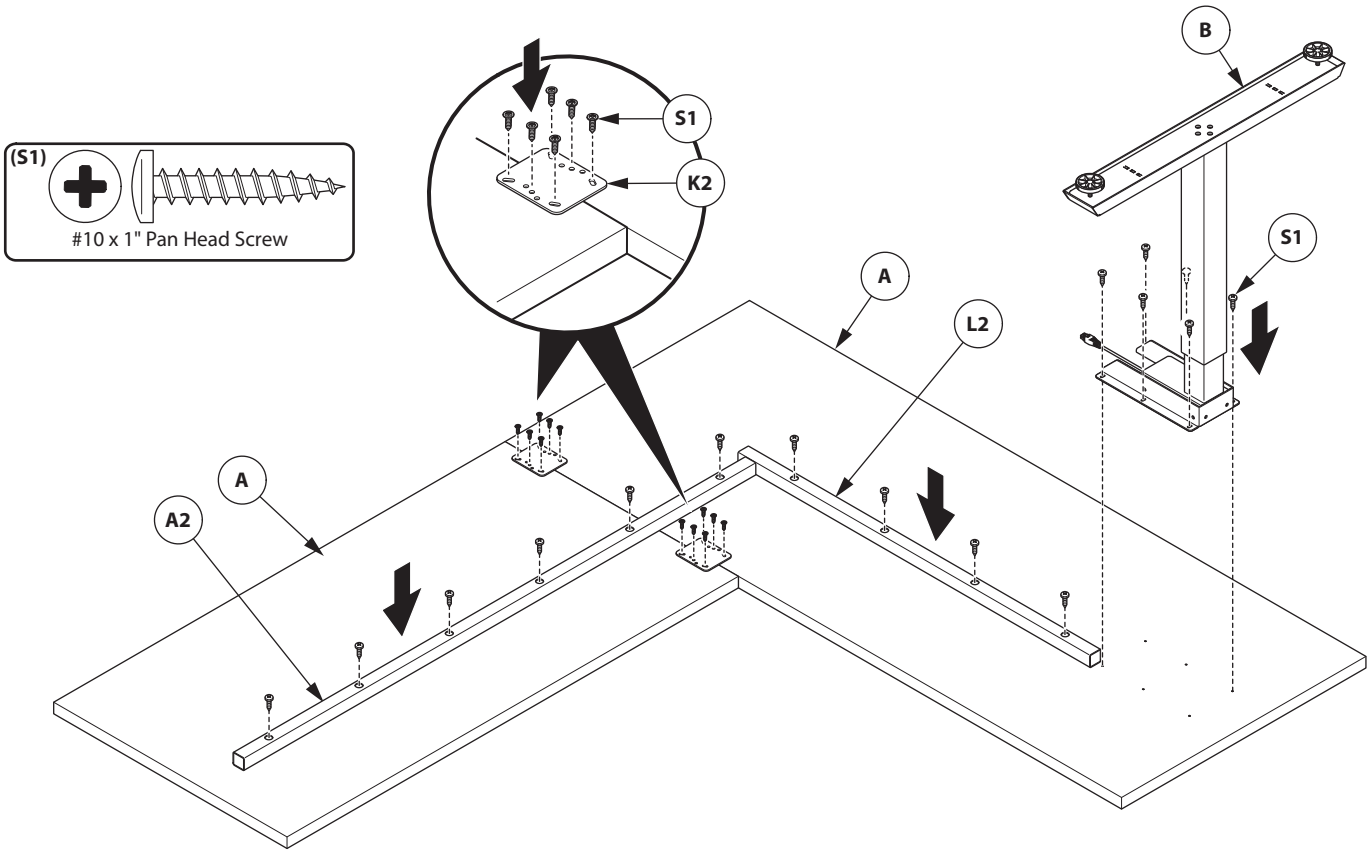


12a Install control box (M1) and paddle handset (M2) to worksurface (A) as shown

(S437)

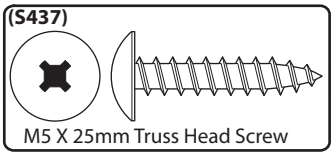


M5 X 25mm Truss Head Screw

(S436)

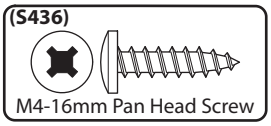


M4-16mm Pan Head Screw

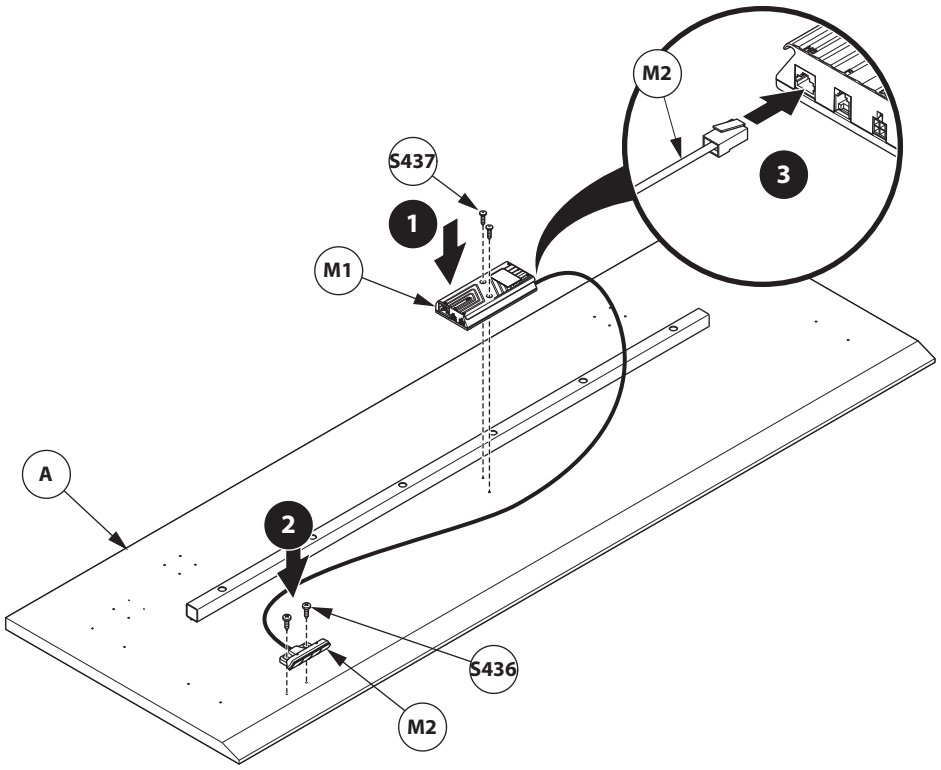

FOR 3-LEG TABLES


12b

(S1)

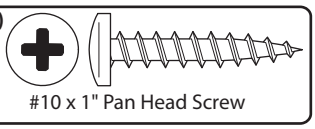


#10 x 1" Pan Head Screw

13a Install worksurface (A) and plug in power cord (G) as shown

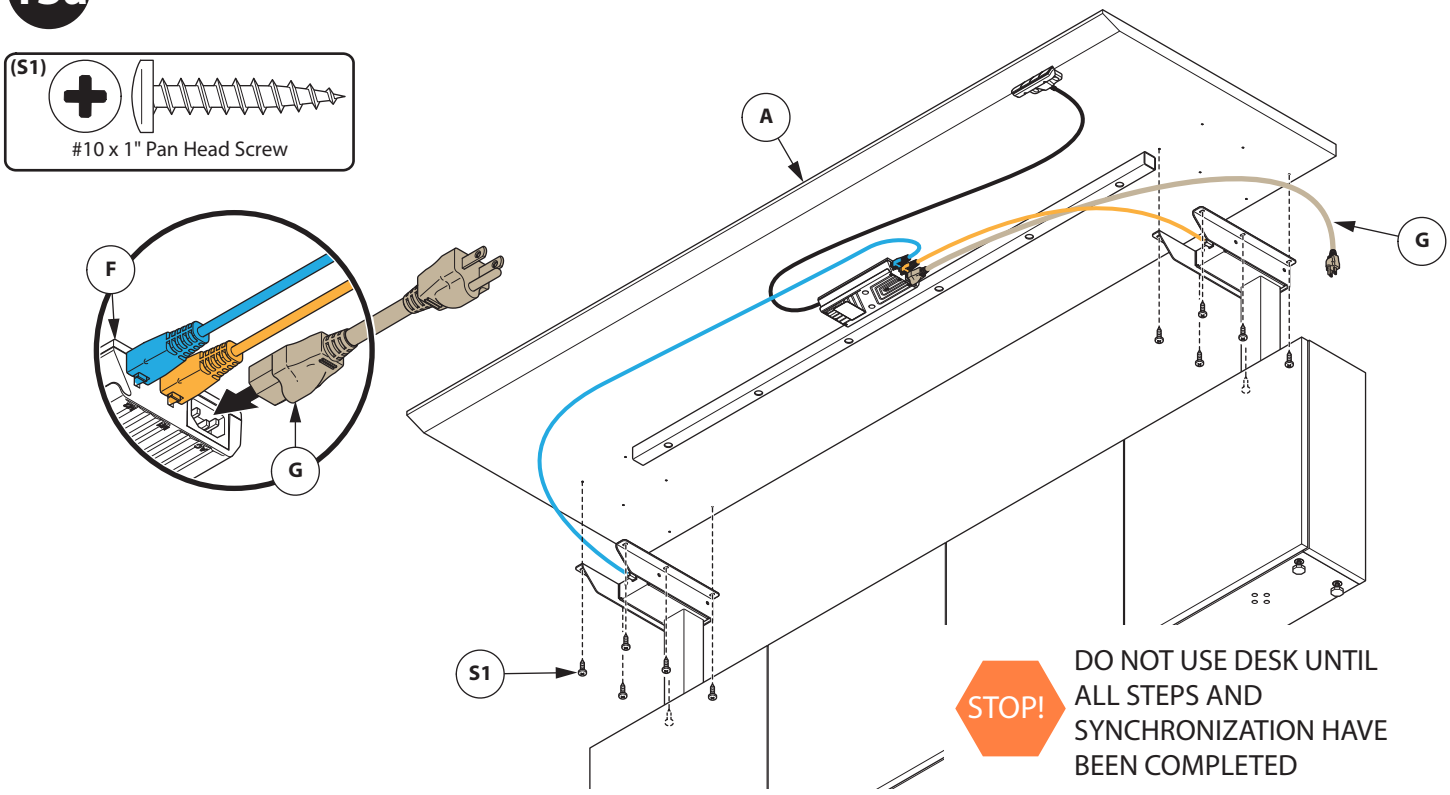


FOR 3-LEG TABLES

13b

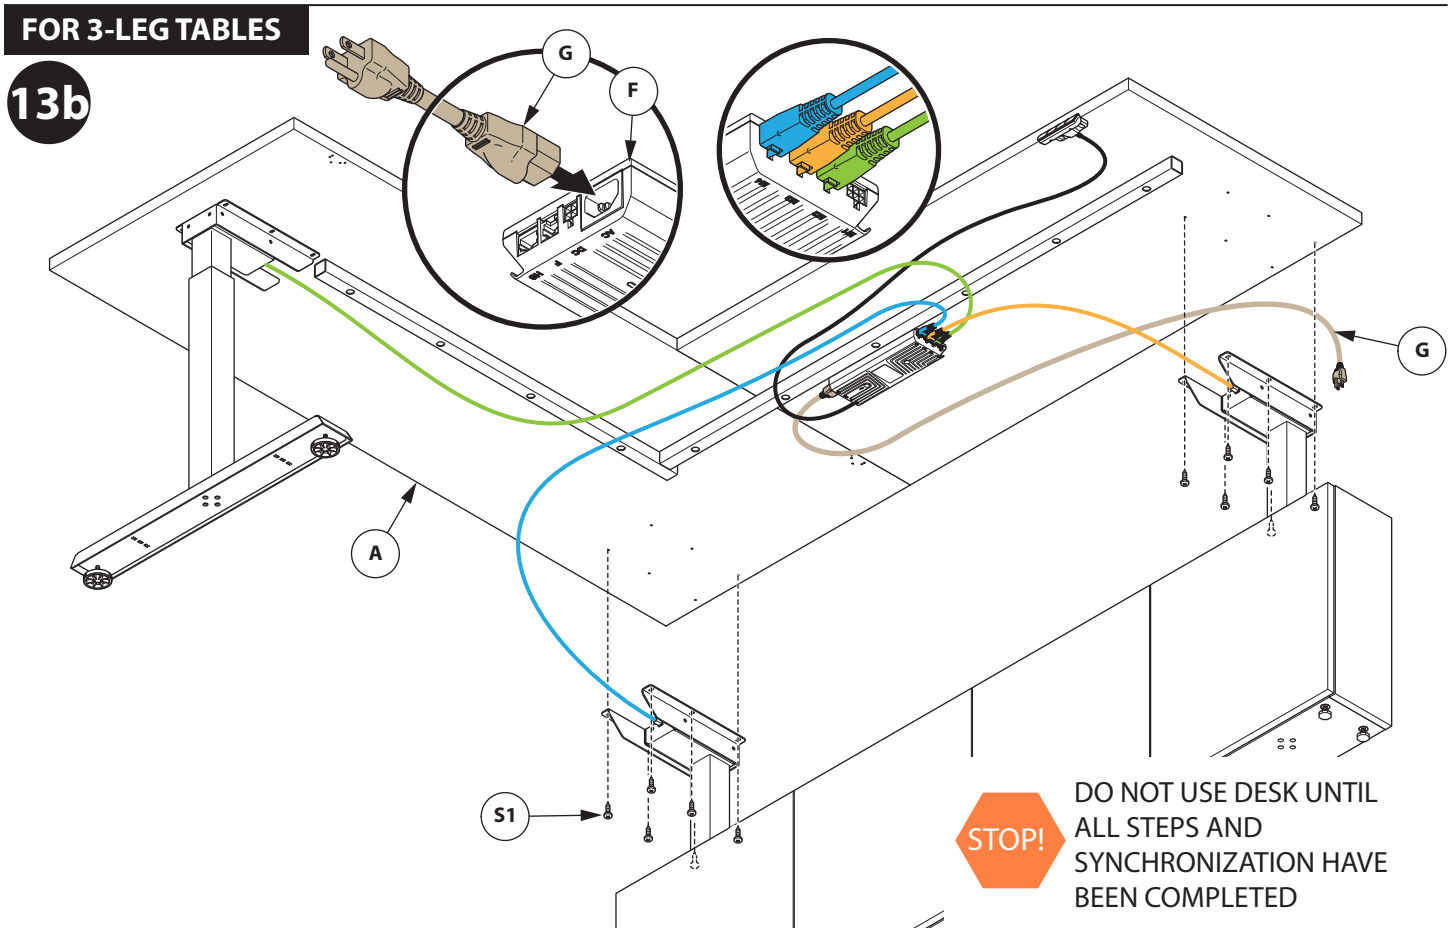



14 Route power cord (G) as shown

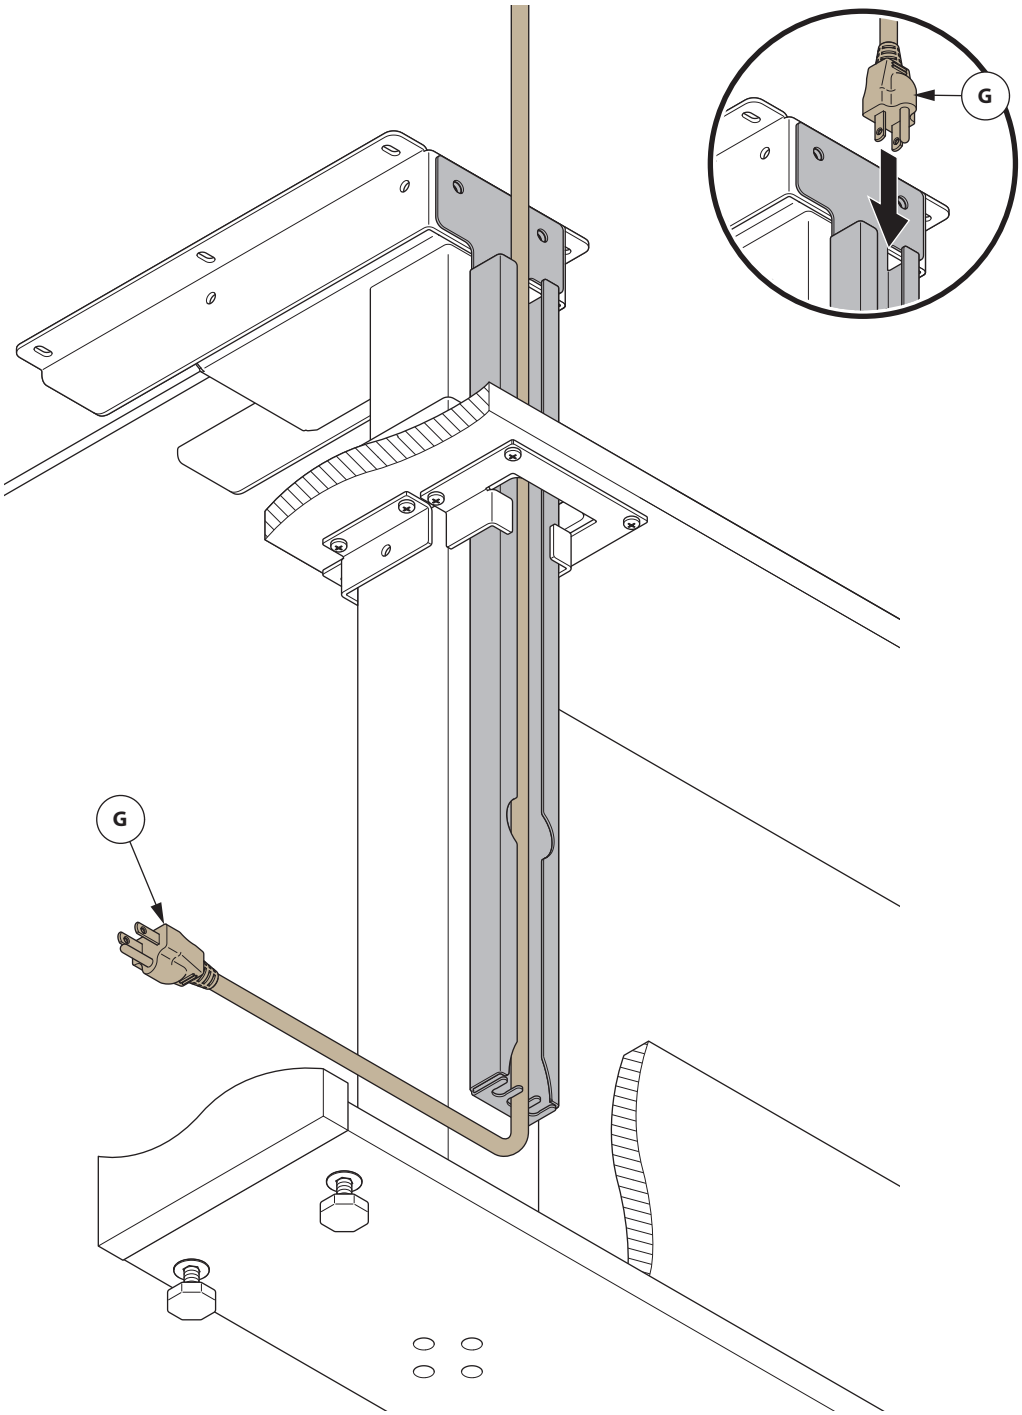

FOR ATTACHMENT TO ENCLOSE WALLS


1 **Locate and install brackets (Q) as shown**

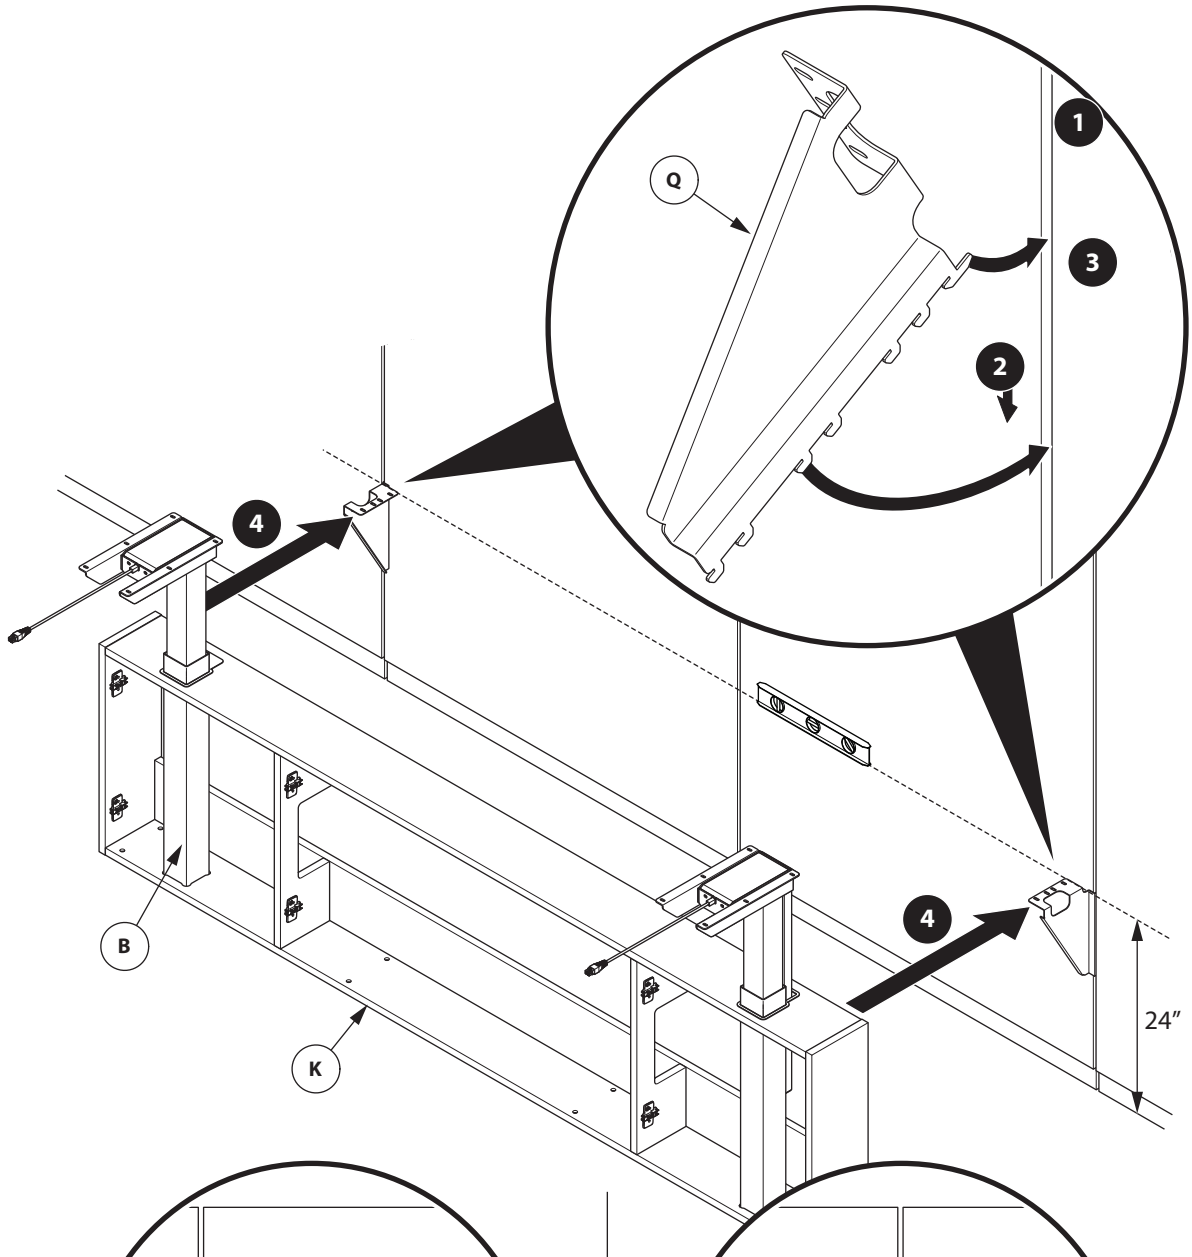

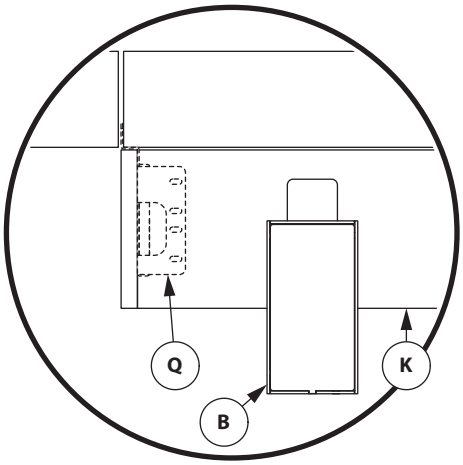


TOP VIEW - STRAGHT BRACKET

OR

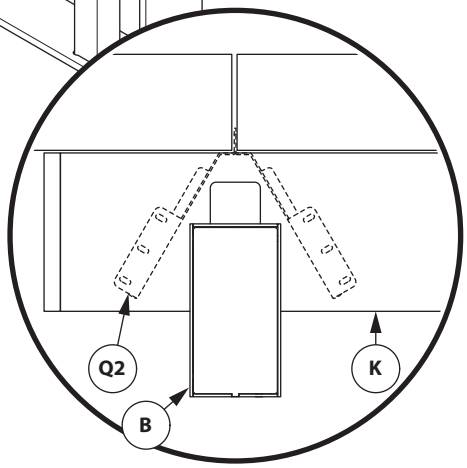


TOP VIEW - ANGLE BRACKET
(USED FOR OBSTACLES)

2 Level and secure unit (K) to brackets (Q) or (Q2) as shown

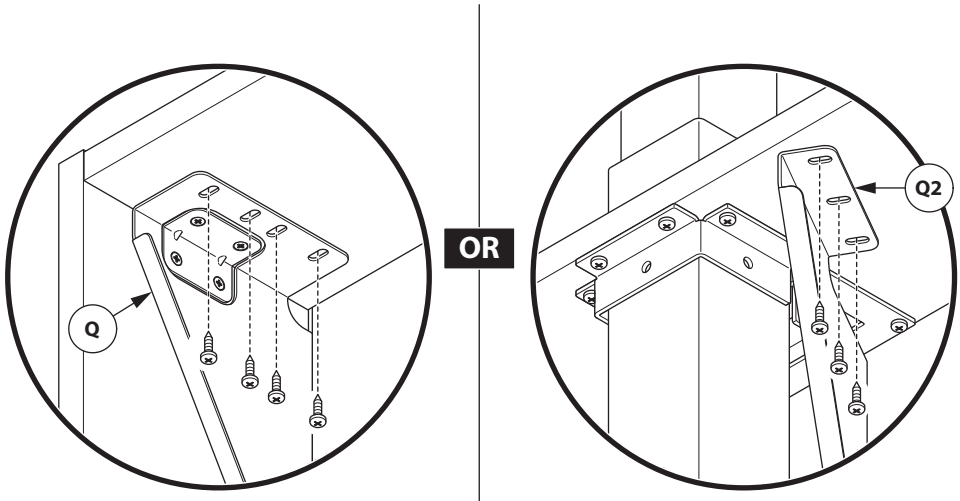

STRAGHT BRACKET


ANGLE BRACKET
(USED FOR OBSTACLES)

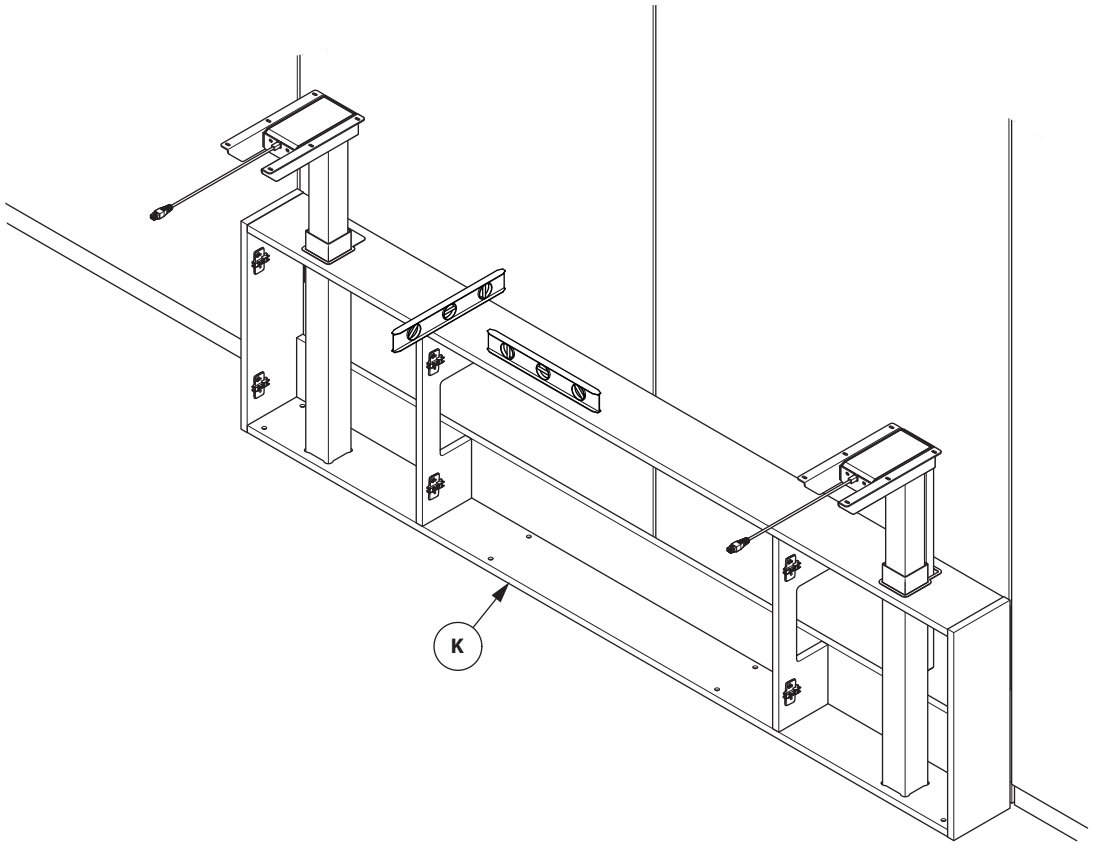

SYNCHRONIZE DESK

30 Lower desk all the way down using handset (C)


NOTE: Desk must be synchronized prior to first use, monthly to maintain synchronization, every time power is interrupted, and any time a cable, plug or handset is plugged into the control box.

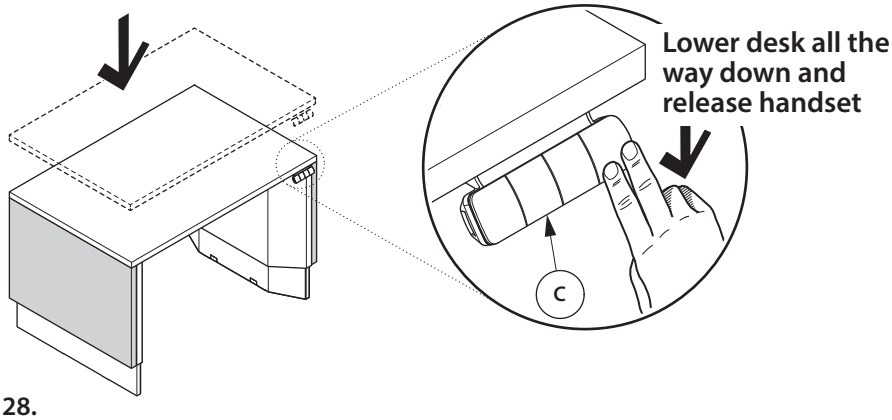

- **If table is already at lowest position skip to step 28.**
- **If table will not go up or down, skip to step 28 then in step 28; hold down paddle until desk reaches its lowest point and moves up slightly.**
- **If table will go down but not up, step 27 is already complete, skip to step 28.**

---

31 Press handset (C) again and hold until it slightly moves up

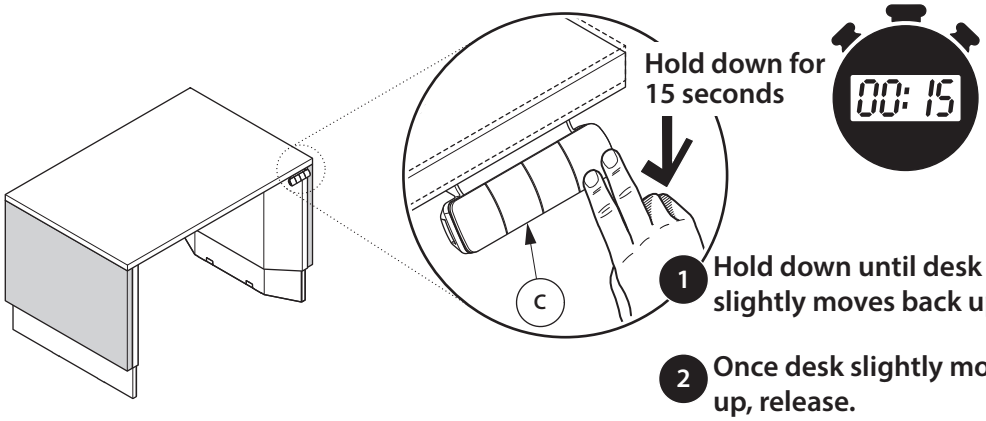

NOTE: Desk must be synchronized prior to first use, monthly to maintain synchronization, every time power is interrupted, and any time a cable, plug or handset is plugged into the control box.

1. **Hold down until desk slightly moves back up.**
2. **Once desk slightly moves up, release.**
3. **Your desk has synchronized and is ready to be used.**

- **If the process has been completed and the desk did not move up slightly, wait 30 minutes and try again, holding the handset for 20 seconds instead of 15.**
- **If it still does not synchronize, unplug desk for 30 minutes, then plug it back in and go through steps 27-29 again.**

SYNCHRONIZATION INTERVALS

32

Be sure to synchronize your desk as noted below to keep it calibrated and functioning properly.

1) Before first use

2) After any cables/cords are disconnected/reconnected or after servicing any component (swapping out handsets, disconnecting/reconnecting the cables/cords, etc.)

3) After any interruption in power or loss of power (or any time the power cord is unplugged from the outlet and plugged back in)

4) Monthly to maintain optimum desk performance